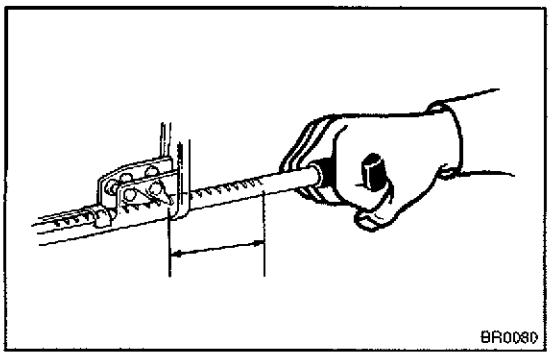


PARKING BRAKE LEVER


BR0EK-01

ON–VEHICLE INSPECTION

1. CHECK PARKING BRAKE LEVEL TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

Parking brake lever travel at 196 N (20 kgf, 44.1 lbf): 11 – 17 clicks

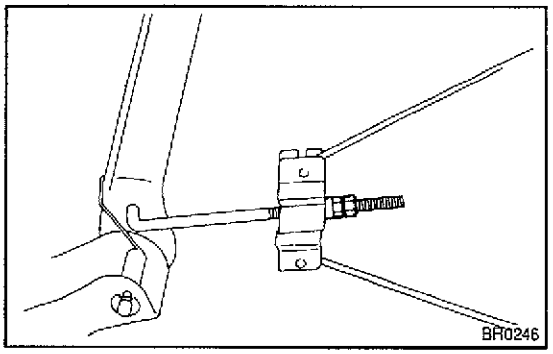


2. 2WD: IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted.

(a) Tighten the adjusting nut until the travel is correct. Then tighten the lock nut.

(b) After adjusting the parking brake, check that the rear brakes are not dragging.

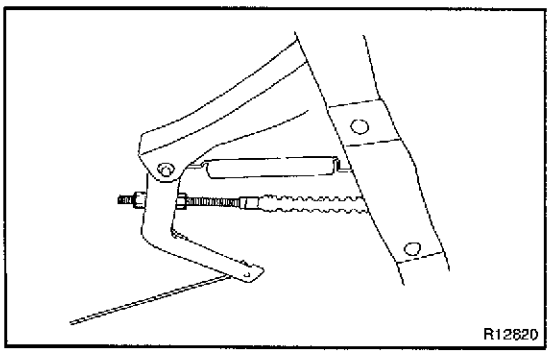

3. 4WD and Prerunner: IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted.

(a) Tighten 1 of the adjusting nuts of the intermediate lever while loosening the other one until the travel is correct. Tighten the 2 adjusting nuts.

(b) After adjusting the parking brake, check that the bellcrank stopper screw comes into contact with the backing plate.