FRONT SPEED SENSOR


COMPONENTS

BR0G1-01

HINT:

Prerunner is the model described below.

RZN193L–PRMDK, LN191L–PRMDS

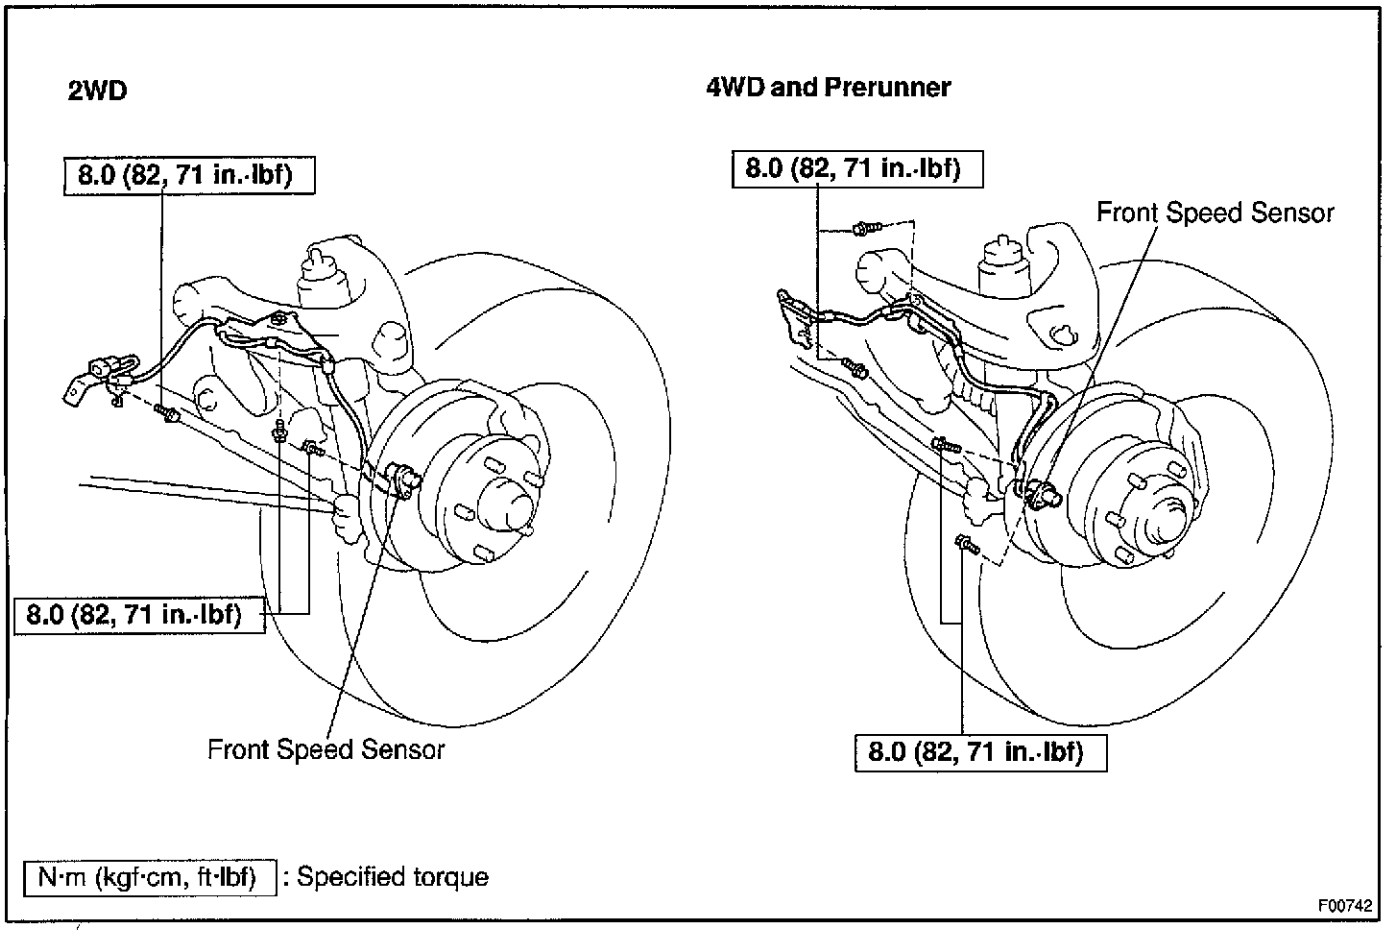

BR0G2-01

REMOVAL

1. **DISCONNECT SPEED SENSOR CONNECTOR**
2. **REMOVE SPEED SENSOR**

(a) 2WD:

Remove the 2 clamp bolts holding the sensor harness from the frame and upper arm.


Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(b) 4WD:


Remove the 3 clamp bolts holding the sensor harness from the frame, upper arm and steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

2WD

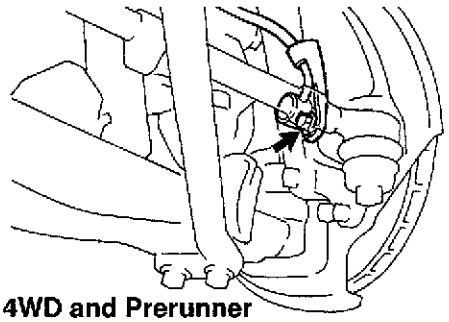

4WD and Prerunner

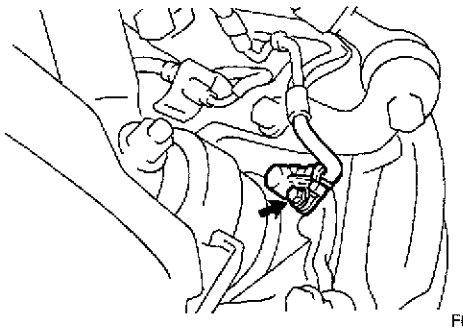

F00719

(c) Remove the bolt and speed sensor from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

NOTICE:

At the time of installation, please refer to the following items.

- **There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.**
- **The sensor is installed flat against the knuckle when you tighten the bolts.**

BR0G3–01

INSTALLATION

Installation is in the reverse order of removal (See page BR–79).
AFTER INSTALLATION, CHECK SPEED SENSOR SIGNAL (See page DI–52)