

CLUTCH ACCUMULATOR (2L–T LHD)

COMPONENTS

CL015-01

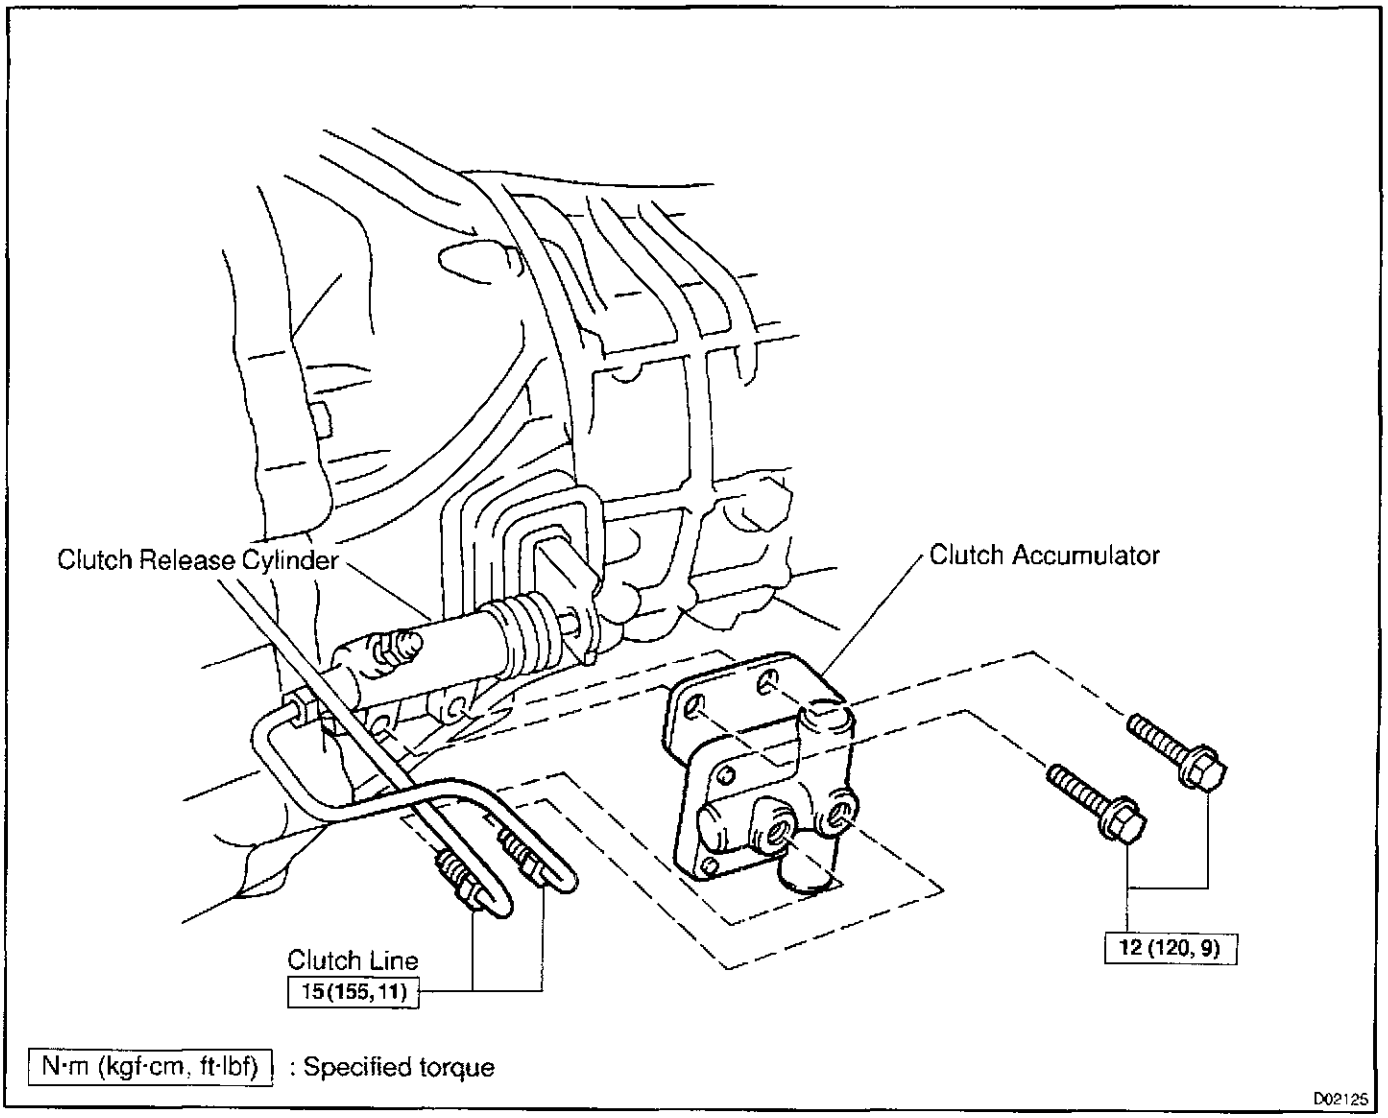

CL03T–01

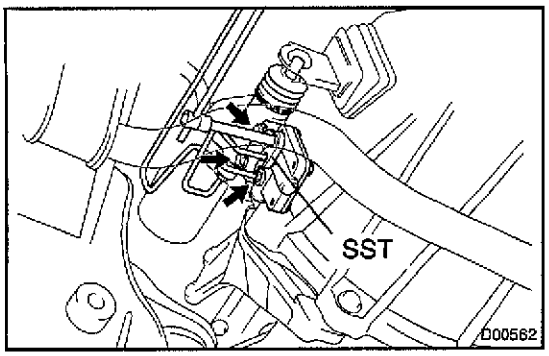

REMOVAL

REMOVE CLUTCH ACCUMULATOR WITH BRACKET

(a) Using SST, disconnect the 2 clutch lines from the accumulator.

SST 09023–00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

(b) Remove the 2 bolts, accumulator and release cylinder.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

CL03U–01

INSTALLATION

Installation is in the reverse order of removal. (See page CL–16)

HINT:

After installation, bleed the clutch system.