
DI1HE-01

TERMINALS OF ECU

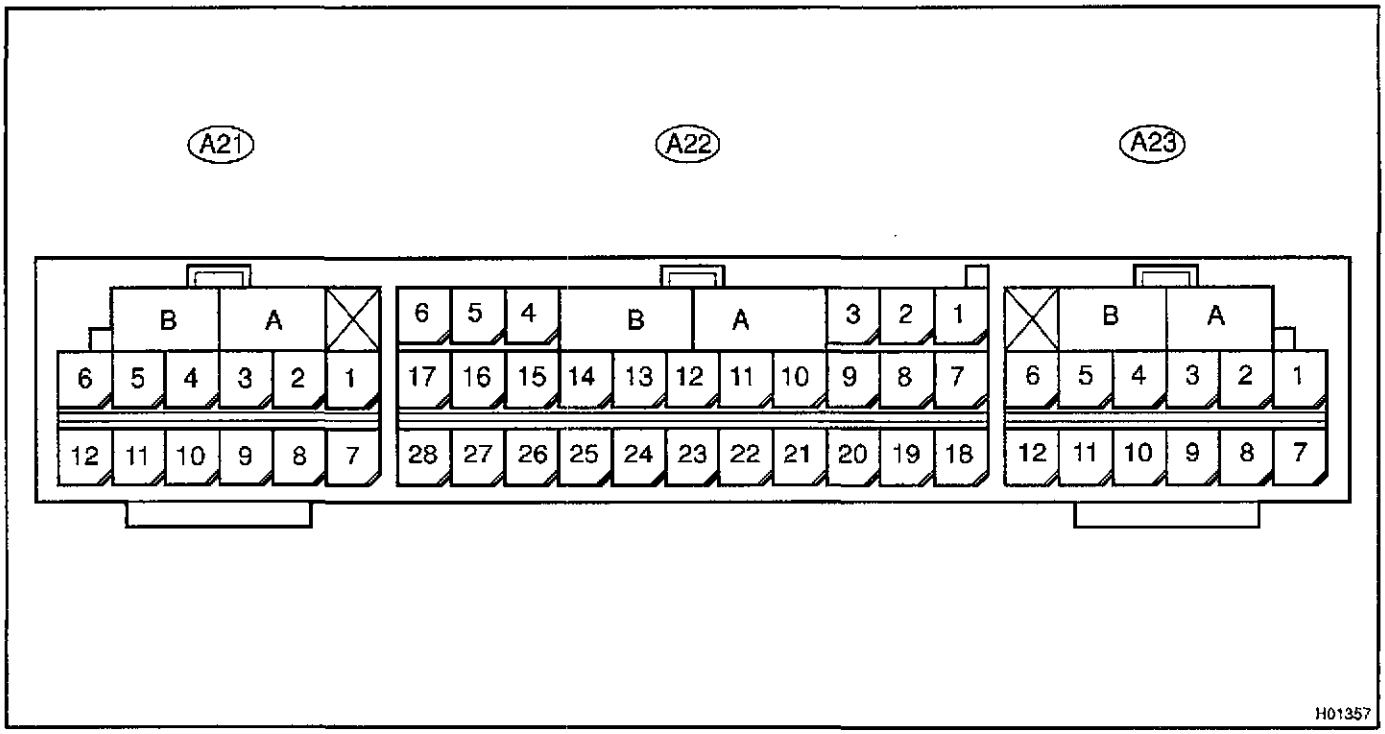

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
A22 – 3	LA	SRS Warning Light
A22 – 5	IG2	Power Source (IGN Fuse)
A22 – 6	ACC	Power Source (CIG Fuse)
A22 – 10	P+	Squib (Passenger)
A22 – 11	P–	Squib (Passenger)
A22 – 12	SIL	Diagnosis (2RZ–FE, 3RZ–FE)
A22 – 14	D+	Squib (Driver)
A22 – 13	D–	Squib (Driver)
A22 – 19	Tc	Diagnosis
A22 – 27	E1	Ground
A22 – 28	E2	Ground
A21 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
A21 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
A23 – 5	PR+	Squib (Seat Belt Pretensioner, RH)
A23 – 6	PR–	Squib (Seat Belt Pretensioner, RH)