
IN02U-01

VEHICLE LIFT AND SUPPORT LOCATIONS


2WD

Front

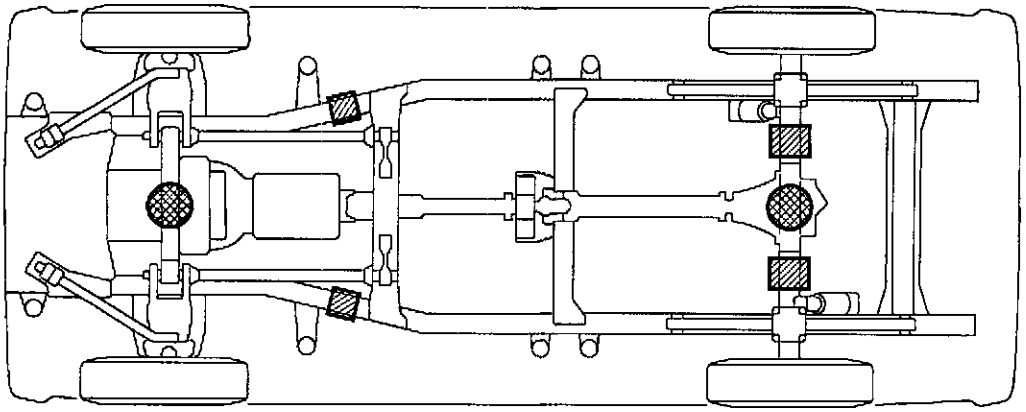

4WD

Front

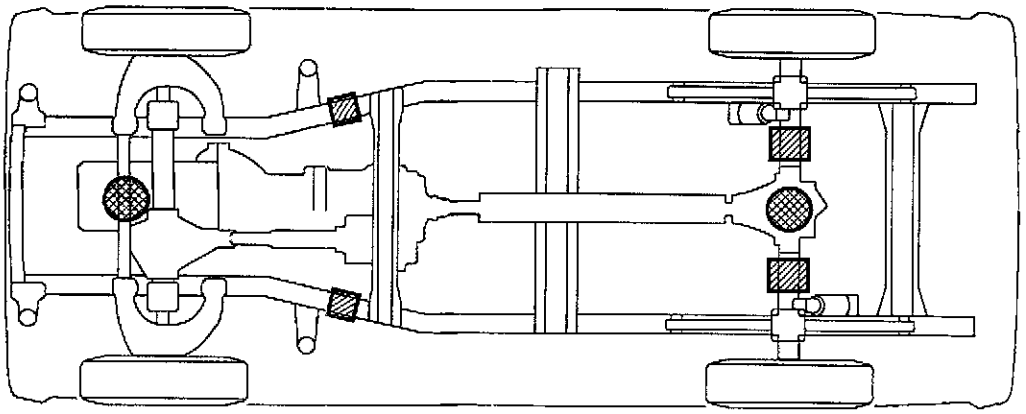

JACK POSITION .....

Front ..... Center of crossmember

Rear ..... Center of rear axle housing

SUPPORT POSITION

Safety stand .....

B02108