
FRONT BEARING RETAINER OIL SEAL


COMPONENTS

M1061H-01

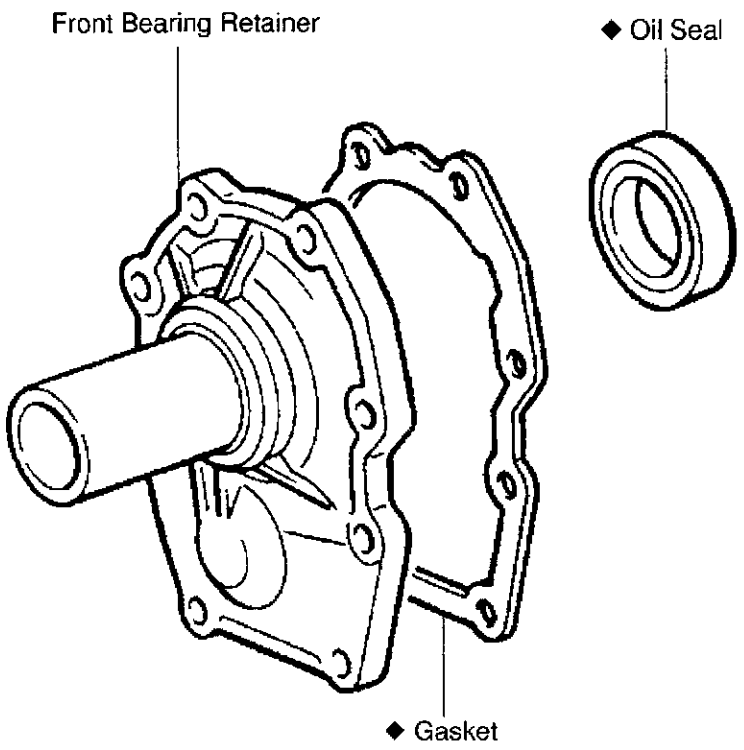

◆ Non–reusable part

GM0329

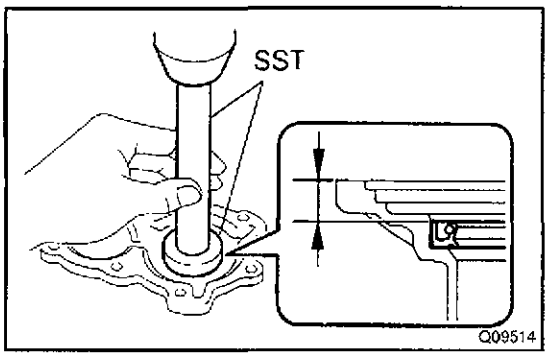

MT081-01

REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, remove the oil seal.

(b) Using SST and a press, install a new oil seal.

SST 09950–60010 (09951–00440), 09950–70010 (09951–07150)

Drive in depth:

12.7 ± 0.5 mm (0.500 ± 0.020 in.) from retainer end