

FRONT BEARING RETAINER OIL SEAL

COMPONENTS

MT011–03

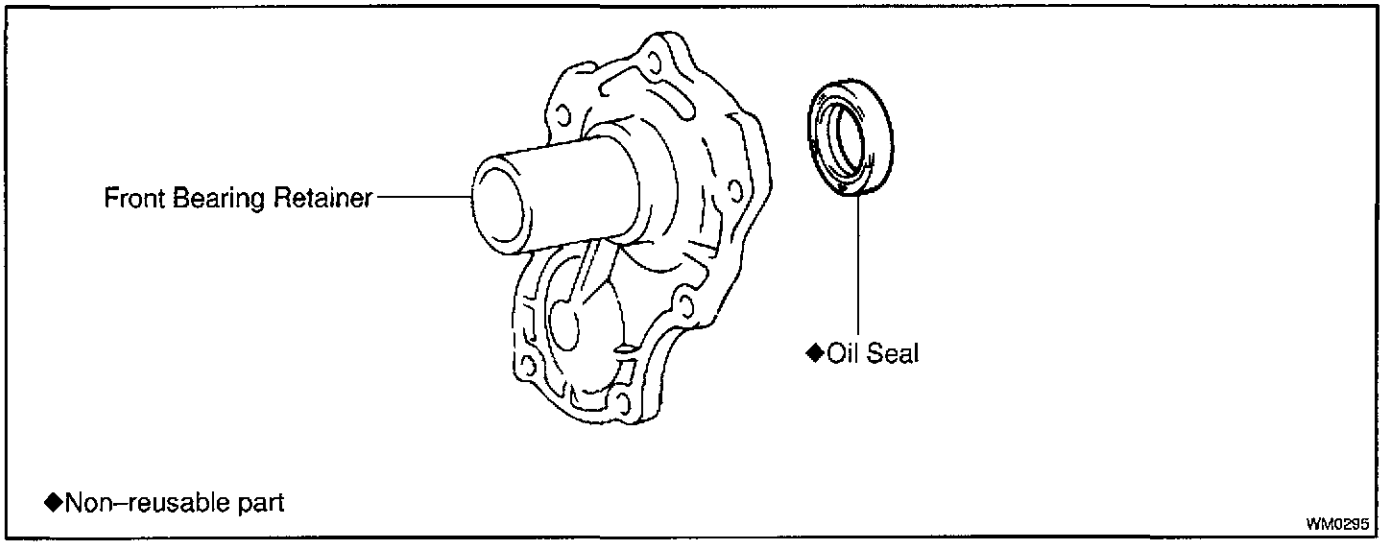

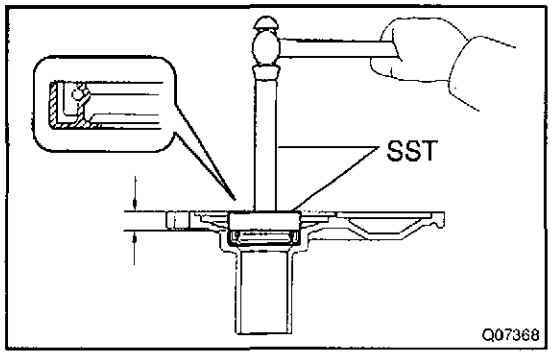

REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

(b) Using SST and a press, install a new oil seal.

SST 09950–60010 (09951–00440), 09950–70010 (09951–07150)

Drive in depth:

12.2 ± 0.5 mm (0.480 ± 0.020 in.)