




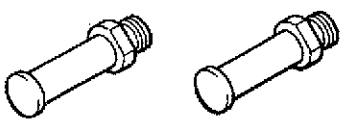


AUTOMATIC TRANSMISSION (A340E)

PP0MA-01


SST (Special Service Tools)

	09032–00100	Oil Pan Seal Cutter	
	09201–10000	Valve Guide Bushing Remover & Replacer Set	Speedometer driven gear oil seal
	(09201–01080)	Valve Guide Bushing Remover & Replacer 8	
	09308–10010	Oil Seal Puller	
	09325–40010	Transmission Oil Plug	
	09350–30020	TOYOTA Automatic Transmission Tool Set	
	(09351–32010)	One–way Clutch Test Tool	
	(09351–32020)	Stator Stopper	
	09921–00010	Spring Tension Tool	Speedometer driven gear oil seal
	09960–10010	Variable Pin Wrench Set	
	(09962–01000)	Variable Pin Wrench Arm Assy	
	(09963–01000)	Pin 10	

	09992–00095	Automatic Transmission Oil Pressure Gauge Set	
	(09992–00231)	Adaptor C	
	(09992–00271)	Gauge Assy	

PP0MB-01

RECOMMENDED TOOLS

	09082–00040 TOYOTA Electrical Tester.	
	09905–00012 Snap Ring No.1 Expander .	

PP09F–02

EQUIPMENT

Hand–held tester	
Torque wrench	
Dial indicator with magnetic base	Check drive plate runout
Vernier calipers	Check torque converter installation
Straignt edge	Check torque converter installation

PP09G–02

LUBRICANT

Item	Capacity	Classification
Automatic transmission fluid		
Dry fill	7.2 liters (7.6 US qts, 6.3 Imp.qts)	ATF D–II or DEXRON®III (DEXRON®II)
Drain and refill	1.6 liters (1.7 US qts, 1.4 Imp.qts)	

PP09H–02

SSM (Service Special Materials)

08826–00090	Seal Packing 1281, THREE BOND 1281 or equivalent (FIPG)	Oil pan
08833–00080	Adhesive 1344 THREE BOND 1344 LOCTITE 242 or equivalent	Extension housing