

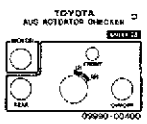
BRAKE


SST (Special Service Tools)

PP0LS-01

	09023–00100	Union Nut Wrench 10 mm	
	09703–30010	Brake Shoe Return Spring Tool	
	09709–29018	LSPV Gauge Set	
	09718–00010	Shoe Hold Down Spring Driver	
	09737–00010	Brake Booster Push Rod Gauge	
	09843–18020	Diagnosis Check Wire	
	09990–00150	ABS Actuator Checker and Sub–harness	
	09990–00200	ABS Actuator Checker Sub–harness "C"	
	09990–00300	ABS Actuator Checker Sub–harness "I"	
	09990–00400	ABS Actuator Checker Sheet "M"	

PP0LT-01

RECOMMENDED TOOLS

	09082–00040 TOYOTA Electrical Tester.	
	09905–00013 Snap Ring Pliers .	

PP0LU-01

EQUIPMENT

Torque wrench	
Micrometer	Brake disc
Dial indicator	Brake disc
Vernier calipers	Brake drum

PP0LV–01

LUBRICANT

Item	Capacity	Classification
Brake fluid	–	SAE J1703 or FMVSS No.116 DOT 3