
WIRE HARNESS AND CONNECTOR

RS05C-01

LOCATION

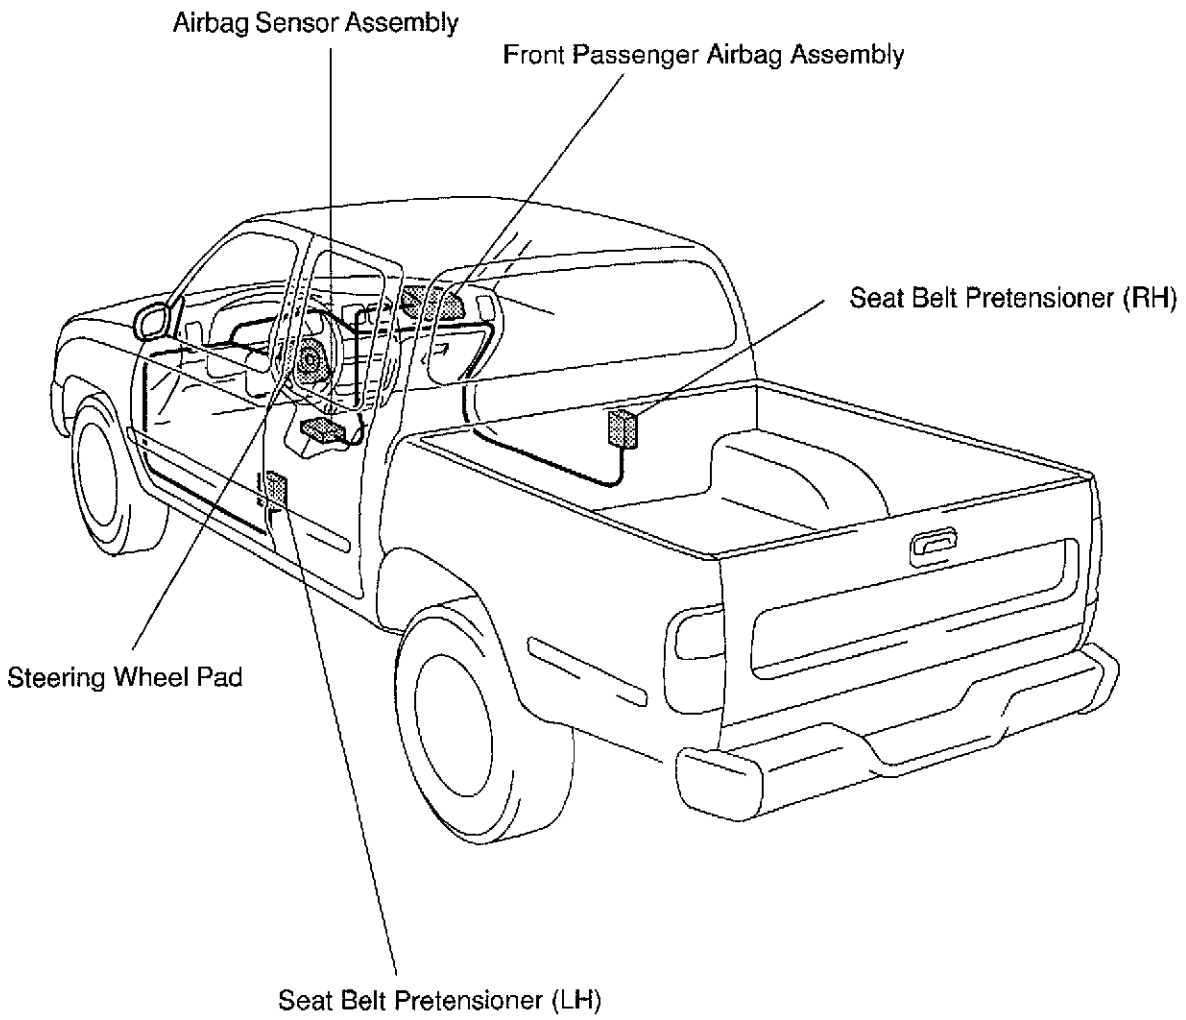

H02229

RS02L–02

INSPECTION

HINT:

The SRS wire harness is integrated with the cowl wire harness assembly. The wires for the SRS wire harness are encased in a yellow corrugated tube and all the connectors in the system are a standard yellow color.

1. VEHICLES NOT INVOLVED IN A COLLISION

Do a diagnostic system check. (See page DI–109)

2. VEHICLES INVOLVED IN A COLLISION

(a) Do a diagnostic system check. (See page DI–109)

(b) Check for breaks in all wires of the SRS wire harness, and for exposed conductors.

(c) Check to see if the SRS wire harness connectors are cracked or chipped.

RS02M-02

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the wire harness or connector.

- If any part of the SRS wire harness or any connector has been found to be faulty in troubleshooting.
- If any part of the SRS wire harness or any connector has been found to be faulty during check in items. (See page RS–39)

NOTICE:

If the wire harness used in the SRS is damaged, replace the whole wire harness assembly.