
FRONT SHOCK ABSORBER (2WD)

COMPONENTS

SA0MI–01

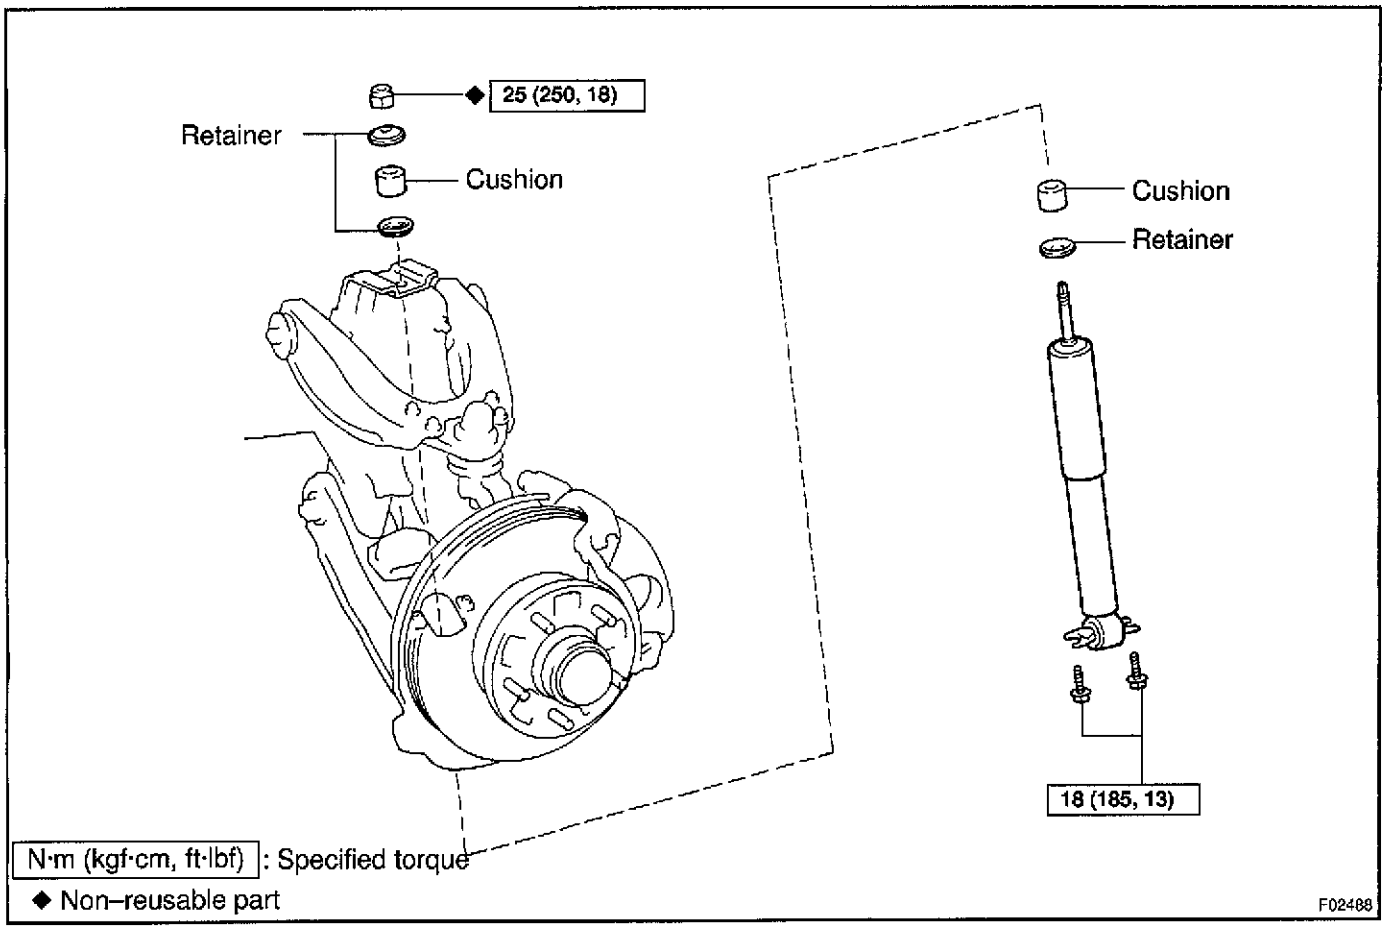


SADMJ-01

REMOVAL


1. **REMOVE FRONT WHEEL**

Torque:
Australia Gasoline Engine:
150 N·m (1,500 kgf·cm, 108 ft·lbf)
Others:
140 N·m (1,400 kgf·cm, 101 ft·lbf)

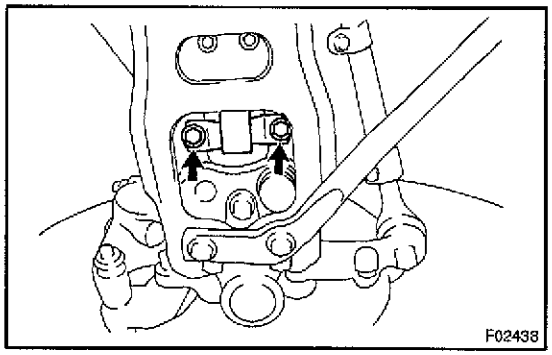

2. **REMOVE SHOCK ABSORBER**


(a) Remove the 2 bolts and disconnect the lower side of the shock absorber lower side from the lower suspension arm.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

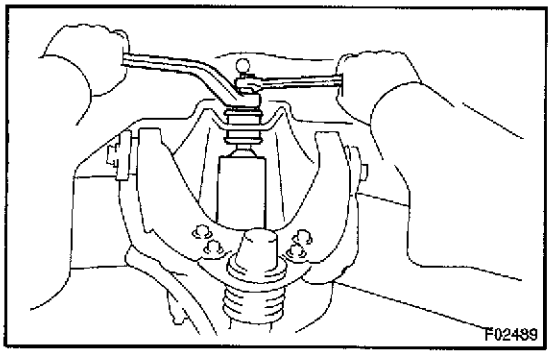

(b) Hold the shock absorber and remove the set nut, 2 retainers, cushion and shock absorber.
Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

(c) Remove the retainer and cushion from the shock absorber.

SA0MK-01

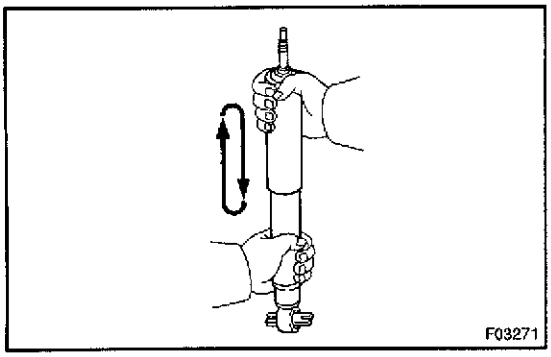

INSPECTION

INSPECT SHOCK ABSORBER

Compress and extend the shock absorber piston rod and check that there is no abnormal resistance or unusual operation sound.

HINT:

Make sure to check with the shock absorber upright.

If there is any abnormality, replace the shock absorber with a new one.

SA0ML–01

INSTALLATION

Installation is in the reverse order of removal (See page SA–103).