FRONT STABILIZER BAR (4WD and PRERUNNER)


SA0O1-01

COMPONENTS


HINT:

Prerunner is the model described below.

RZN193L–PRMDK, LN191L–PRMDS

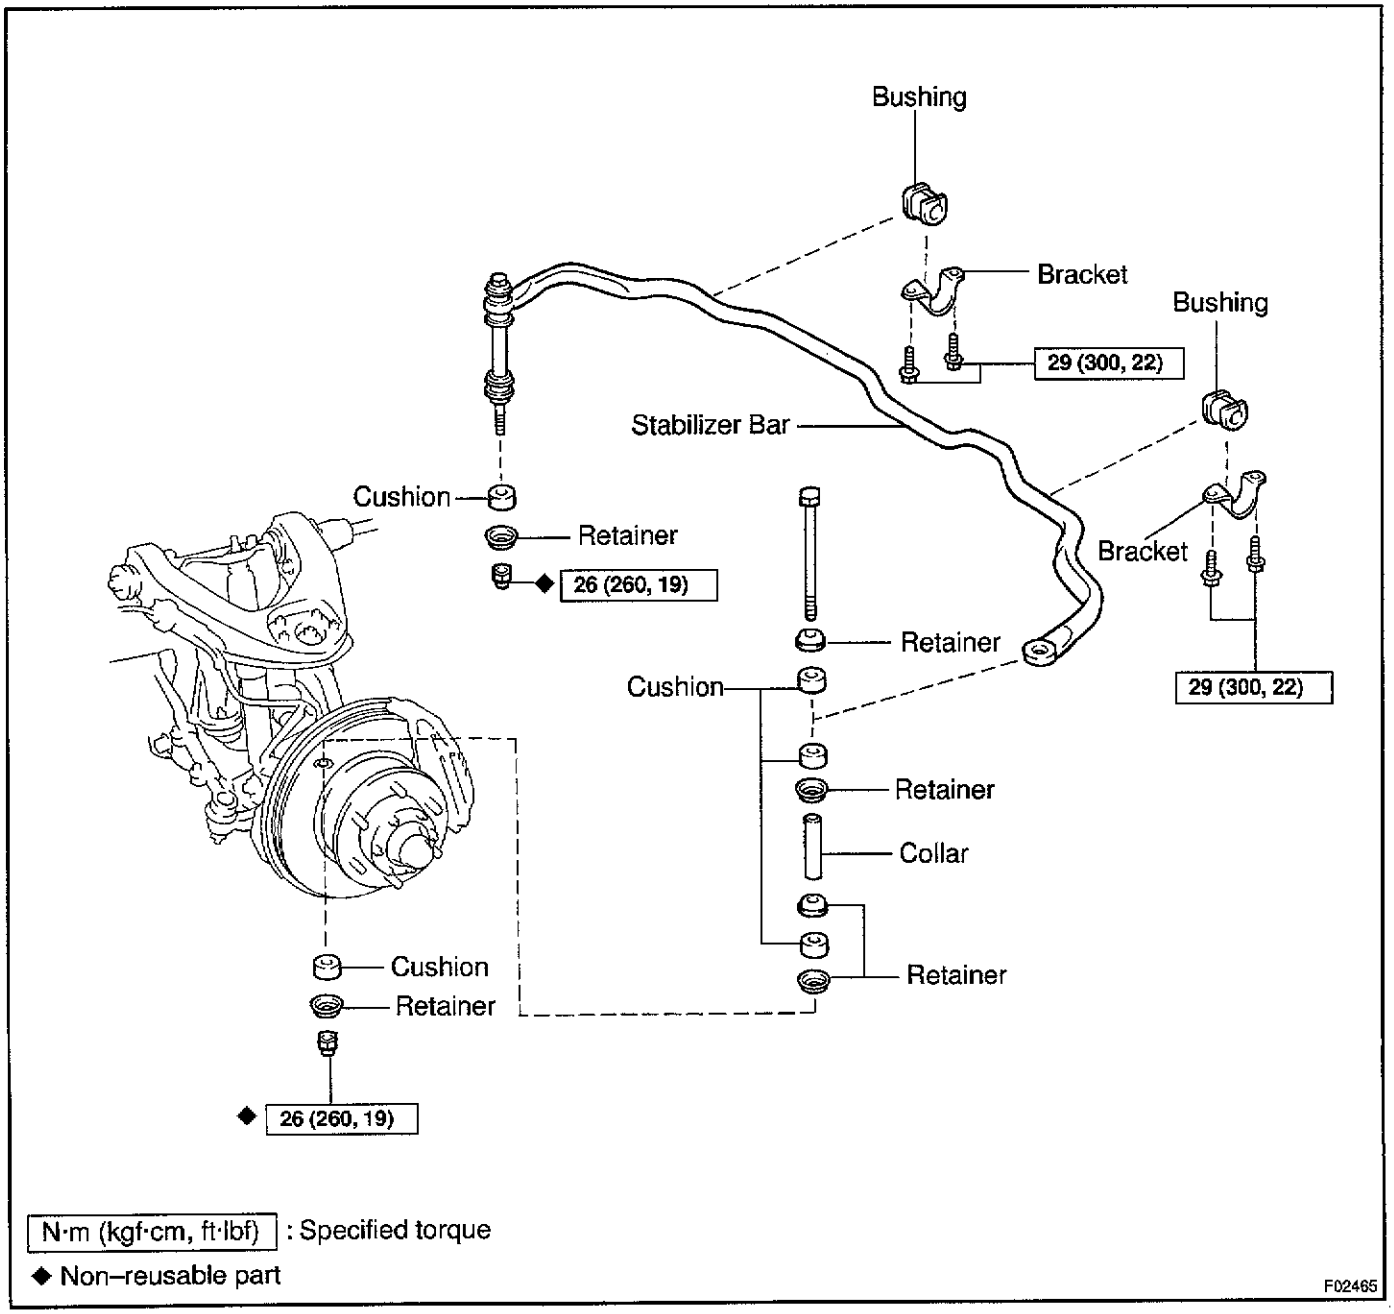

SA0D2-01

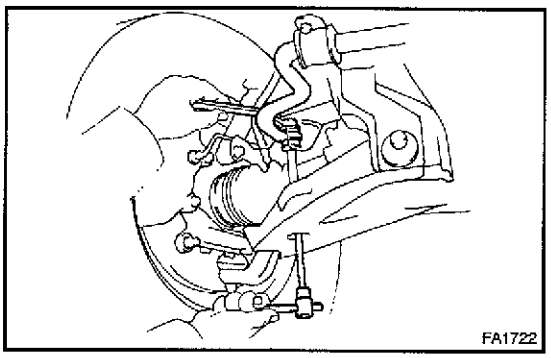

FA1722

REMOVAL

REMOVE STABILIZER BAR

(a) Hold the bolt, then remove the nut, 5 retainers, 4 cushions, collar and bolt from the lower suspension arm and stabilizer bar.
Torque: 26 N·m (260 kgf·cm, 19 ft·lbf)

(b) Employ the same manner described above to the other side.

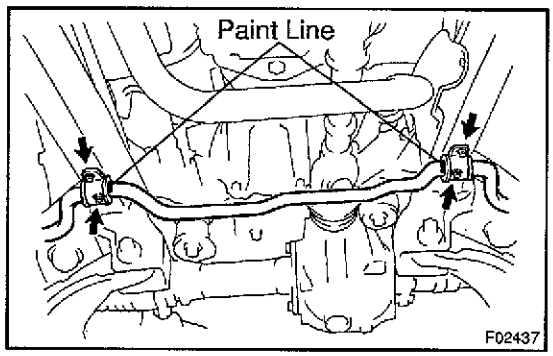

F02437

(c) Remove the 4 bolts, brackets, bushings and stabilizer bar.
Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)

HINT:

At the time of installation, install the bushing to the inside of the paint line on the stabilizer bar.

SA008-01

INSTALLATION

Installation is in the reverse order of removal (See page SA–161).