REAR WHEEL HUB BOLT

GA0BC–02


REPLACEMENT

HINT:

RZN193–PRMDK, LN191–PRMDS

Prerunner is the model described below.


1. REMOVE REAR WHEEL AND BRAKE DRUM

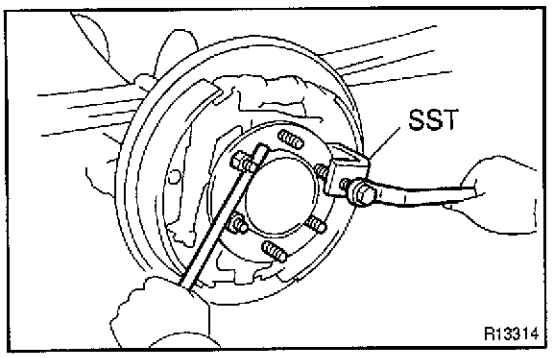

2. REMOVE HUB BOLT

Using SST, remove the hub bolt.

SST 09650–17011

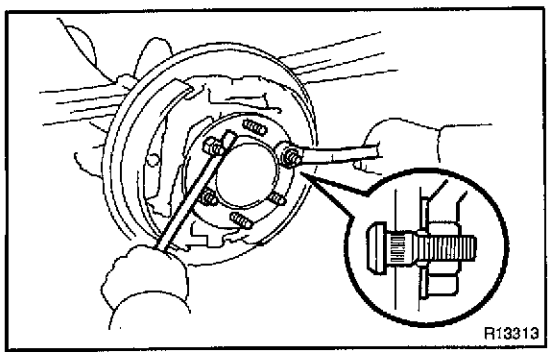

3. INSTALL HUB BOLT

Install a washer and nut to a new hub bolt as shown in the illustration, and install the hub bolt with torquing the nut.

4. INSTALL BRAKE DRUM AND REAR WHEEL

Torque:

2WD:

Australia Gasoline Engine:

150 N·m (1,500 kgf·cm, 108 ft·lbf)

Others:

140 N·m (1,400 kgf·cm, 101 ft·lbf)

4WD and Prerunner:

105 N·m (1,050 kgf·cm, 76 ft·lbf)