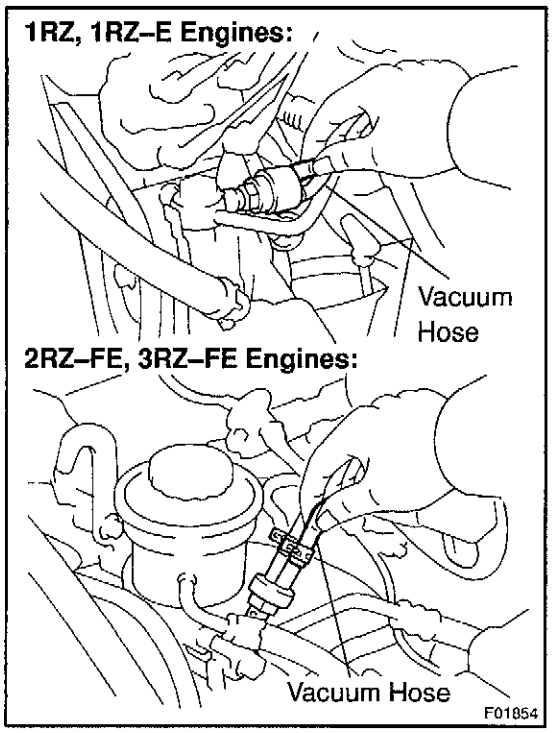


AIR CONTROL VALVE

SR00A–01

INSPECTION

1. **TURN AIR CONDITIONING SWITCH OFF**
2. **CHECK IDLE–UP**

(a) Start engine and run it at idle.
(b) Fully turn the steering wheel.
(c) Check that the engine rpm decreases when the vacuum hose of the air control valve is pinched.
(d) Check that the engine rpm increases when the hose is released.

SR