
FRONT DRIVE GEAR


COMPONENTS

TR02T–01

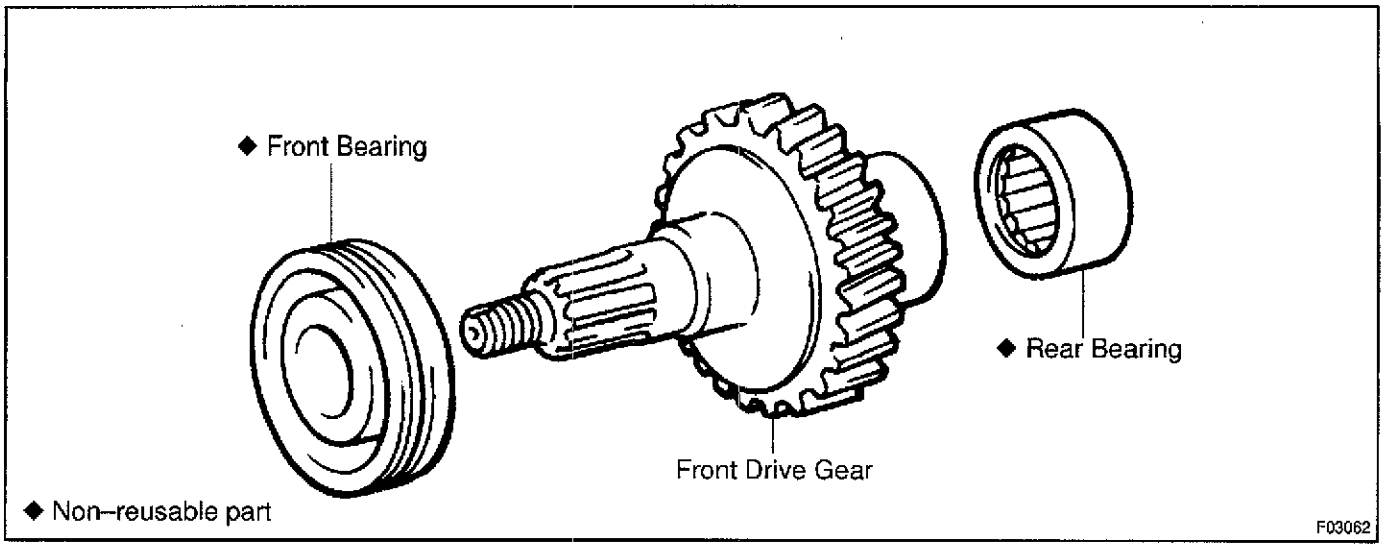

TR02U-01


REPLACEMENT

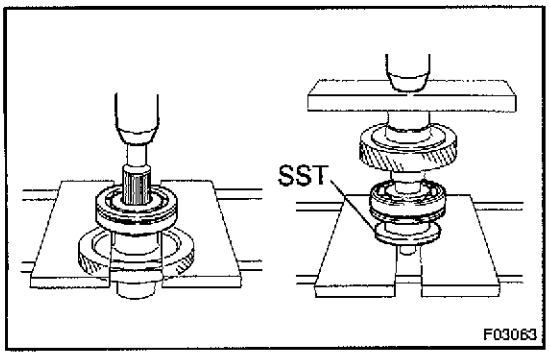

1. IF NECESSARY, REPLACE FRONT BEARING


(a) Press out the bearing.

(b) Using SST, press in a new bearing.
SST 09316–60011 (09316–00021)

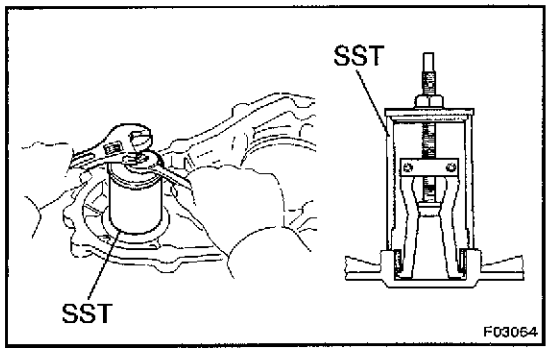

2. IF NECESSARY, REPLACE REAR BEARING FROM REAR CASE

(a) Using SST, remove the bearing from rear case.
SST 09612–30012

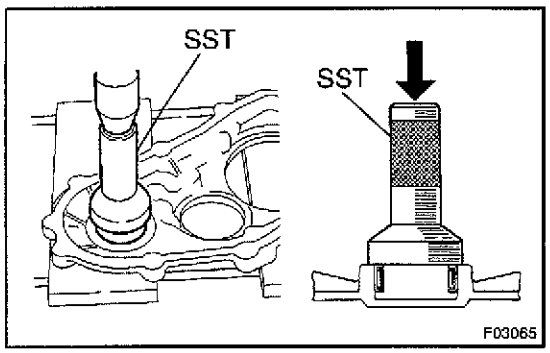

(b) Using SST, press in a new bearing to rear case.
SST 09310–35010