

OIL SEAL

COMPONENTS

TR02V–01

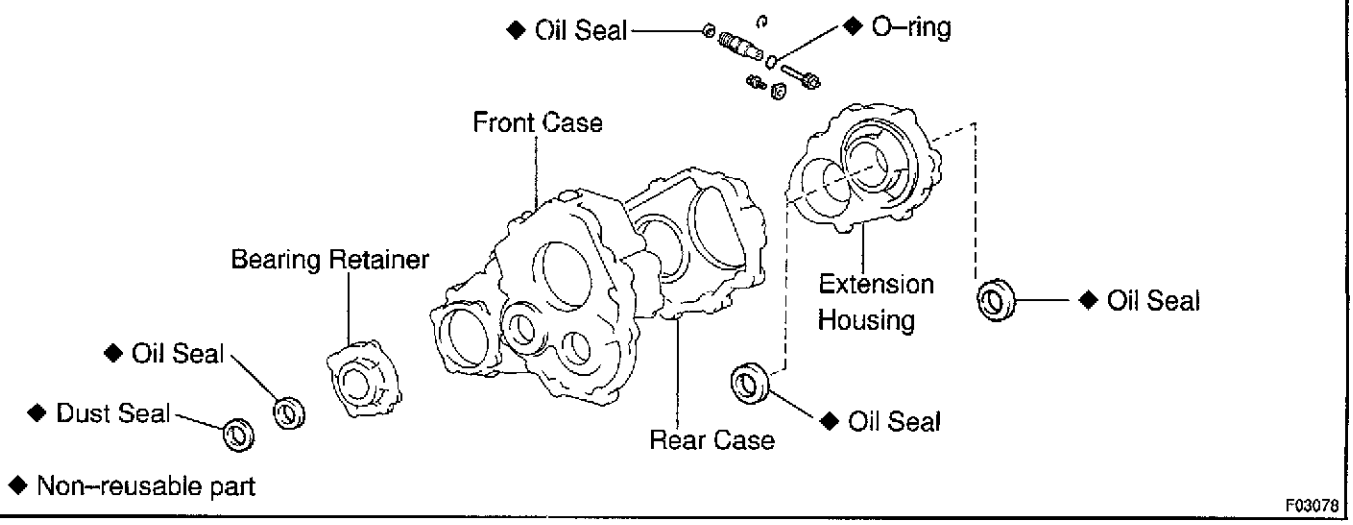


TR02W-01

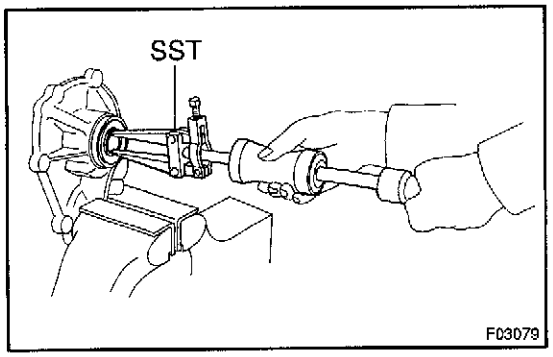

REPLACEMENT


1. IF NECESSARY, REPLACE EXTENSION HOUSING OIL SEALS

(a) Using SST, remove the 2 oil seals.
SST 09308–00010

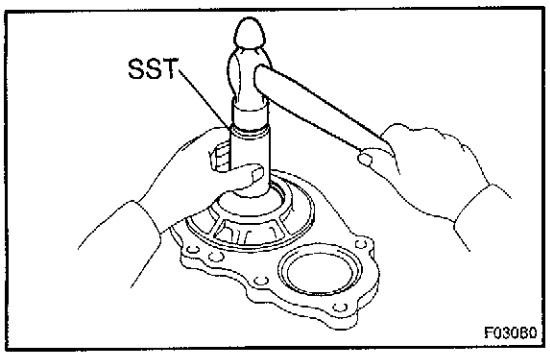


(b) Using SST, drive in a new oil seal.
SST 09310–35010

HINT:
Install a new oil seal for the oil pump screw, position the flat surface upward.

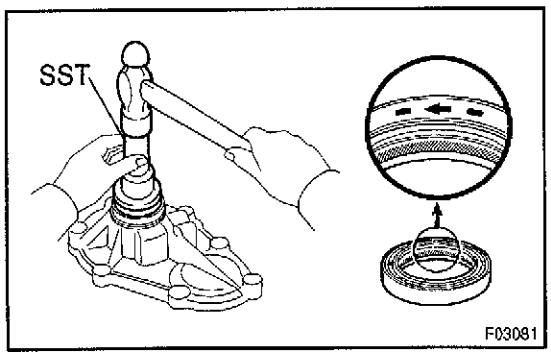

(c) Using SST, drive in a new oil seal.
SST 09325–20010


HINT:
Take note of the groove direction and be careful not to interchange this seal with the front drive gear oil seal. This oil seal has one arrow mark pointing counterclockwise to distinguish it from the front drive gear oil seal.

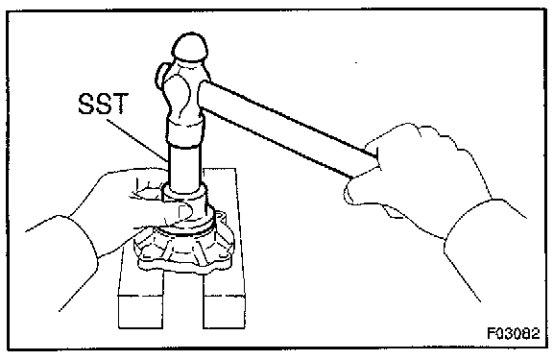

2. IF NECESSARY, REPLACE FRONT DRIVE GEAR OIL SEAL FROM BEARING RETAINER


(a) Using SST, drive out the oil seal and dust seal from bearing retainer.
SST 09325–20010

HINT:
Place the bearing retainer on something soft such as wooden blocks.

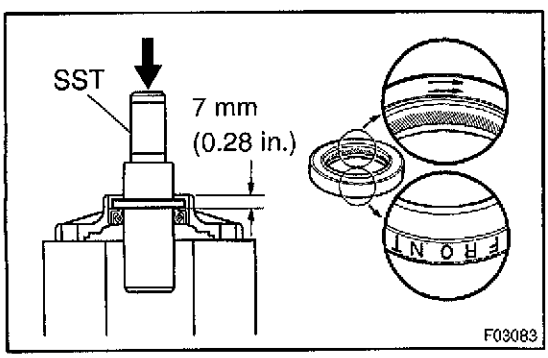


(b) Using SST, drive in a new oil seal to a depth of 7 mm (0.28 in.) from the end.
SST 09325–20010

HINT:
Take note of the groove direction and be careful not to interchange this seal with the output shaft oil seal. This oil seal has 2 arrow marks pointing clockwise and the word "FRONT" to distinguish it from the output shaft.

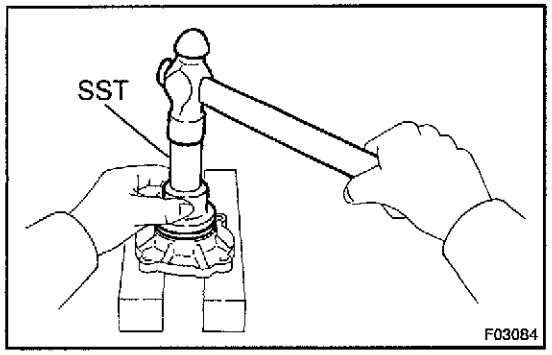


(c) Using SST, drive in a new dust seal.
SST 09325–20010

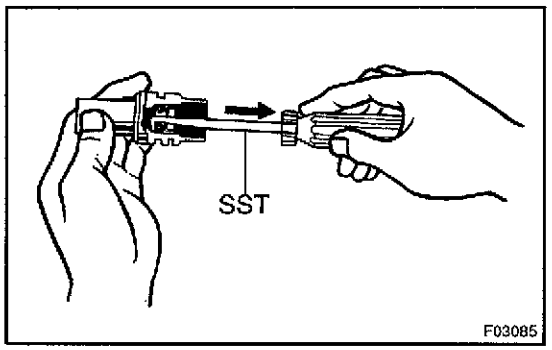

3. IF NECESSARY, REPLACE SPEEDOMETER DRIVEN GEAR OIL SEAL

(a) Using SST, pull out the oil seal.
SST 09921–00010

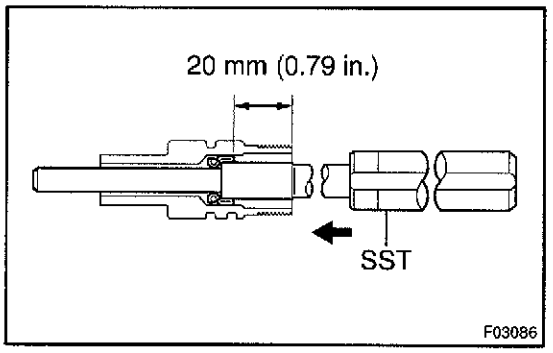

(b) Using SST, drive in a new oil seal into the sleeve.
SST 09201–10000 (09201–01080),
09950–70010 (09951–07150)
Drive in depth: 20 mm (0.79 in.)