
DRIVEN SPROCKET


COMPONENTS

TR088 01

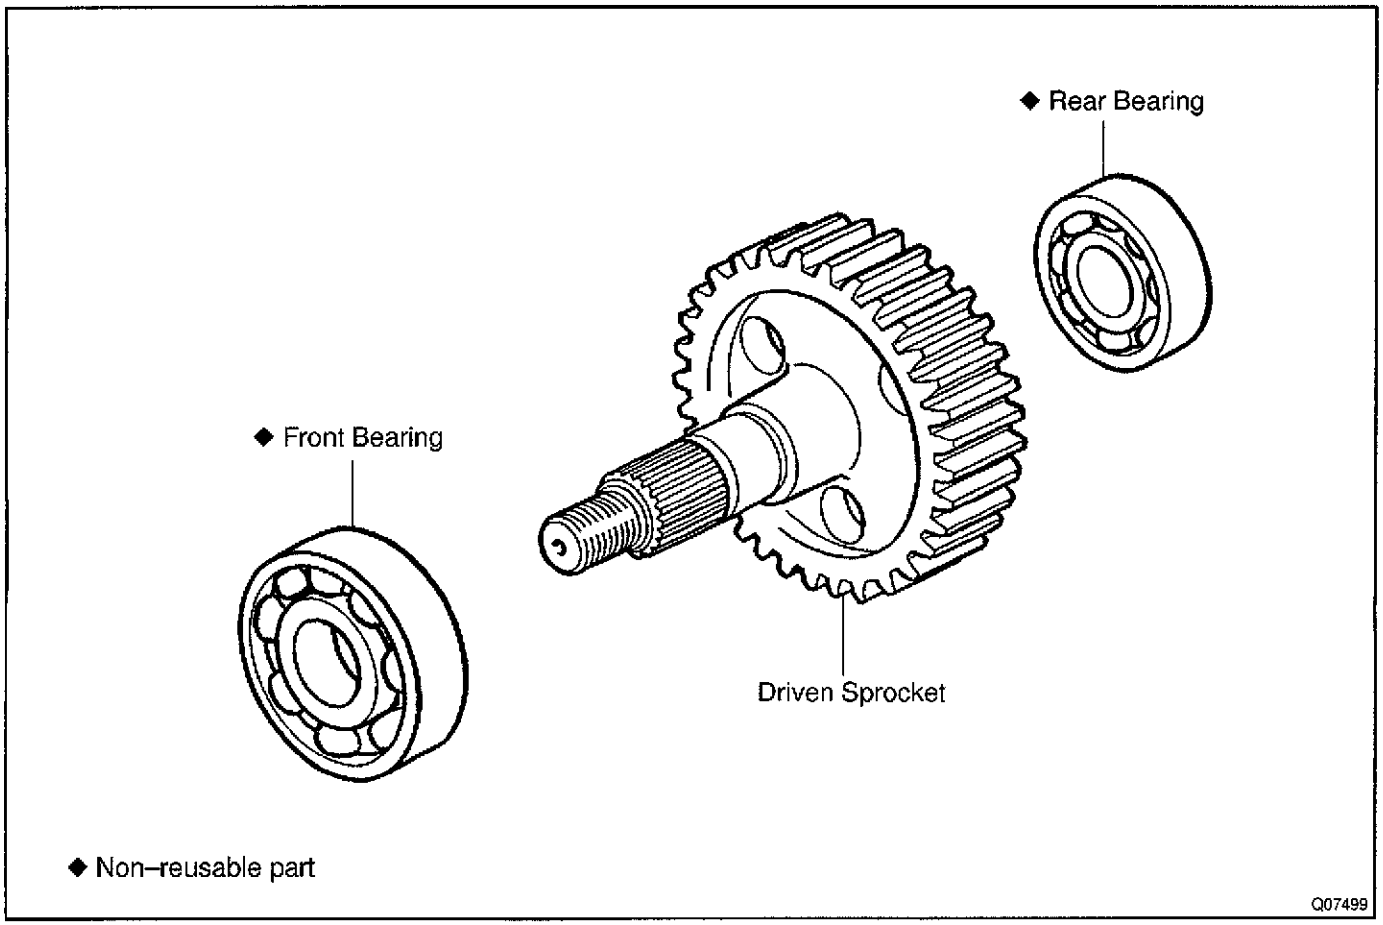


TR039 01

REPLACEMENT

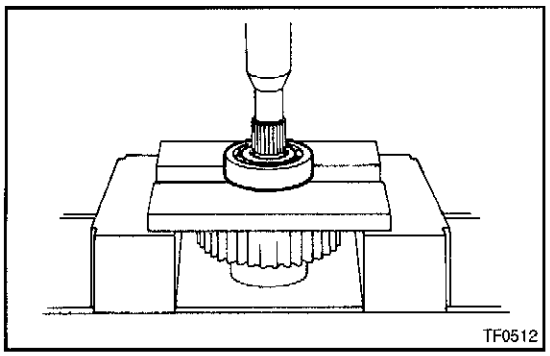

1. REMOVE FRONT BEARING


Using a press, remove the front bearing.

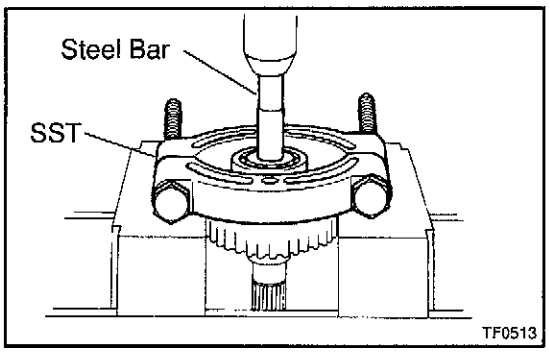

2. REMOVE REAR BEARING

Using SST, steel bar and a press, remove the rear bearing.


SST 09950–00020

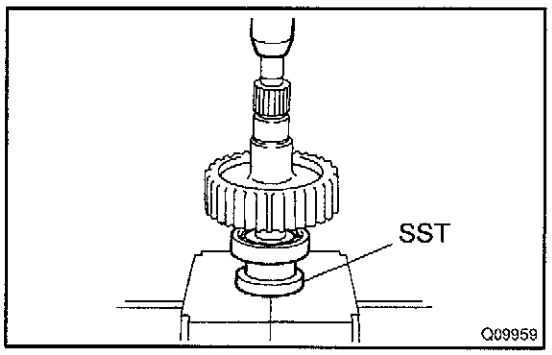

3. INSTALL REAR BEARING

Using SST and a press, install a new rear bearing.

SST 09316–60011 (09316–00021)

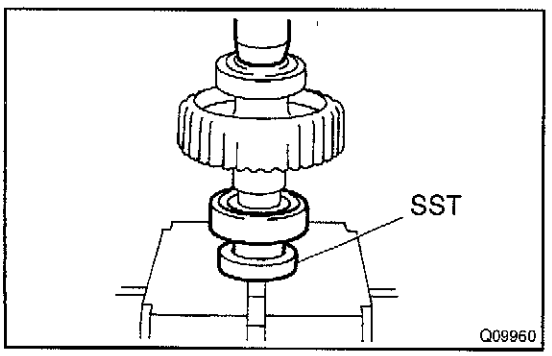

4. INSTALL FRONT BEARING

Using SST and a press, install a new front bearing.

SST 09316–60011 (09316–00021)