
PARTS LAYOUT AND SCHEMATIC DRAWING


EC0AM–01

LOCATION

2L, 5L

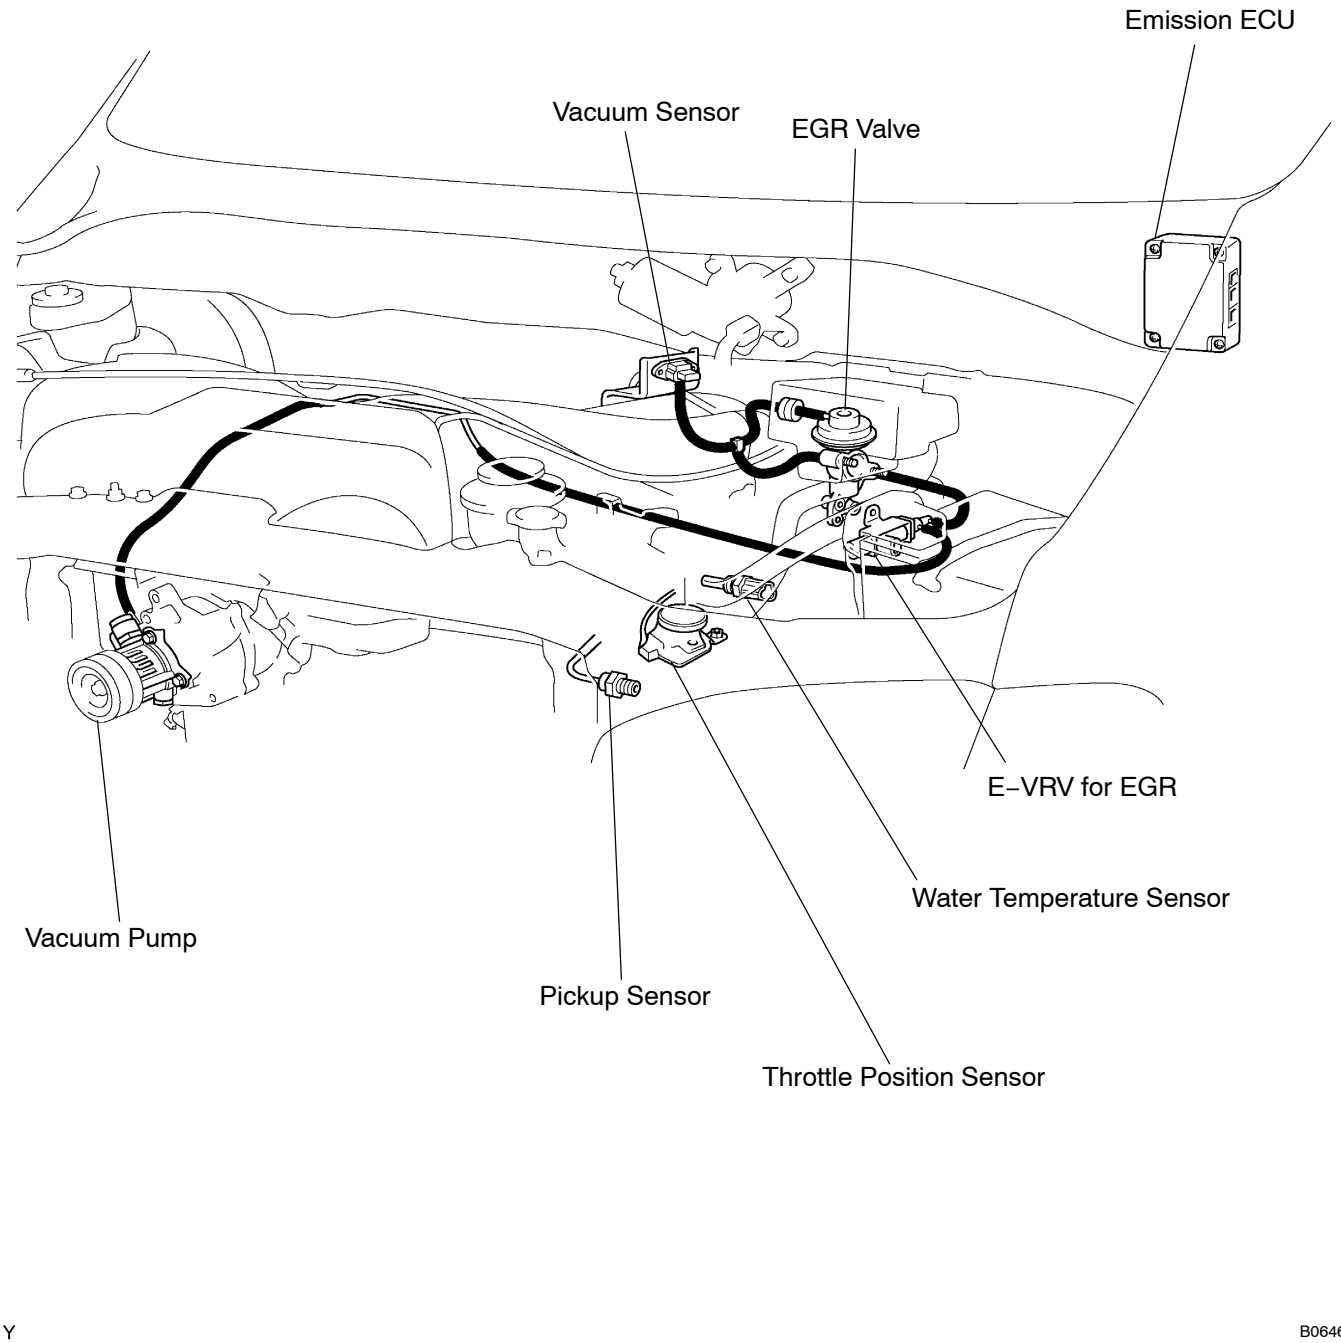

2L–T

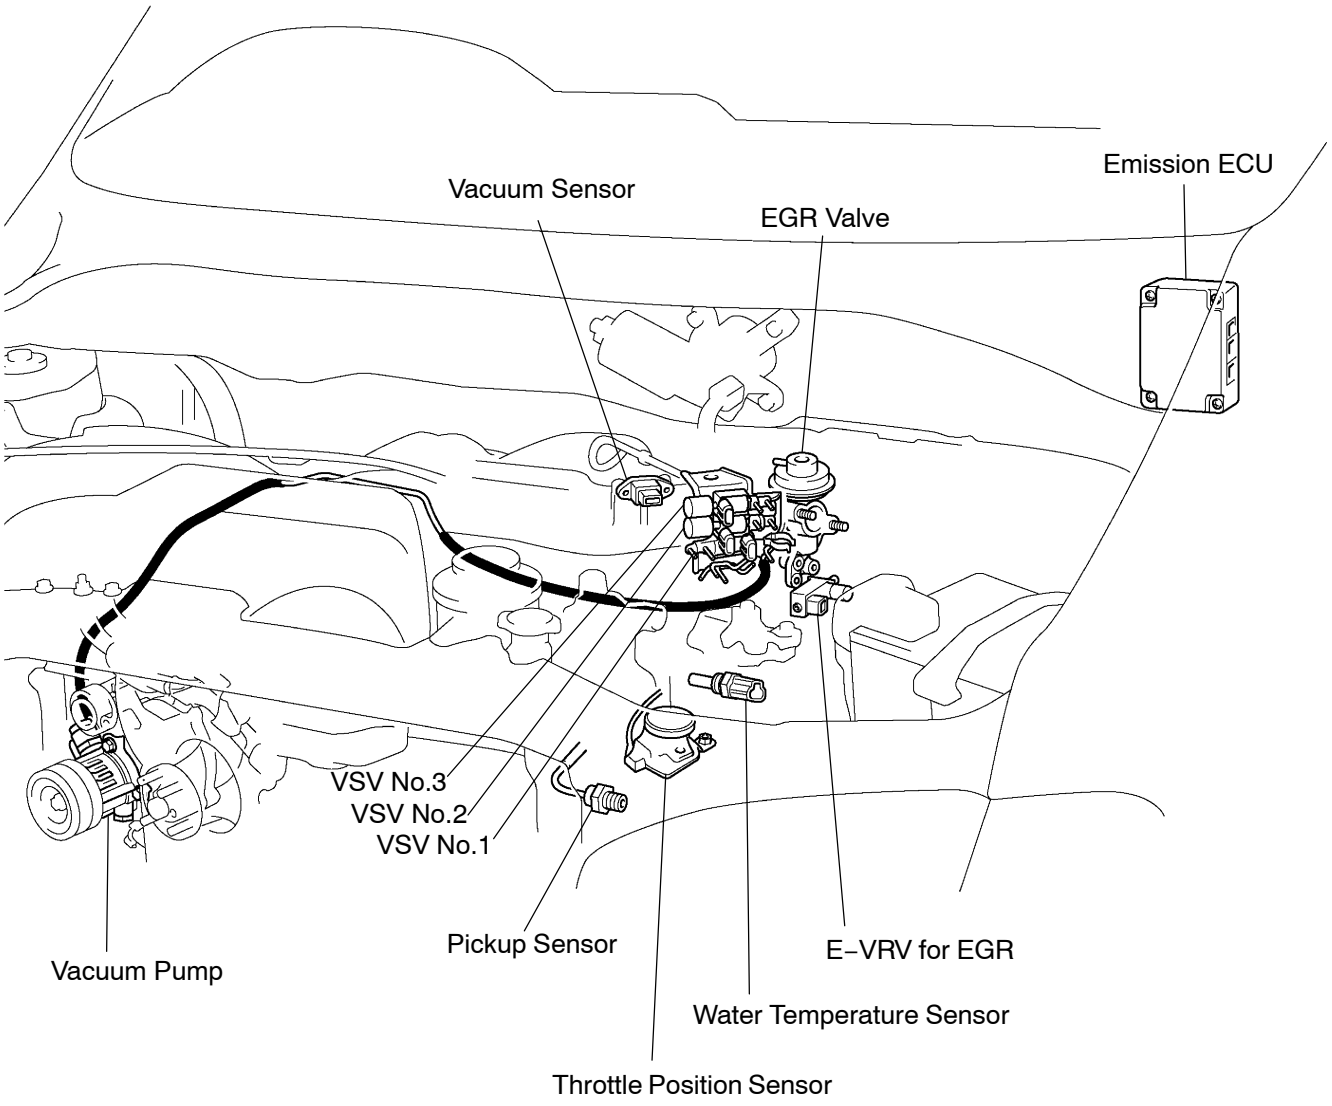
Emission ECU
Vacuum Sensor
EGR Valve
VSV No.3
VSV No.2
VSV No.1
Pickup Sensor
E–VRV for EGR
Vacuum Pump
Water Temperature Sensor
Throttle Position Sensor

B06463