
EXHAUST GAS RECIRCULATION (EGR) SYSTEM

COMPONENTS


EC0AP–02

ALL

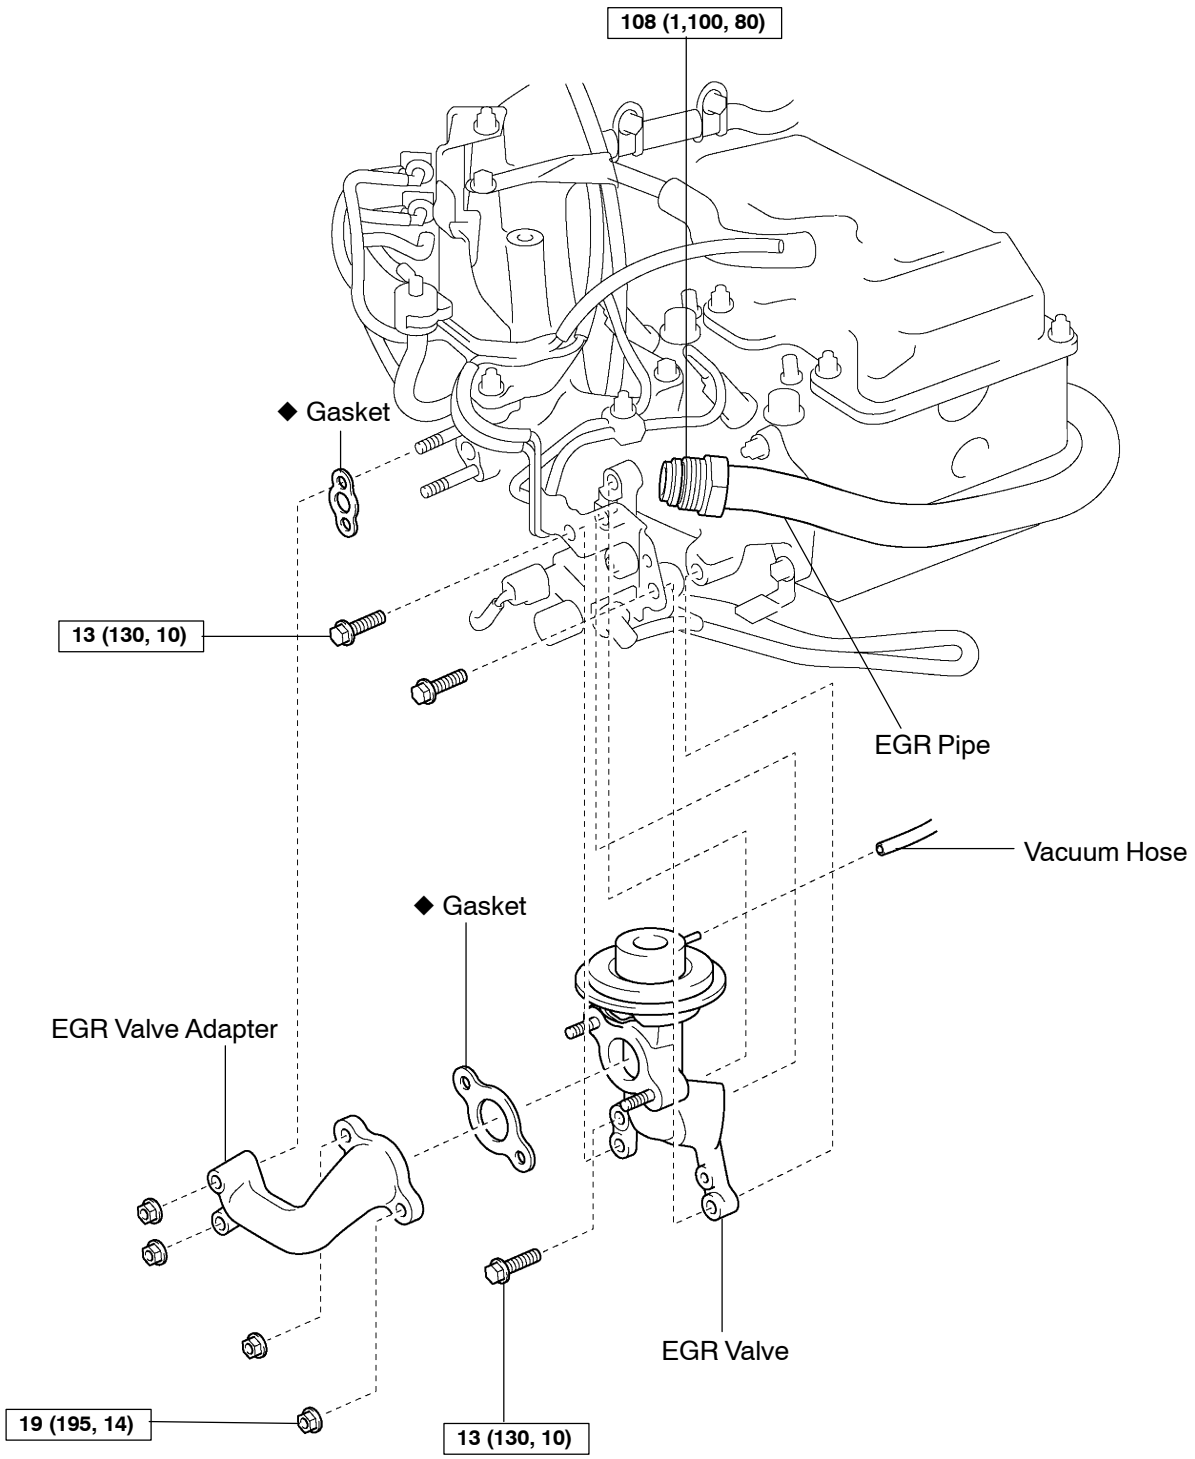


N·m (kgf·cm, ft·lbf) : Specified torque
Y◆ Non–reusable part


B06309

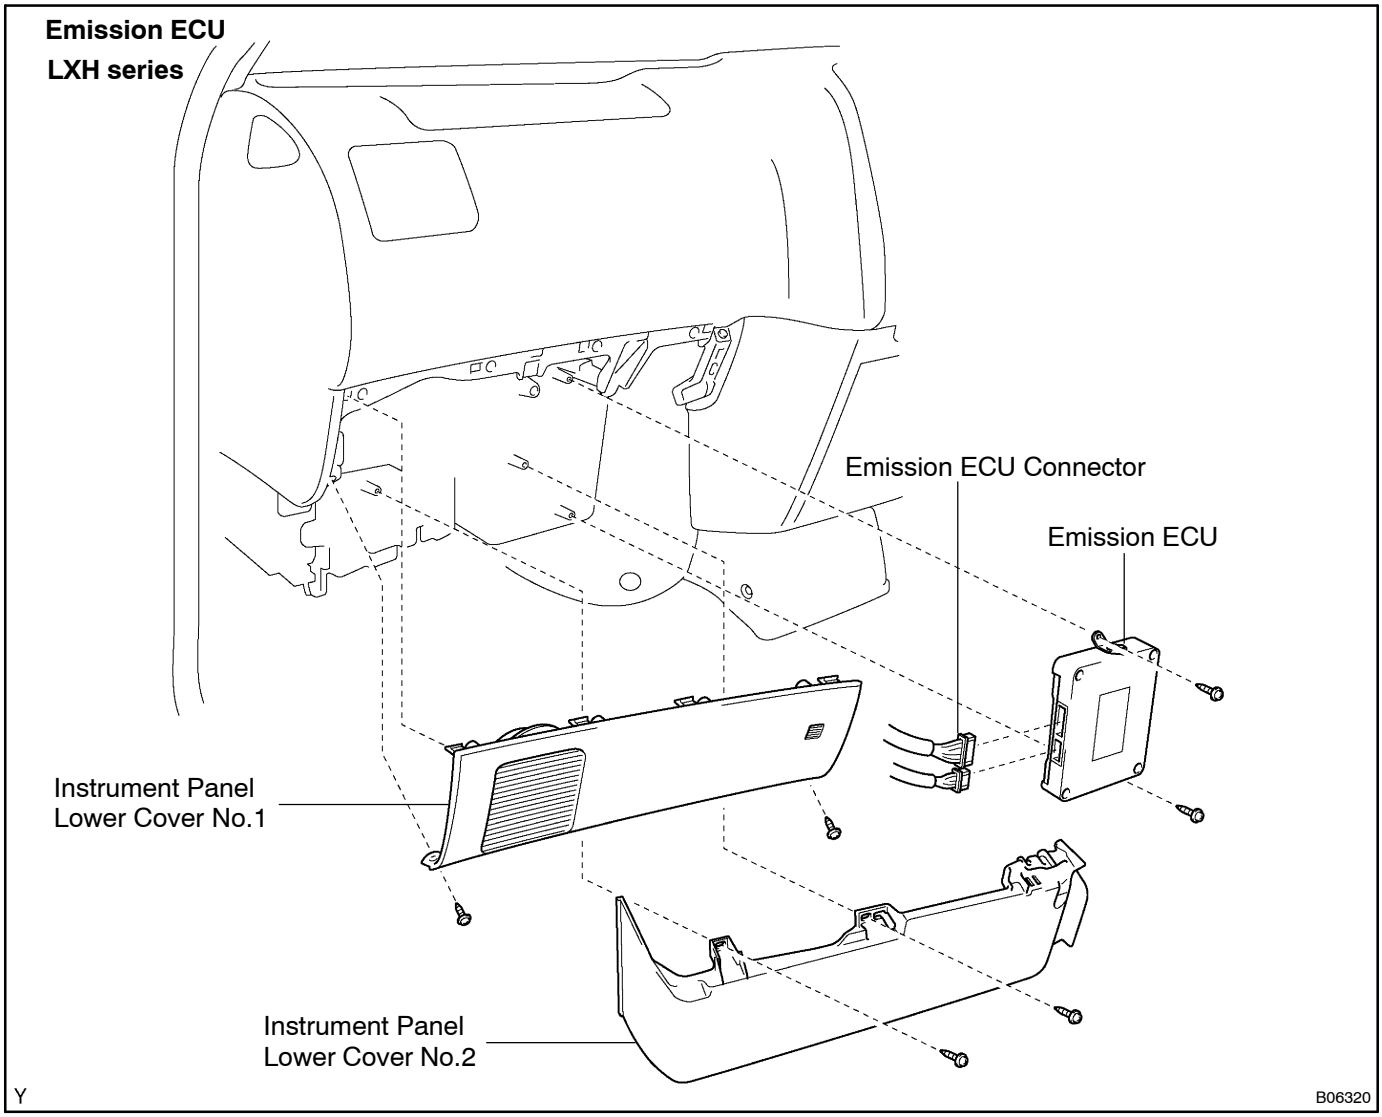
Emission ECU
LXH series
Emission ECU Connector
Emission ECU
Instrument Panel
Lower Cover No.1
Instrument Panel
Lower Cover No.2
Y
B06320

Emission ECU
LN series

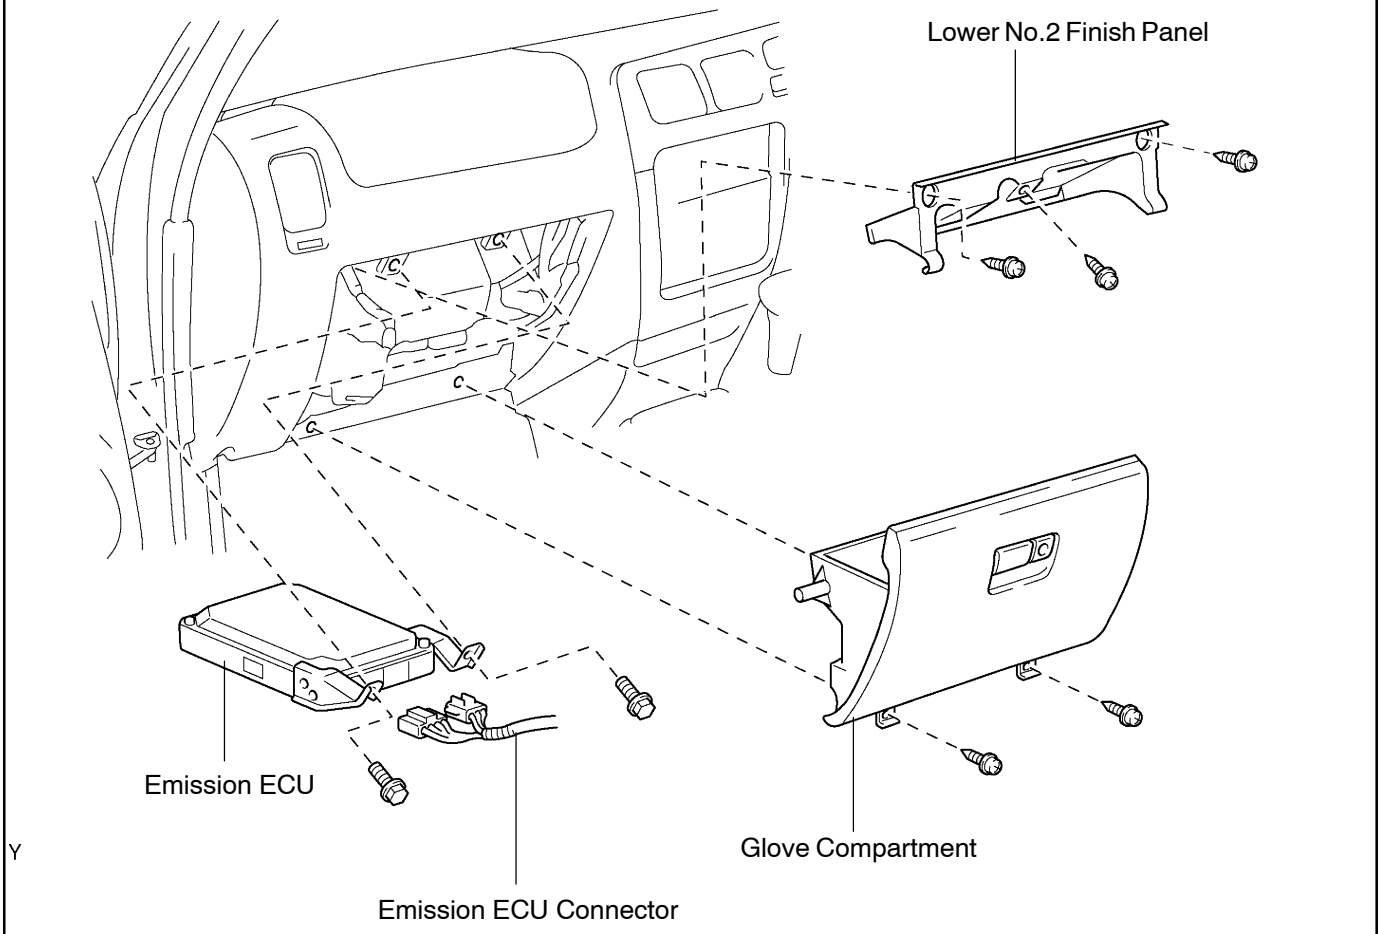

Emission ECU
LY series

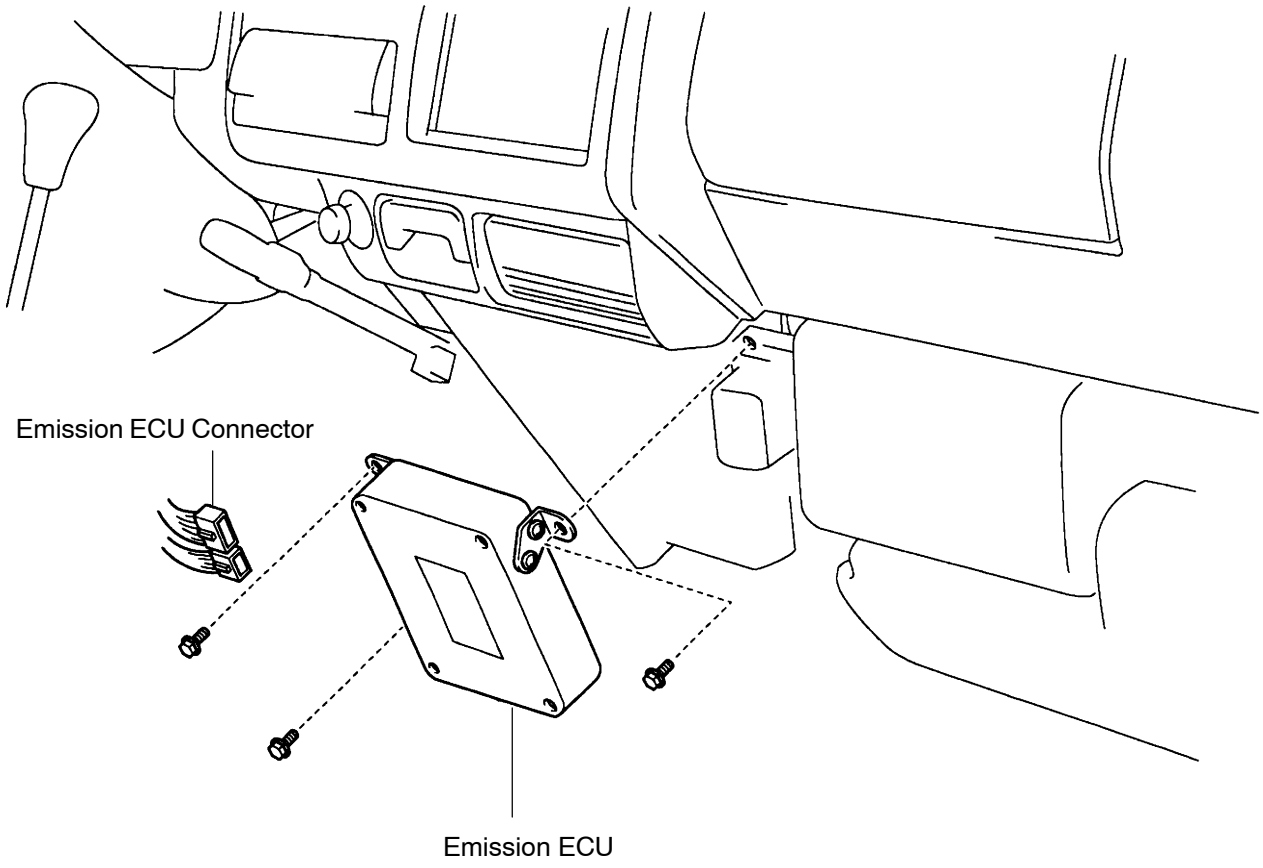

A07572