

Europe

Recommended Viscosity (SAE):

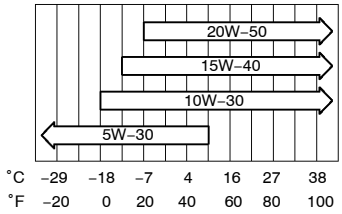

Except Europe

Recommended Viscosity (SAE):

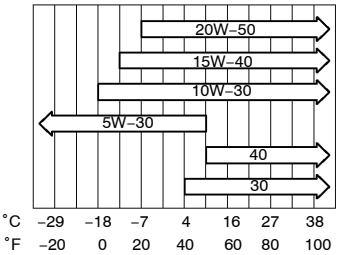

B01537
B01538

B01667

OIL AND FILTER

LU02I–03

INSPECTION

1. CHECK ENGINE OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is visibly poor, replace the oil.

Oil grade:

API CF–4 (You may also use API CF, CE or CD)

If you use SAE 10W–30 or higher viscosity oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W–30 engine oil is recommended.

2. CHECK ENGINE OIL LEVEL

After warming up the engine and then 5 minutes after the engine stop, oil level should be between ”L” and ”F” of the dipstick. If low, check for leakage and add oil up to ”F” mark.

NOTICE:

Do not fill with engine oil above the ”F” mark.