ENGINE IMMOBILISER SYSTEM

TROUBLESHOOTING

BE0YJ–02


HINT:

If a malfunction occurs in the engine immobiliser system, either of the following symptoms occurs:

- Cranking occurs, but the engine does not start.
- The engine starts, but stops after 5 seconds.

If either or these symptoms occurs, do troubleshooting to the following flow chart.

1. CRANKING OCCURS, BUT THE ENGINE DOES NOT START

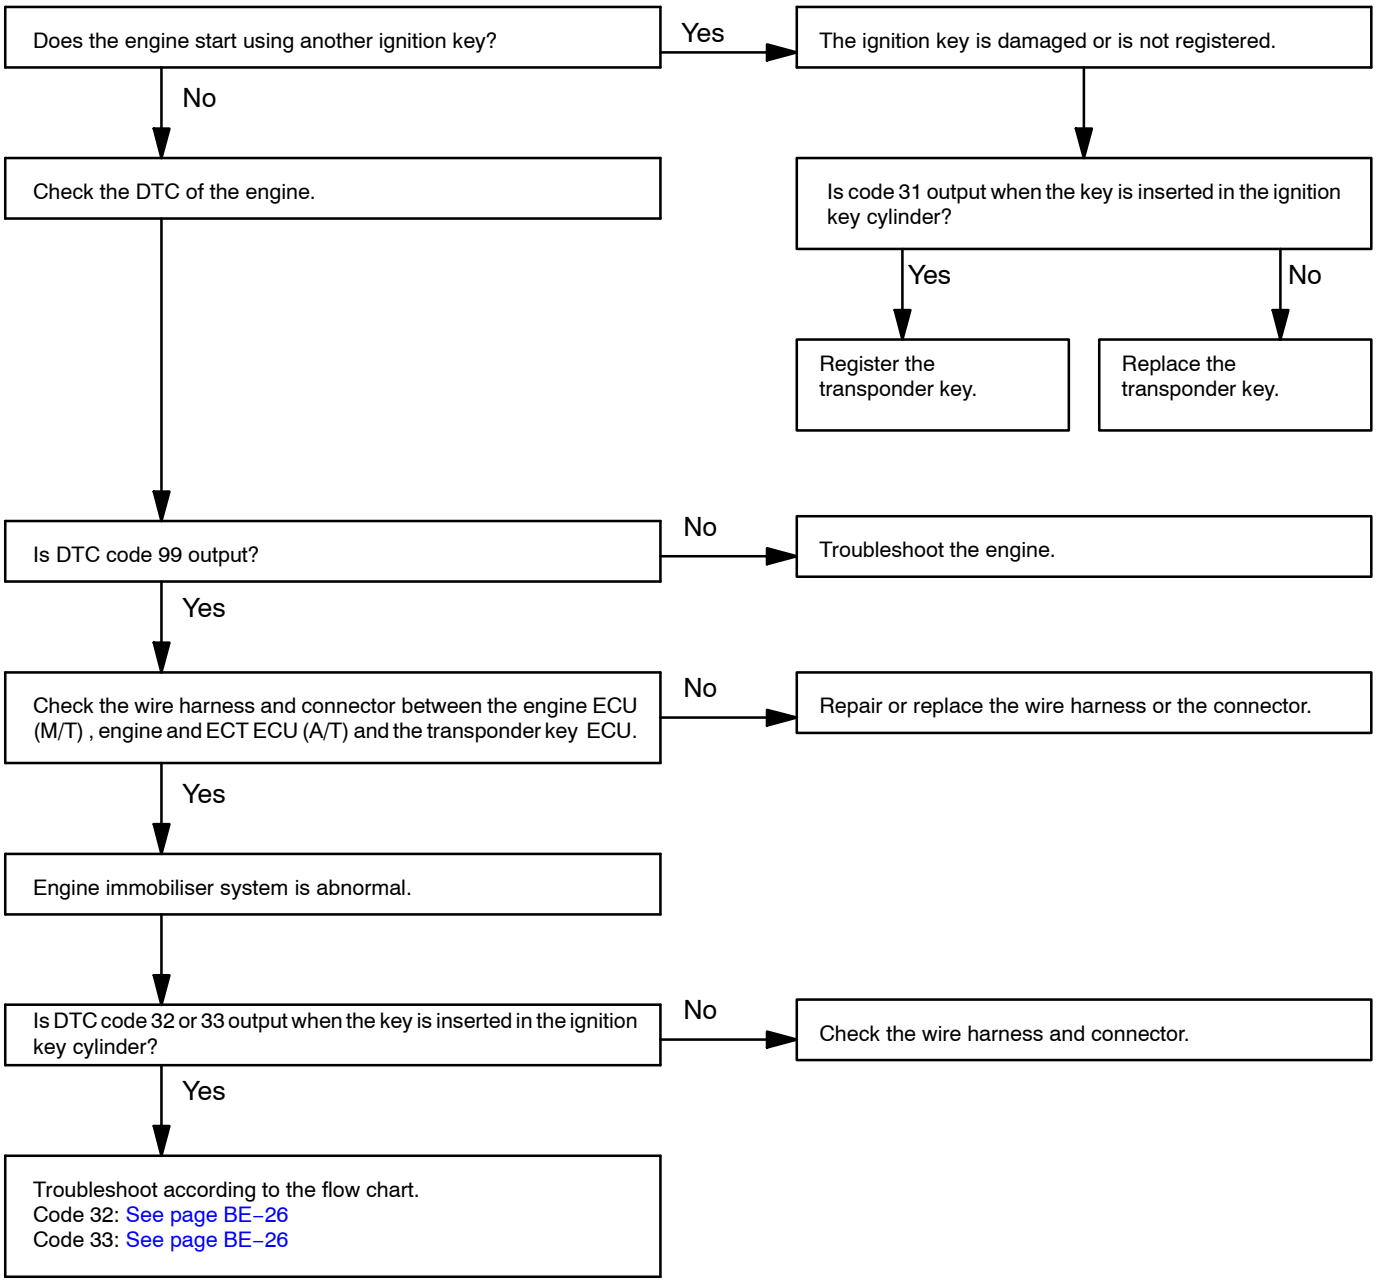

2. ENGINE STARTS, BUT STOPS AFTER 5 SECONDS

