

SR0QV–02

INSPECTION

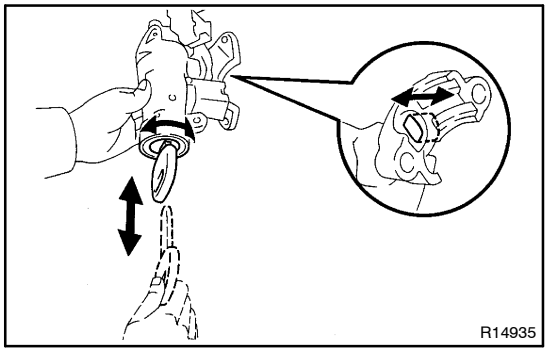

1. INSPECT STEERING LOCK OPERATION

Check that the steering lock mechanism operates properly.

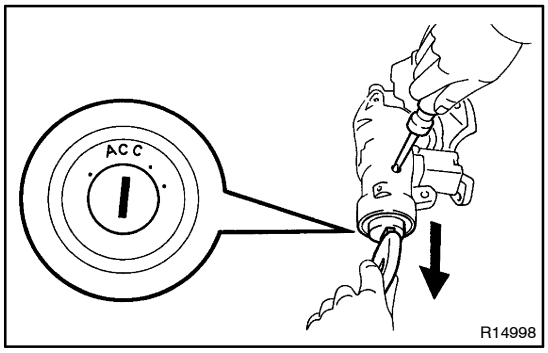

2. IF NECESSARY, REPLACE KEY CYLINDER

(a) Place the ignition key at the ACC position.

(b) Push down the stop pin with a screwdriver, and pull out the cylinder.

(c) Install a new cylinder.

HINT:

Make sure the key is at the ACC position.

3. INSPECT IGNITION SWITCH

(See Pub. No. RM585E on page BE–13)

4. INSPECT KEY UNLOCK WARNING SWITCH

(See Pub. No. RM585E on page BE–13)

5. IF NECESSARY, REPLACE IGNITION SWITCH WITH KEY UNLOCK WARNING SWITCH

(a) Remove the 2 screws from the column upper bracket.

(b) Remove the key cylinder.

(c) Slide out the switch.

(d) Install a new ignition switch with key unlock warning switch with the 2 screws.

6. INSPECT TRANSPONDER KEY COIL


(See page BE–30)

7. IF NECESSARY, REPLACE TRANSPONDER KEY COIL

8. IF NECESSARY, REPLACE TRANSPONDER KEY AMPLIFIER

(a) Remove the screw and transponder key amplifier.

(b) Install a new transponder key amplifier with the screw.

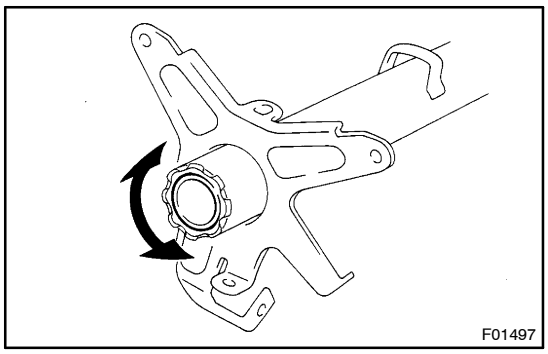

9. INSPECT BEARING

Check the bearing rotation condition and check for abnormal noise.

If the bearing is worn or damaged, replace the column tube.