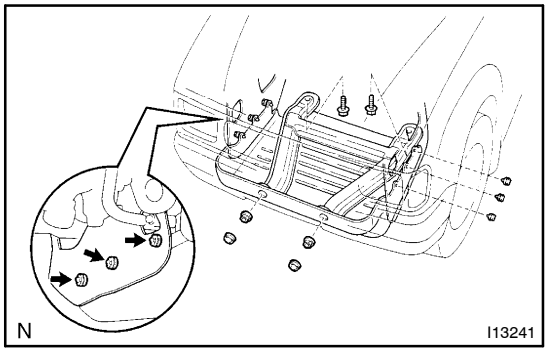



DRIVE BELT (2L–T Israel)

AC2FI–01

REMOVAL

1. REMOVE UNDER COVER

(a) Remove the 6 clips.
(b) Remove the 2 service hole cover.
(c) Remove the 2 nuts, 2 bolts and under cover.

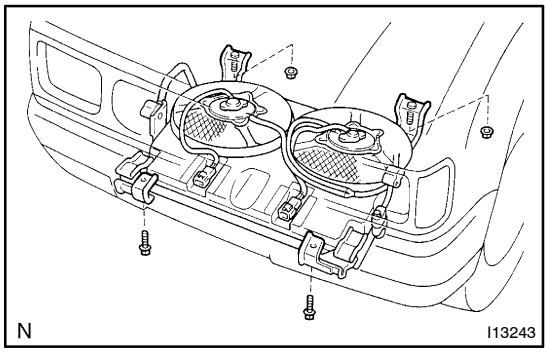


2. REMOVE DRIVE BELT

(a) Disconnect the 2 condenser fan connectors.
(b) Remove the 2 condenser set bolts and slide the condenser downward.

NOTICE:

Be careful not to bent the tubes when sliding condenser.

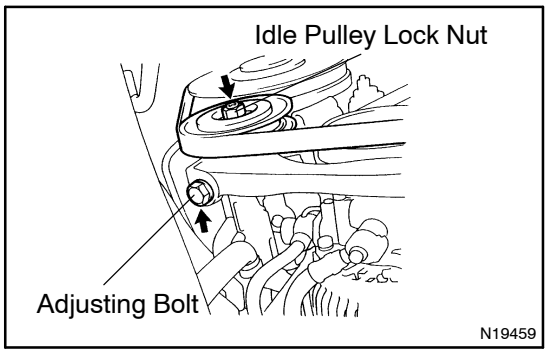

(c) Loosen the idle pulley lock nut.
(d) Loosen the drive belt tension by adjusting bolt and remove the drive belt.