
AC2FN–01

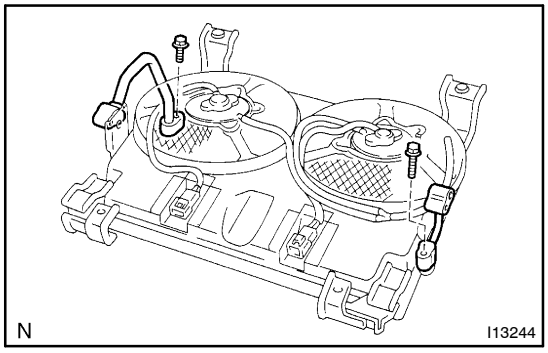

DISASSEMBLY

1. REMOVE TUBES

Remove the 2 bolt and 2 tubes.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)


NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of reassembly, please refer to the following item


Lubricate 2 new O–rings with compressor oil and install them to the tubes.

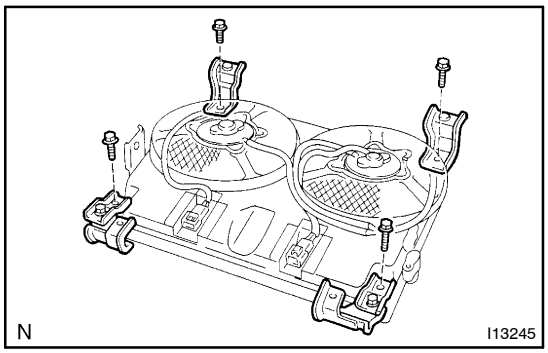

2. REMOVE CONDENSER FAN

(a) Remove the 4 bolts and 4 brackets.

(b) Separate the condenser core and condenser fan.

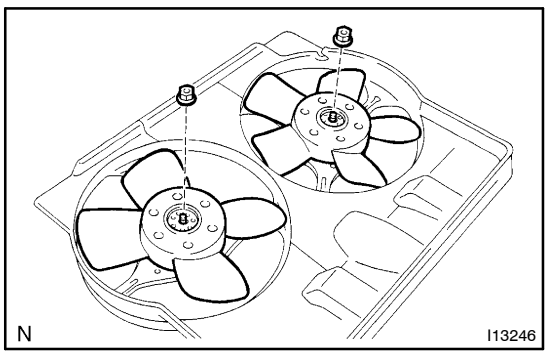


3. REMOVE FANS

Remove the 2 nuts and 2 fans.


NOTICE:

When removing the nut and fan, do not apply too much force to the motor shaft, And do not scratch the motor shaft.

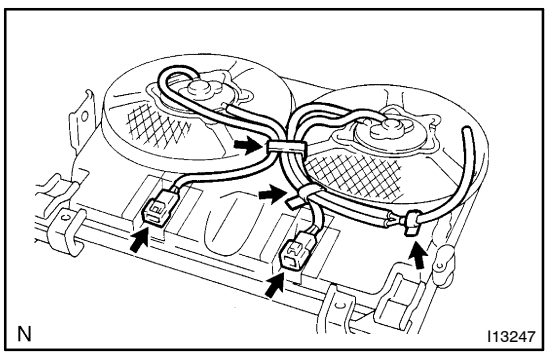

4. REMOVE FAN MOTORS

(a) Disconnect the lead wires and hoses from the fan shroud.

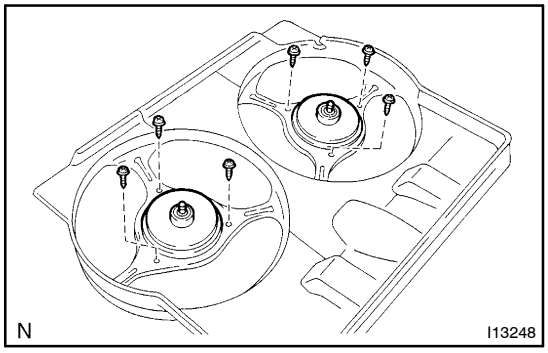

(b) Remove the 6 screws and 2 fan motors.