
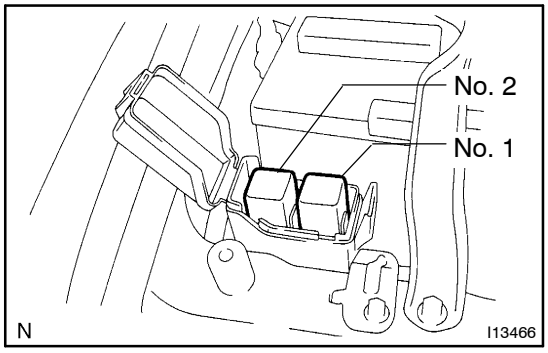


CONDENSER FAN RELAY (Israel)

AC2FS–01

INSPECTION


1. REMOVE RELAYS

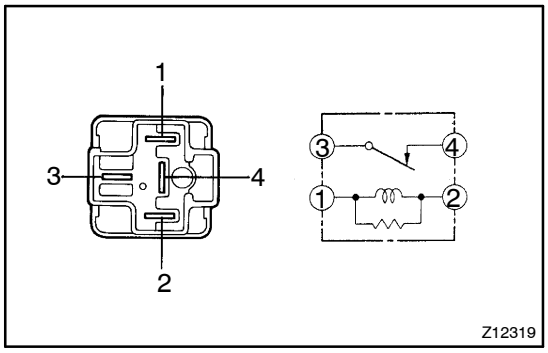

2. INSPECT CONDENSER FAN RELAY No. 1 (Marking: CDS FAN No. 1) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 3 – 4	Continuity
Apply B+ between terminals 3 and 4.	3 – 4	No continuity

If continuity is not as specified, replace the relay.

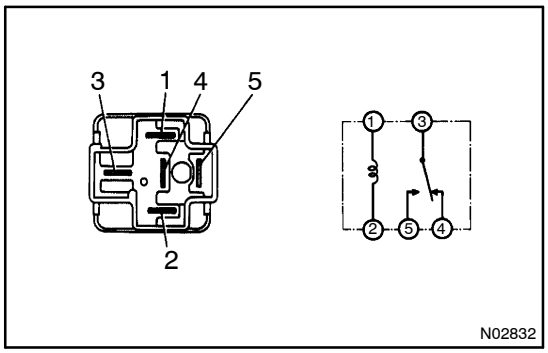

3. INSPECT CONDENSER FAN RELAY No. 2 (Marking: CDS FAN No. 2) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 3 – 4	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.