
DI1B1–18

TERMINALS OF ECU

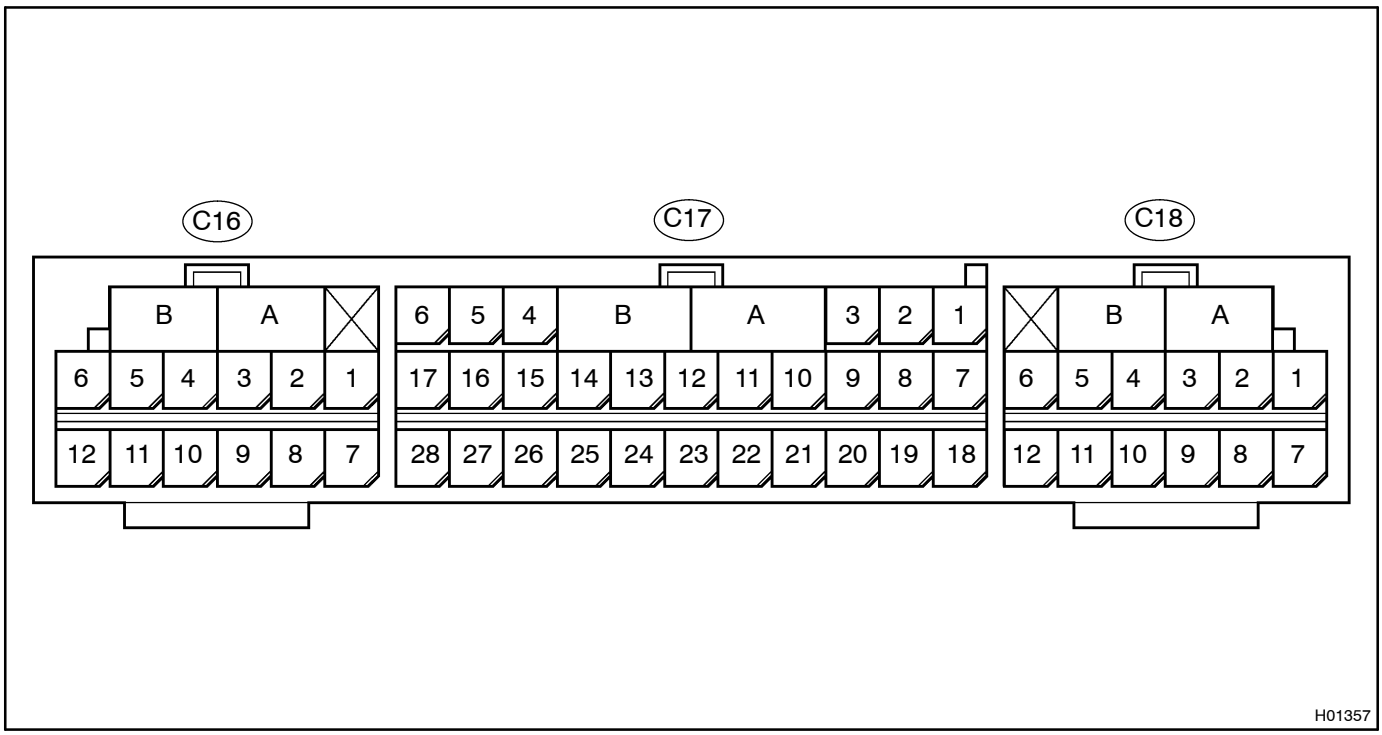

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C16 – 1	PL–	Squib (Seat Belt Pretensioner, LH)
C16 – 2	PL+	Squib (Seat Belt Pretensioner, LH)
C17 – 3	LA	SRS Warning Light
C17 – 5	IG2	Power Source (IGN Fuse)
C17 – 6	ACC	Power Source (CIG Fuse)
C17 – 9	SR+	Front Airbag Sensor (RH)
C17 – 10	P+	Squib (Passenger)
C17 – 11	P–	Squib (Passenger)
C17 – 12	SIL	Diagnosis
C17 – 13	D–	Squib (Driver)
C17 – 14	D+	Squib (Driver)
C17 – 15	SL+	Front Airbag Sensor (LH)
C17 – 19	Tc	Diagnosis
C17 – 20	SR–	Front Airbag Sensor (RH)
C17 – 26	SL–	Front Airbag Sensor (LH)
C17 – 27	E1	Ground
C17 – 28	E2	Ground
C18 – 5	PR+	Squib (Pretensioner, RH)
C18 – 6	PR–	Squib (Pretensioner, RH)