
IN02U–03

VEHICLE LIFT AND SUPPORT LOCATIONS


2WD:

Front

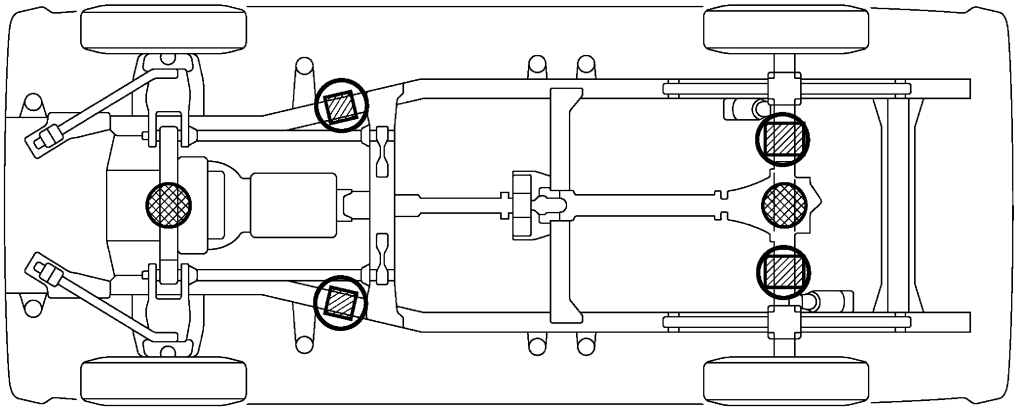

4WD and pre runner:

Front

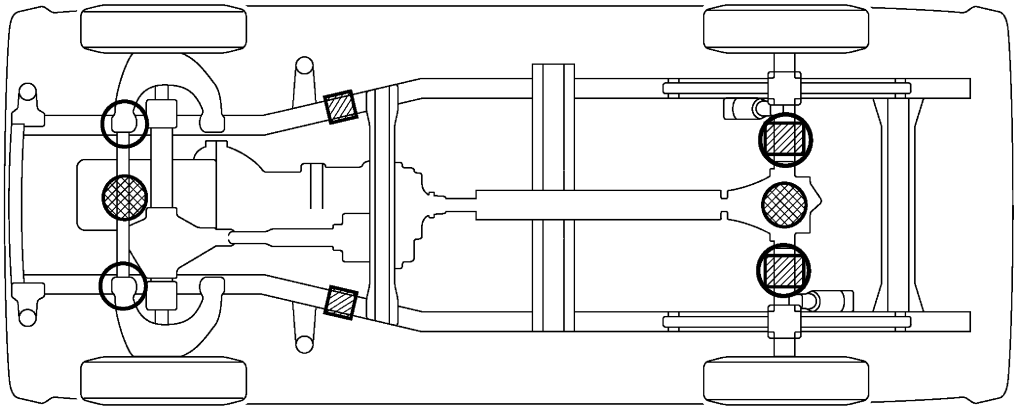

JACK POSITION .....

Front ..... Center of crossmember

Rear ..... Center of rear axle housing

SCREW TYPE JACK POSITION .....

SUPPORT POSITION

Safety stand .....

B02108

B02425