RS0I2–02

REMOVAL


NOTICE:

- **If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC position, DTCs will be recorded.**
- **Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.**
- **Never reuse the sensor involved in a collision when the SRS has deployed.**
- **Never repair a sensor in order to reuse it.**

1. LH:

REMOVE FRONT AIRBAG SENSOR

(a) Remove the battery carrier, battery and battery tray.

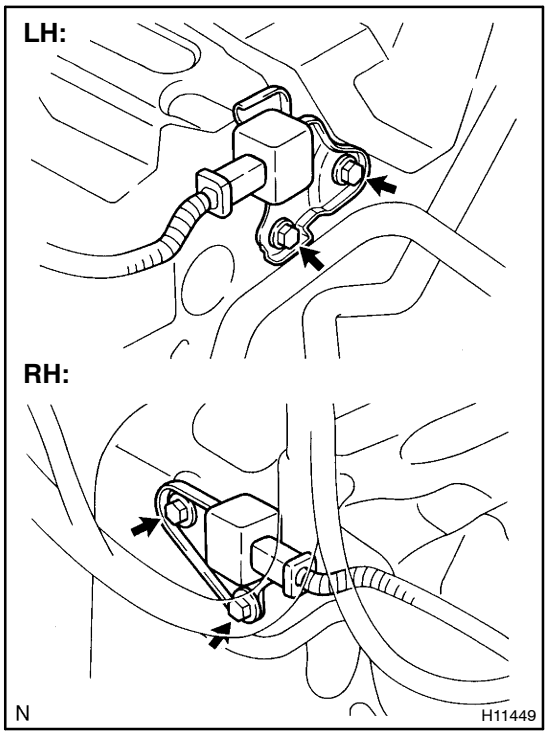

(b) Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

(c) Remove the 2 bolts and front airbag sensor.

2. RH:

REMOVE FRONT AIRBAG SENSOR

(a) Remove the air cleaner assembly.

(b) Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with sensor assembly installed.

(c) Remove the 2 bolts and front airbag sensor.