SR09H–02

INSTALLATION

1. 2L–T (RHD) 4WD:
INSTALL SLIDING WITH SHAFT YOKE

Install the sliding with shaft yoke and bolt.

Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)

2. 4WD:
INSTALL JOINT PROTECTOR

3. INSTALL NO. 2 INTERMEDIATE SHAFT ASSEMBLY

Install the No. 2intermediate shaft assembly and bolt A, temporarily tighten the bolt A.

4. INSTALL STEERING COLUMN ASSEMBLY

(a) Install the steering column assembly, 2 bolts and nut.


Torque: 26 N·m (260 kgf·cm, 19 ft·lbf)

(b) Connect the connectors.

5. CONNECT COLUMN HOLE COVER

Install the column hole cover with the 5 bolts.

Torque: 8.0 N·m (80 kgf·cm, 69 in.·lbf)

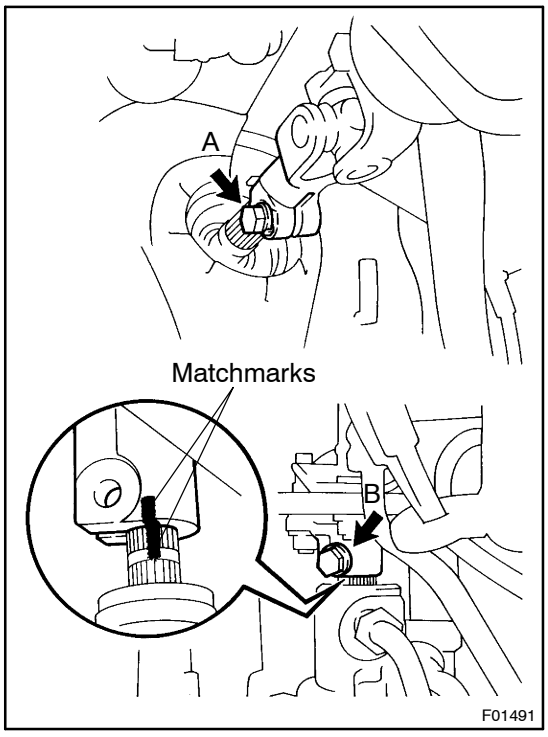

6. CONNECT NO. 2 INTERMEDIATE SHAFT ASSEMBLY

(a) Align the matchmarks on the No. 2 intermediate shaft assembly and worm gear valve shaft.

(b) Install the bolt B.

Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)

(c) Torque the bolt A.

Torque: 35 N·m (360 kgf·cm, 26 ft·lbf)

7. INSTALL HEATER TO REGISTER NO. 2 DUCT

8. INSTALL LOWER FINISH PANEL

(a) Install the lower finish panel, 3 panel set screws and bolt.

(b) Connect the hood lock release lever with the 2 screws.

(c) Connect the fuel lid opener with the 2 screws.

9. w/o Airbag:
INSTALL COMBINATION SWITCH

(a) Install the combination switch with the 3 screws.

(b) Connect the 2 connectors.

10. w/ Airbag:
INSTALL SPIRAL CABLE (See Pub. No. RM585E on page BE–19)

11. w/ Airbag:
INSTALL COMBINATION SWITCH WITH SPIRAL CABLE


(a) Install the combination switch with the 3 screws.

(b) Connect the airbag connector.

(c) Connect the 3 connectors.

12. INSTALL UPPER AND LOWER COLUMN COVERS

Install the upper and lower column covers with the 4 screws.

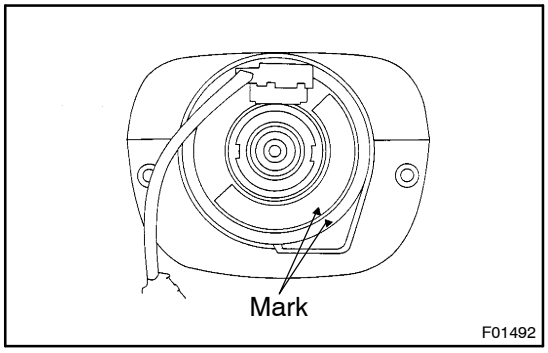

13. w/ Airbag:
CENTER SPIRAL CABLE

(a) Check that the front wheels are facing straight ahead.
(b) Turn the cable counterclockwise by hand until it becomes harder to turn the cable.
(c) Then rotate the cable clockwise about 2.5 turns to align the mark.

HINT:
The cable will rotate about 2.5 turns to either left or right of the center.

14. INSTALL STEERING WHEEL

(a) Align the matchmarks on the steering wheel and shaft.
(b) Install the steering wheel set nut.
Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)
(c) w/ Airbag:
Connect the connector.


15. w/o Airbag:
INSTALL STEERING WHEEL PAD

(a) Connect the connector.
(b) Install the pad.
(c) Install the screw.

16. w/ Airbag:
INSTALL STEERING WHEEL PAD

NOTICE:

- **Make sure the wheel pad is installed to the specified torque.**
- **If the wheel pad has been dropped, or there are cracks, dents or other defects in the case or connector, replace the wheel pad with a new one.**
- **When installing the wheel pad, take care that the wirings do not interfere with other parts and are not pinched between other parts.**
- **Never use arbag parts from another vihicle. When replacing parts, replace with new one.**

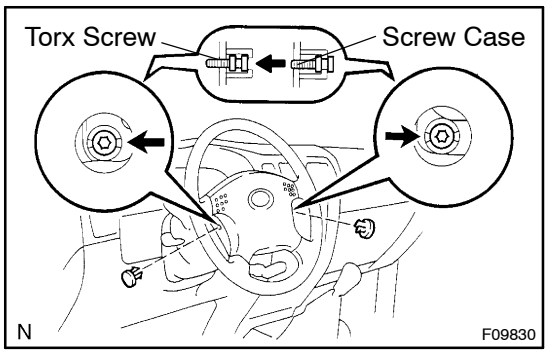

(a) Connect the airbag connector.
(b) Install the wheel pad after confirming that the circumference groove of the torx screw is caught on the screw case.
(c) Using a torx socket wrench, torque the 2 screws.
Torque: 9.0 N·m (90 kgf·cm, 78 in.·lbf)
(d) Install the 2 steering wheel lower No. 2 covers.

17. CHECK STEERING WHEEL CENTER POINT