
ED01M–02

REMOVAL


1. REMOVE INTAKE PIPE (See page EM–44)

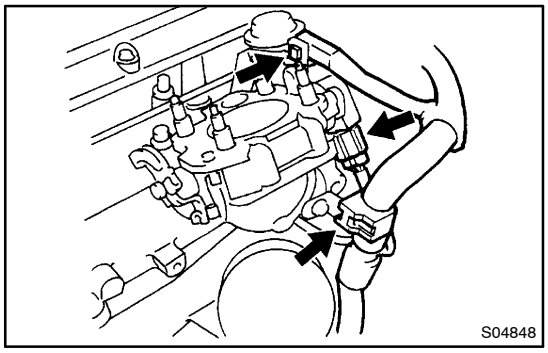

2. REMOVE THROTTLE BODY

(a) Disconnect the throttle position sensor connector.

(b) Disconnect the engine wire clamp and clip from the throttle body.

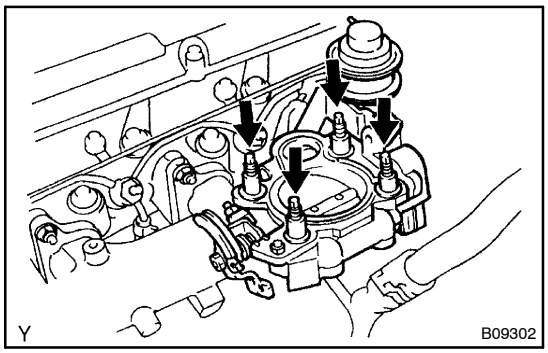

(c) Remove the 4 stud bolts, throttle body and gasket.

HINT:

At the time of installation, place refer to the following item. Place a new gasket on the intake manifold.

Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)