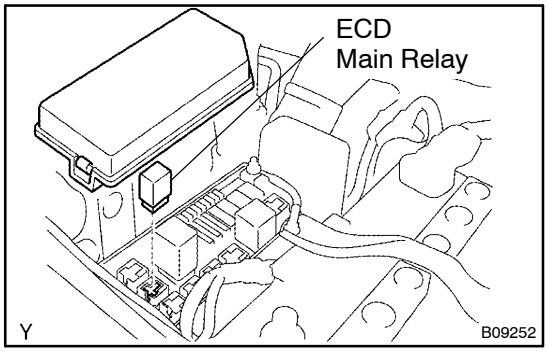



ECD MAIN RELAY

ED01Q–02

INSPECTION

1. REMOVE ENGINE ROOM R/B COVER

2. REMOVE ECD MAIN RELAY (Marking: ECD)

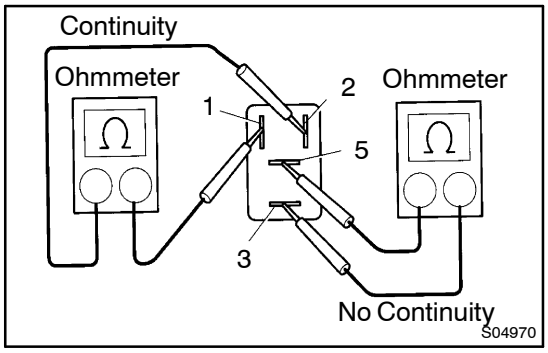

3. INSPECT ECD MAIN RELAY


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

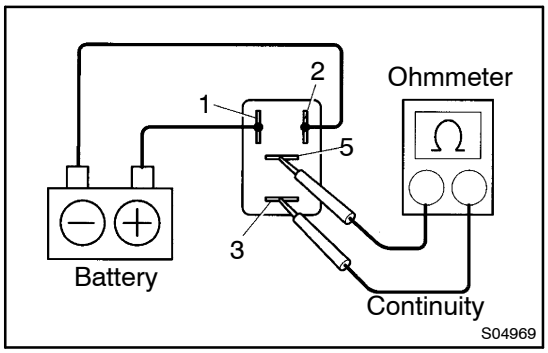

(b) Inspect the relay operation.

(1) Apply battery voltage across terminals 1 and 2.

(2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

4. REINSTALL ECD MAIN RELAY

5. REINSTALL ENGINE ROOM R/B COVER