
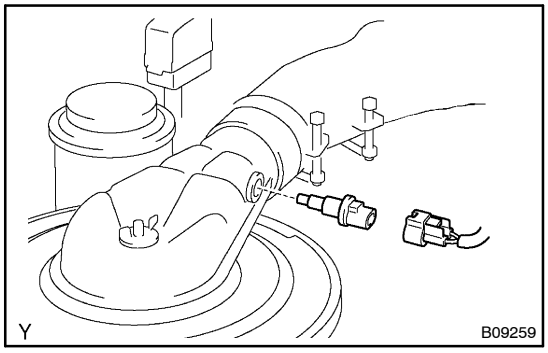


INTAKE AIR TEMPERATURE SENSOR

INSPECTION

ED01V–02

1. REMOVE INTAKE AIR TEMPERATURE SENSOR

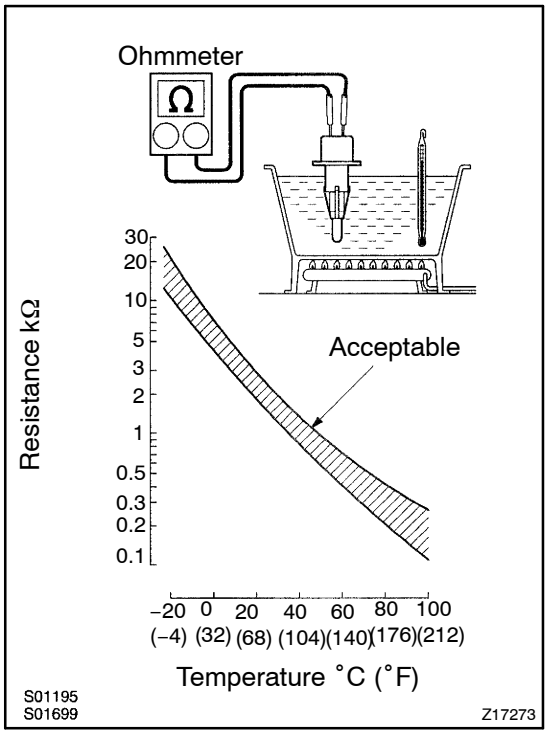

2. INSPECT INTAKE AIR TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between terminals.

Resistance: Refer to the chart graph

If the resistance is not as specified, replace the sensor.

3. REINSTALL INTAKE AIR TEMPERATURE SENSOR