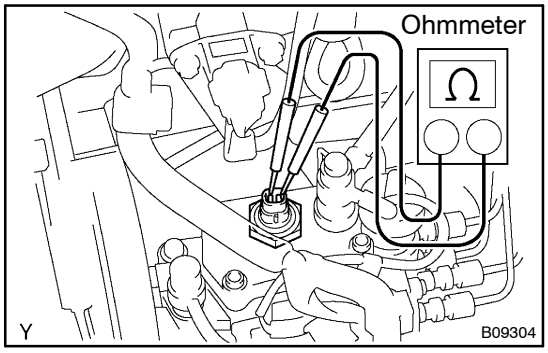


ENGINE SPEED SENSOR

ED03M–01

INSPECTION

INSPECT ENGINE SPEED SENSOR

(a) Disconnect the sensor connector.

(b) Using an ohmmeter, measure the resistance between terminals.

Resistance: 205 – 255 Ω at 20°C (68°F)

If the resistance is not specified, replace the injection pump assembly (see page FU–16).

(c) Reconnect the sensor connector.