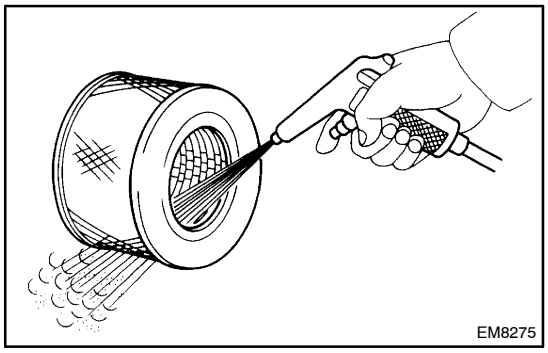
AIR FILTER

EM0QH–02

INSPECTION

1. PAPER FILTER TYPE:

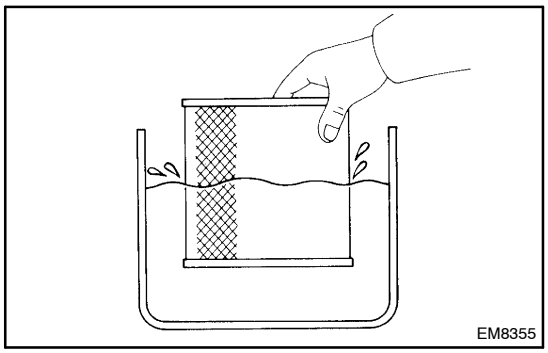
(a) Inspect the air filter.
Visually check that the filter element is not excessively dirty, damaged or oily.


EM8275

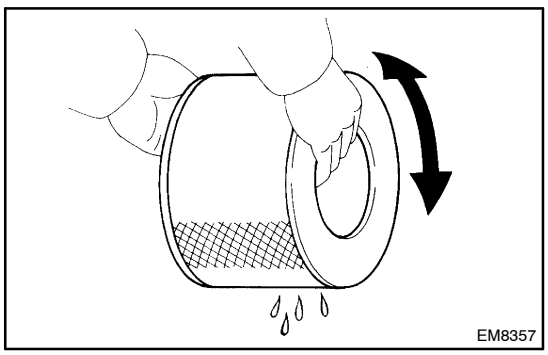
(b) Clean the air filter.
Clean the filter element with compressed air.
First blow from the inside thoroughly. Then blow the outside of the filter element.

2. WASHABLE TYPE:

(a) Inspect the air filter.
Visually check that the filter element is not excessively dirty, damaged or oily.


EM8355

(b) Clean the air filter.
(1) Blow dirt off in the filter element with compressed air.
(2) Submerge the filter element in the water and agitate it up and down more than 10 times.
(3) Repeat rinsing in clean water until rinsing water is clear.


EM8357

(4) Remove excess water by shaking the filter element or blowing with compressed air.

NOTICE:

Do not beat or drop filter element.

(5) Wipe off dust on the air cleaner case interior.