


CYLINDER HEAD

COMPONENTS

EM15C–01

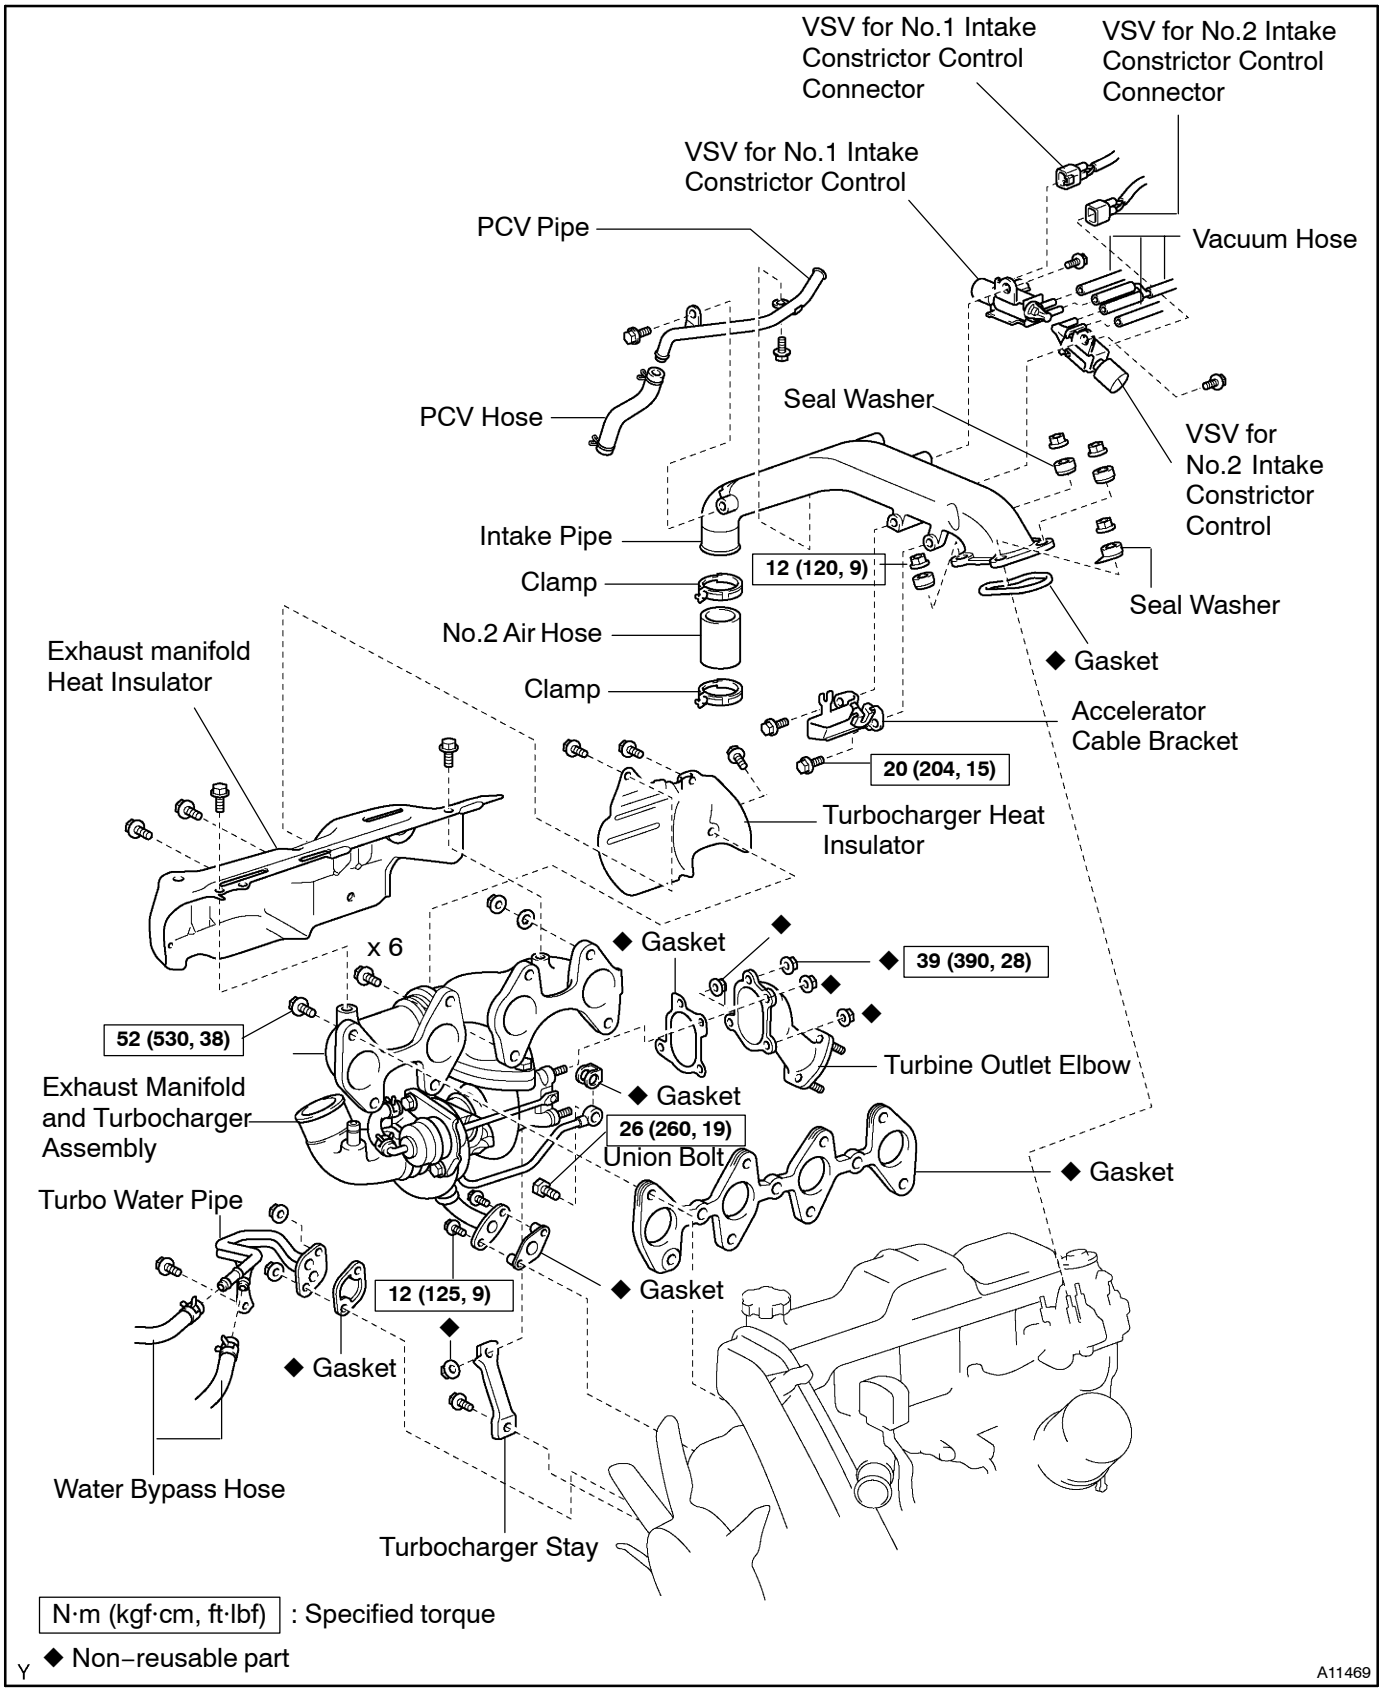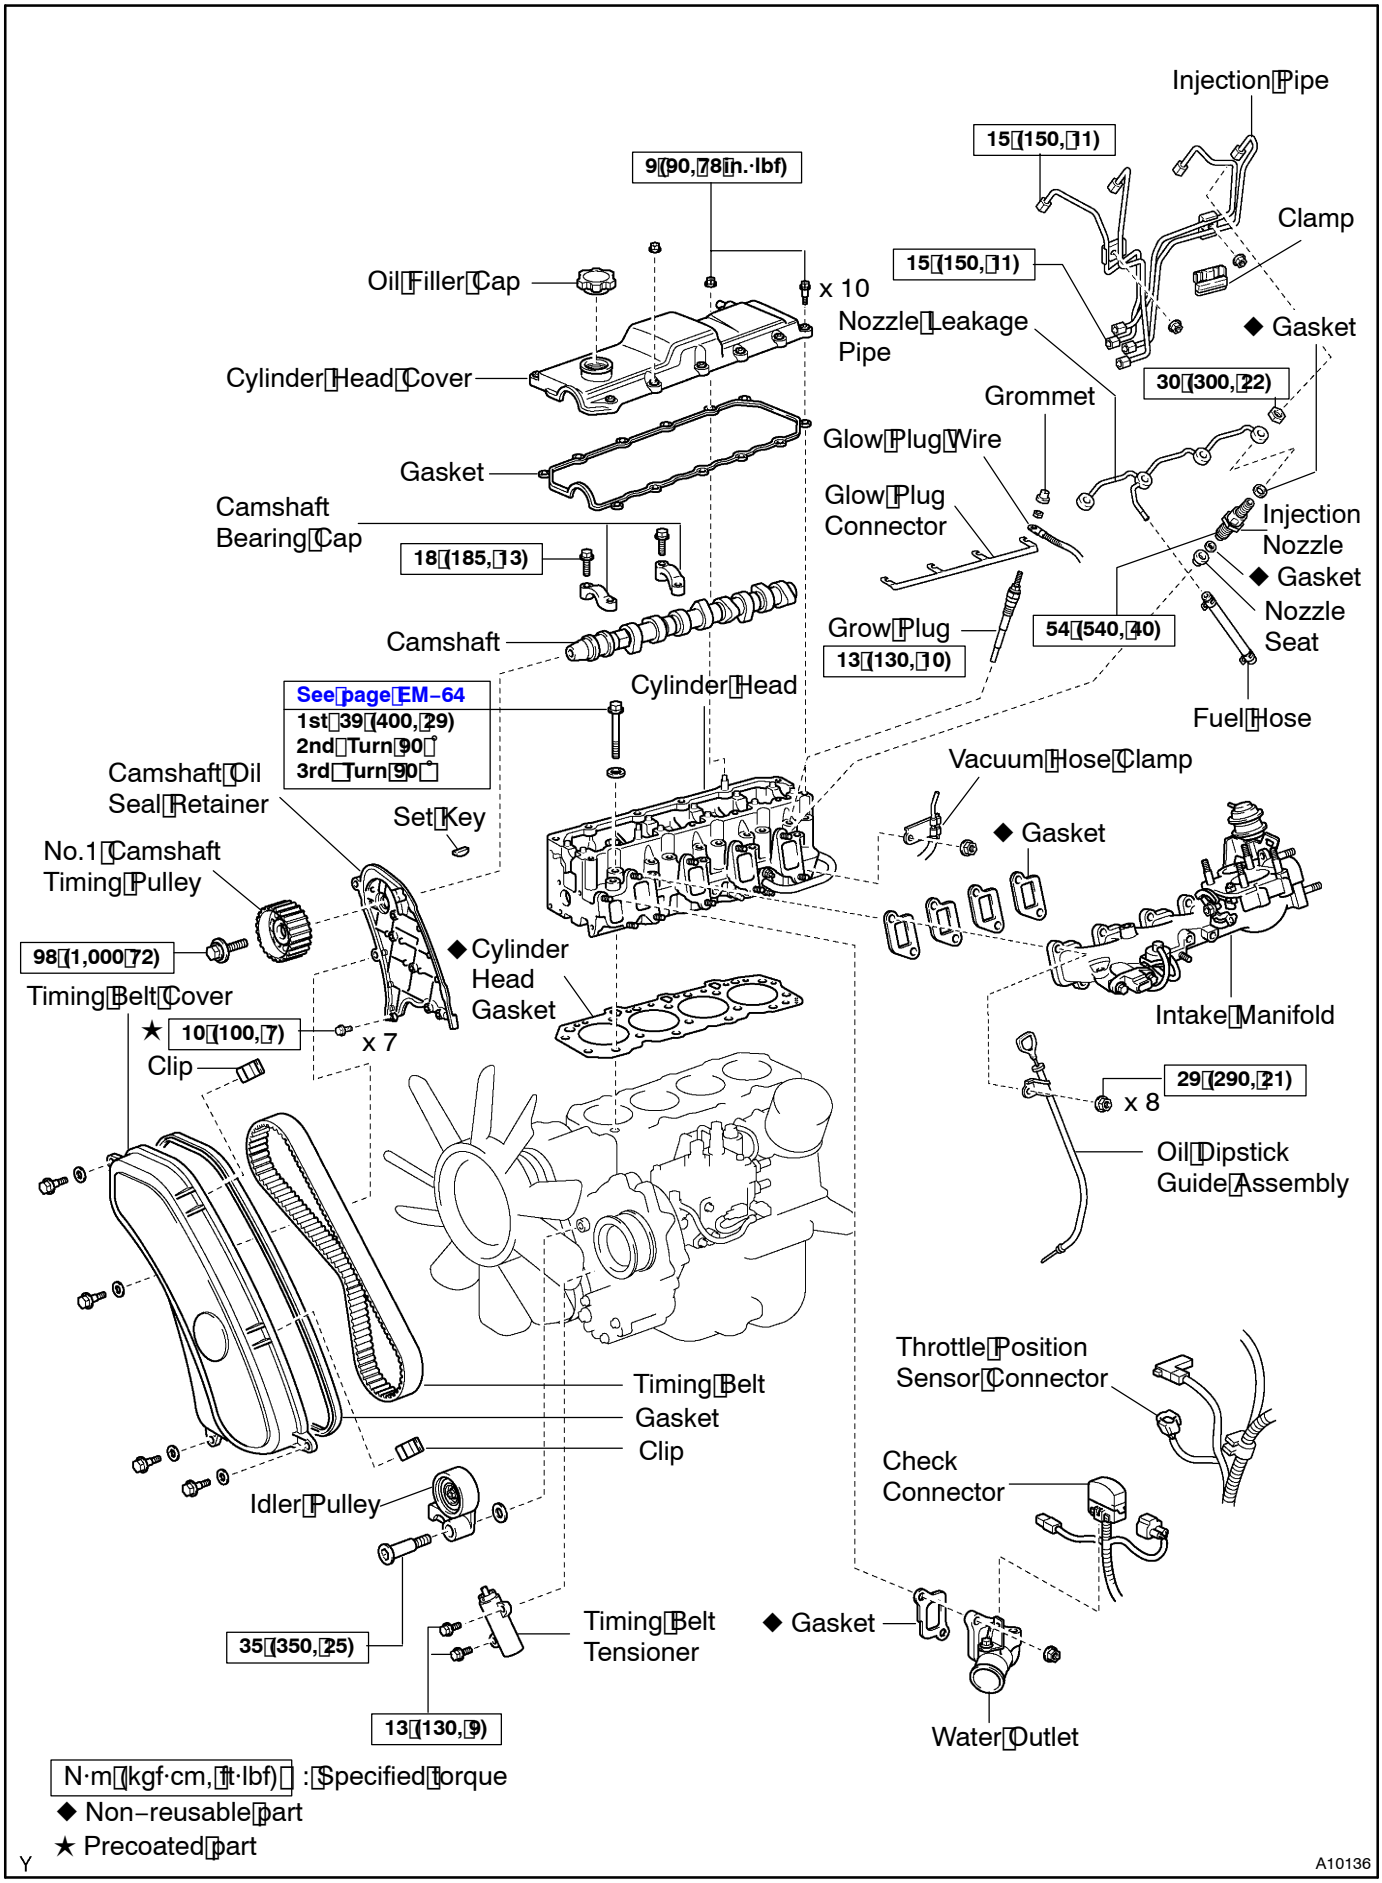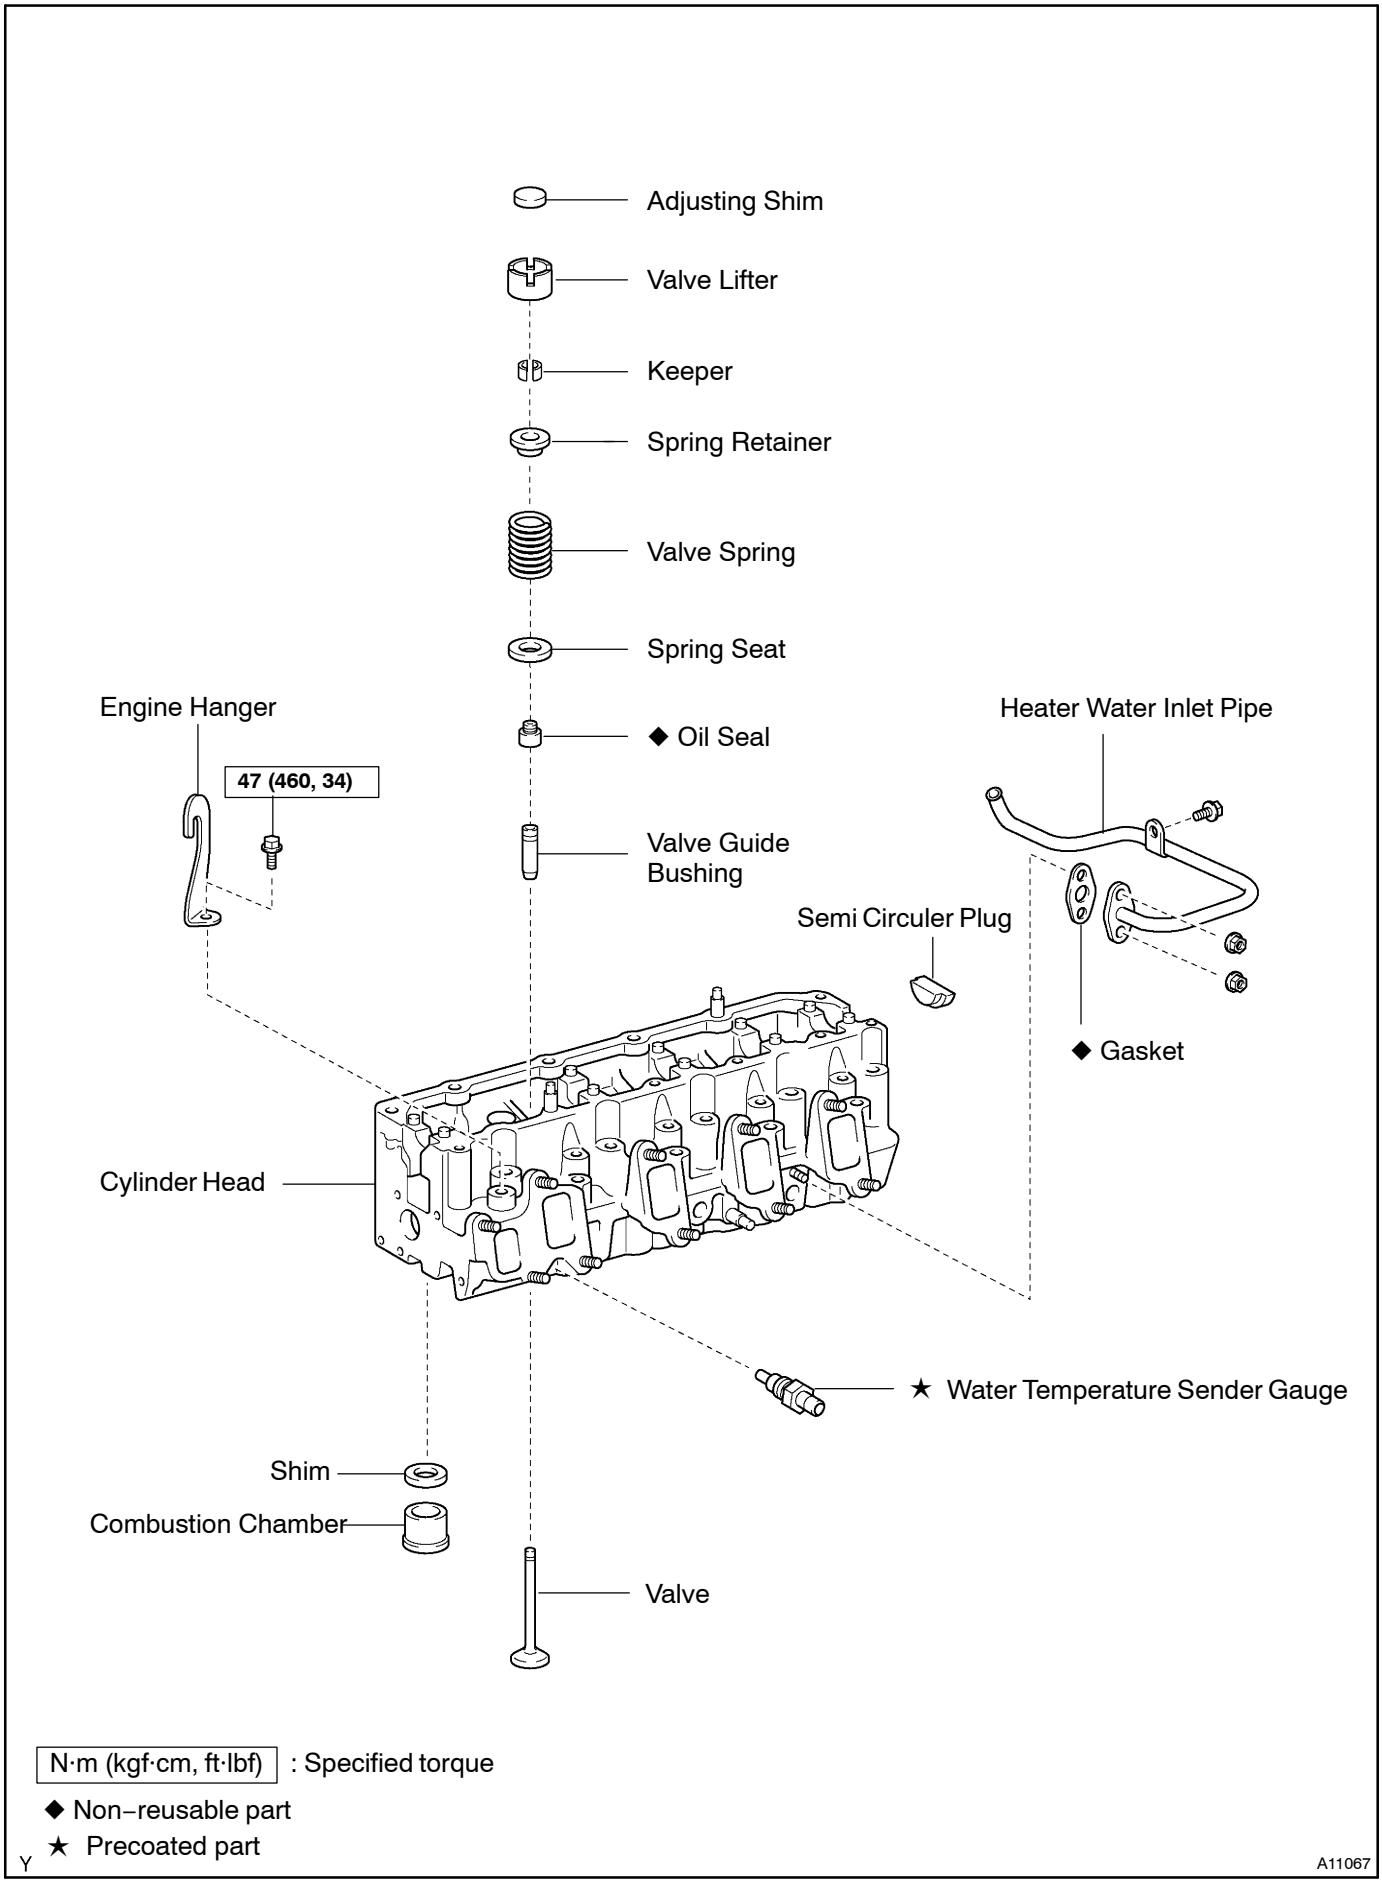


Injection Pipe
15 (150, 11)
9 (90, 78 in.·lbf)
Clamp
15 (150, 11)
x 10
Oil Filler Cap
Nozzle Leakage Pipe
◆ Gasket
Cylinder Head Cover
30 (300, 22)
Grommet
Gasket
Glow Plug Wire
Glow Plug Connector
Camshaft Bearing Cap
Injection Nozzle
◆ Gasket
18 (185, 13)
Nozzle Seat
Camshaft
Grow Plug
54 (540, 40)
13 (130, 10)
Fuel Hose
See page EM–64
1st 39 (400, 29)
2nd Turn 90°
3rd Turn 90°
Cylinder Head
Vacuum Hose Clamp
Camshaft Oil Seal Retainer
Set Key
◆ Gasket
No.1 Camshaft Timing Pulley
98 (1,000 72)
◆ Cylinder Head Gasket
Timing Belt Cover
Intake Manifold
★ 10 (100, 7)
x 7
Clip
29 (290, 21)
x 8
Oil Dipstick Guide Assembly
Throttle Position Sensor Connector
Timing Belt
Gasket
Clip
Check Connector
Idler Pulley
35 (350, 25)
Timing Belt Tensioner
◆ Gasket
13 (130, 9)
Water Outlet
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
Y
A10136


Adjusting Shim
Valve Lifter
Keeper
Spring Retainer
Valve Spring
Spring Seat
◆ Oil Seal
Valve Guide Bushing
Engine Hanger
47 (460, 34)
Heater Water Inlet Pipe
Semi Circuler Plug
◆ Gasket
Cylinder Head
★ Water Temperature Sender Gauge
Shim
Combustion Chamber
Valve
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part
Y
A11067