
FU06T–01

DISASSEMBLY

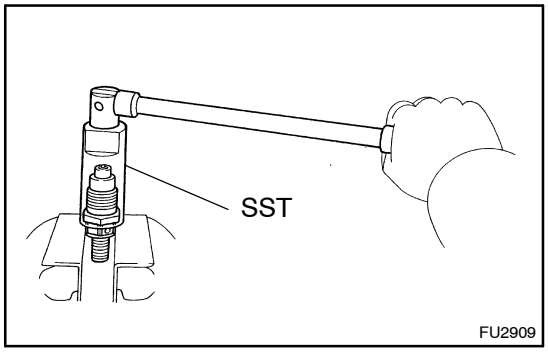

DISASSEMBLE INJECTION NOZZLES

(a) Using SST, remove the nozzle holder retaining nut.
SST 09268–64010 (09268–64020)

NOTICE:

When disassembling the nozzle, be careful not to drop the inner parts.

(b) Remove the pressure spring, shim, pressure pin, distance piece and the nozzle assembly.