

LU0IA–01

DISASSEMBLY

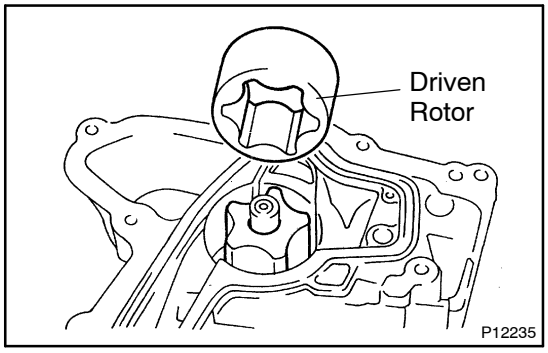

1. REMOVE DRIVE ROTOR

Pull out the driven rotor.

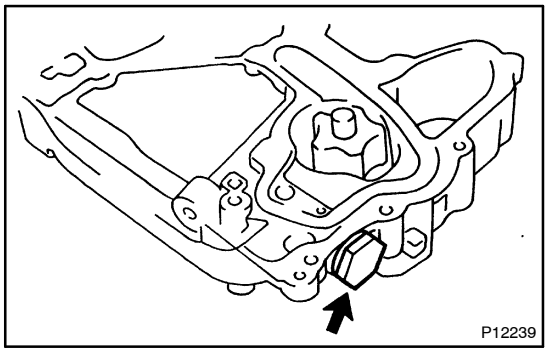

2. REMOVE RELIEF VALVE

Remove the plug, gasket, spring and relief valve.