

OIL COOLER

COMPONENTS

LU0I3–01

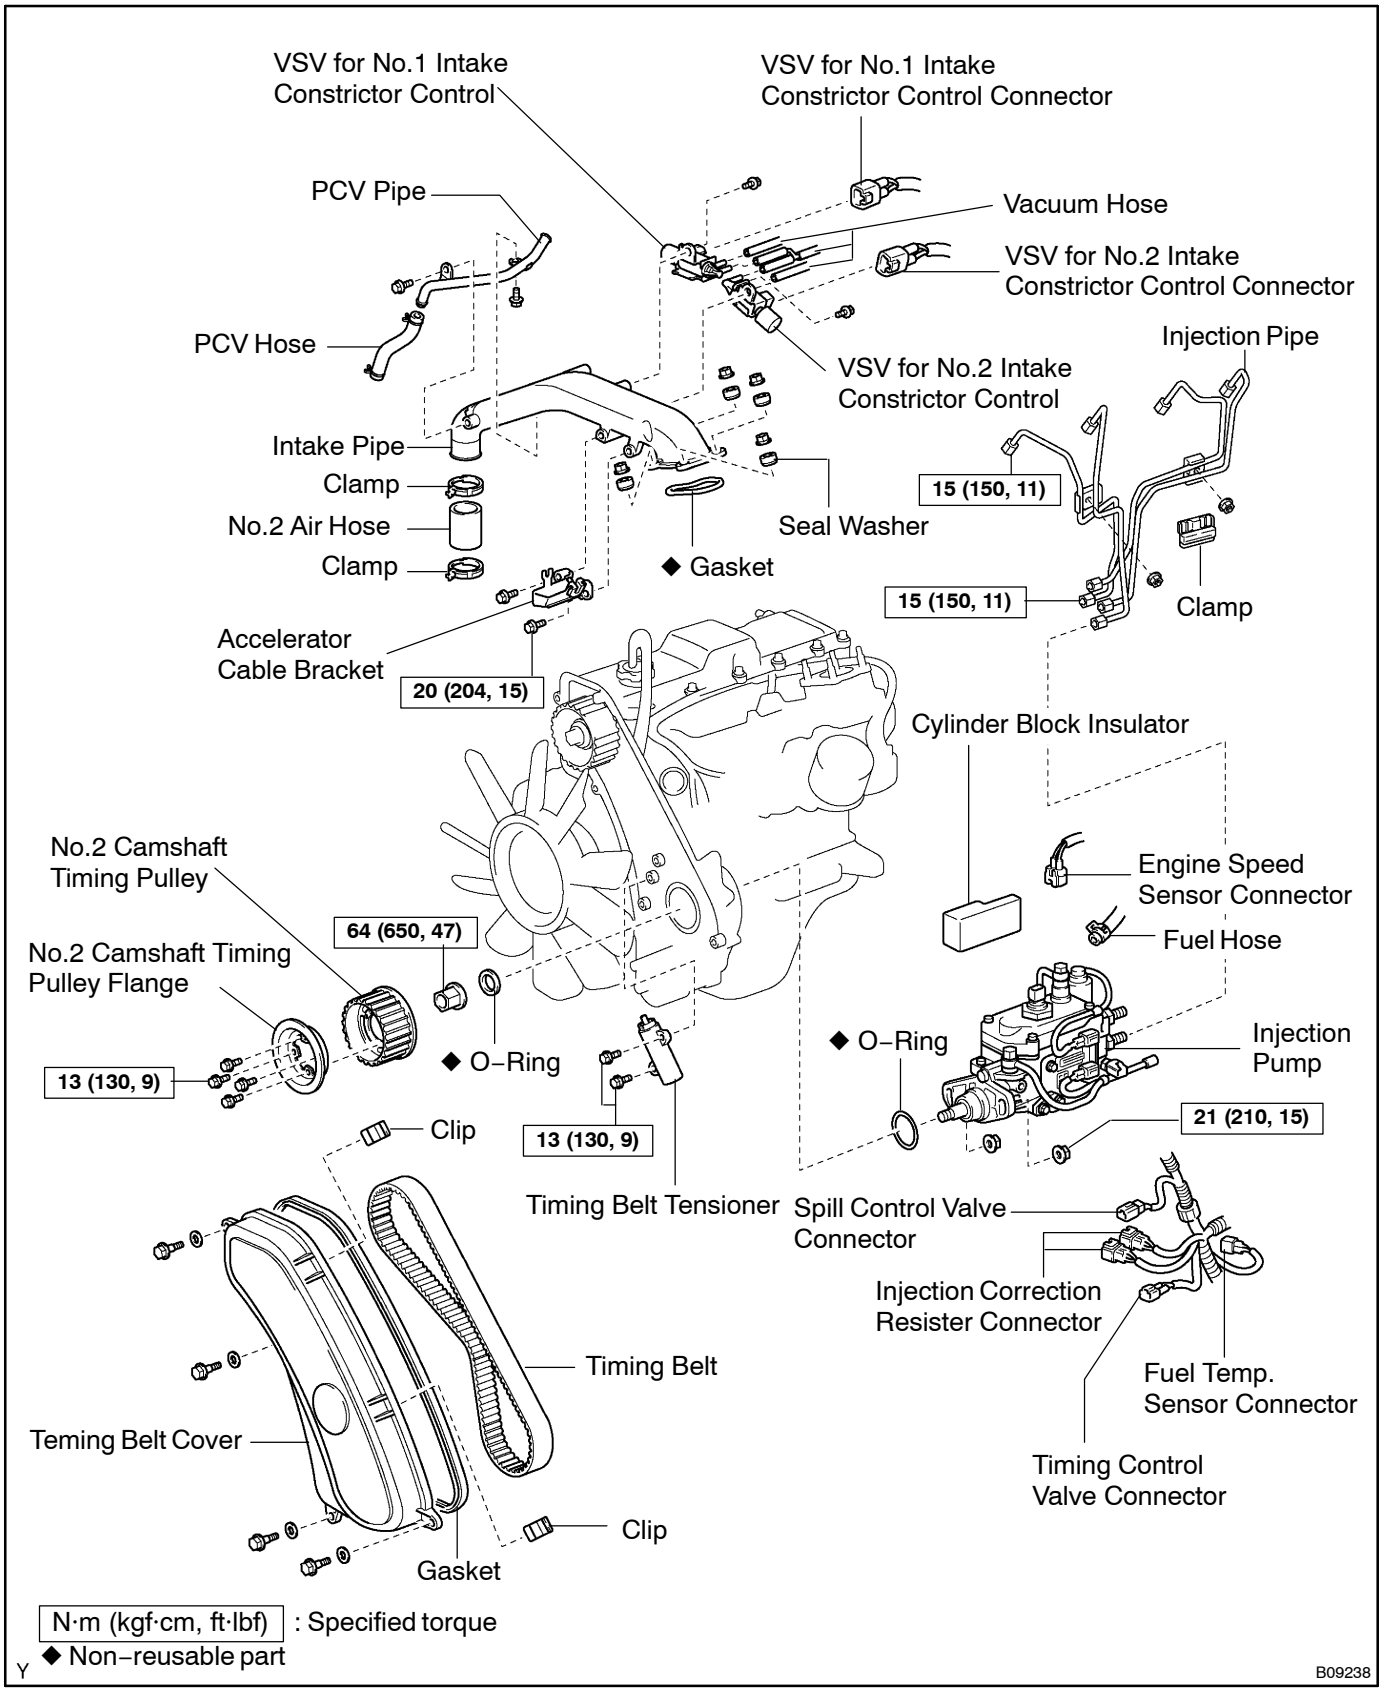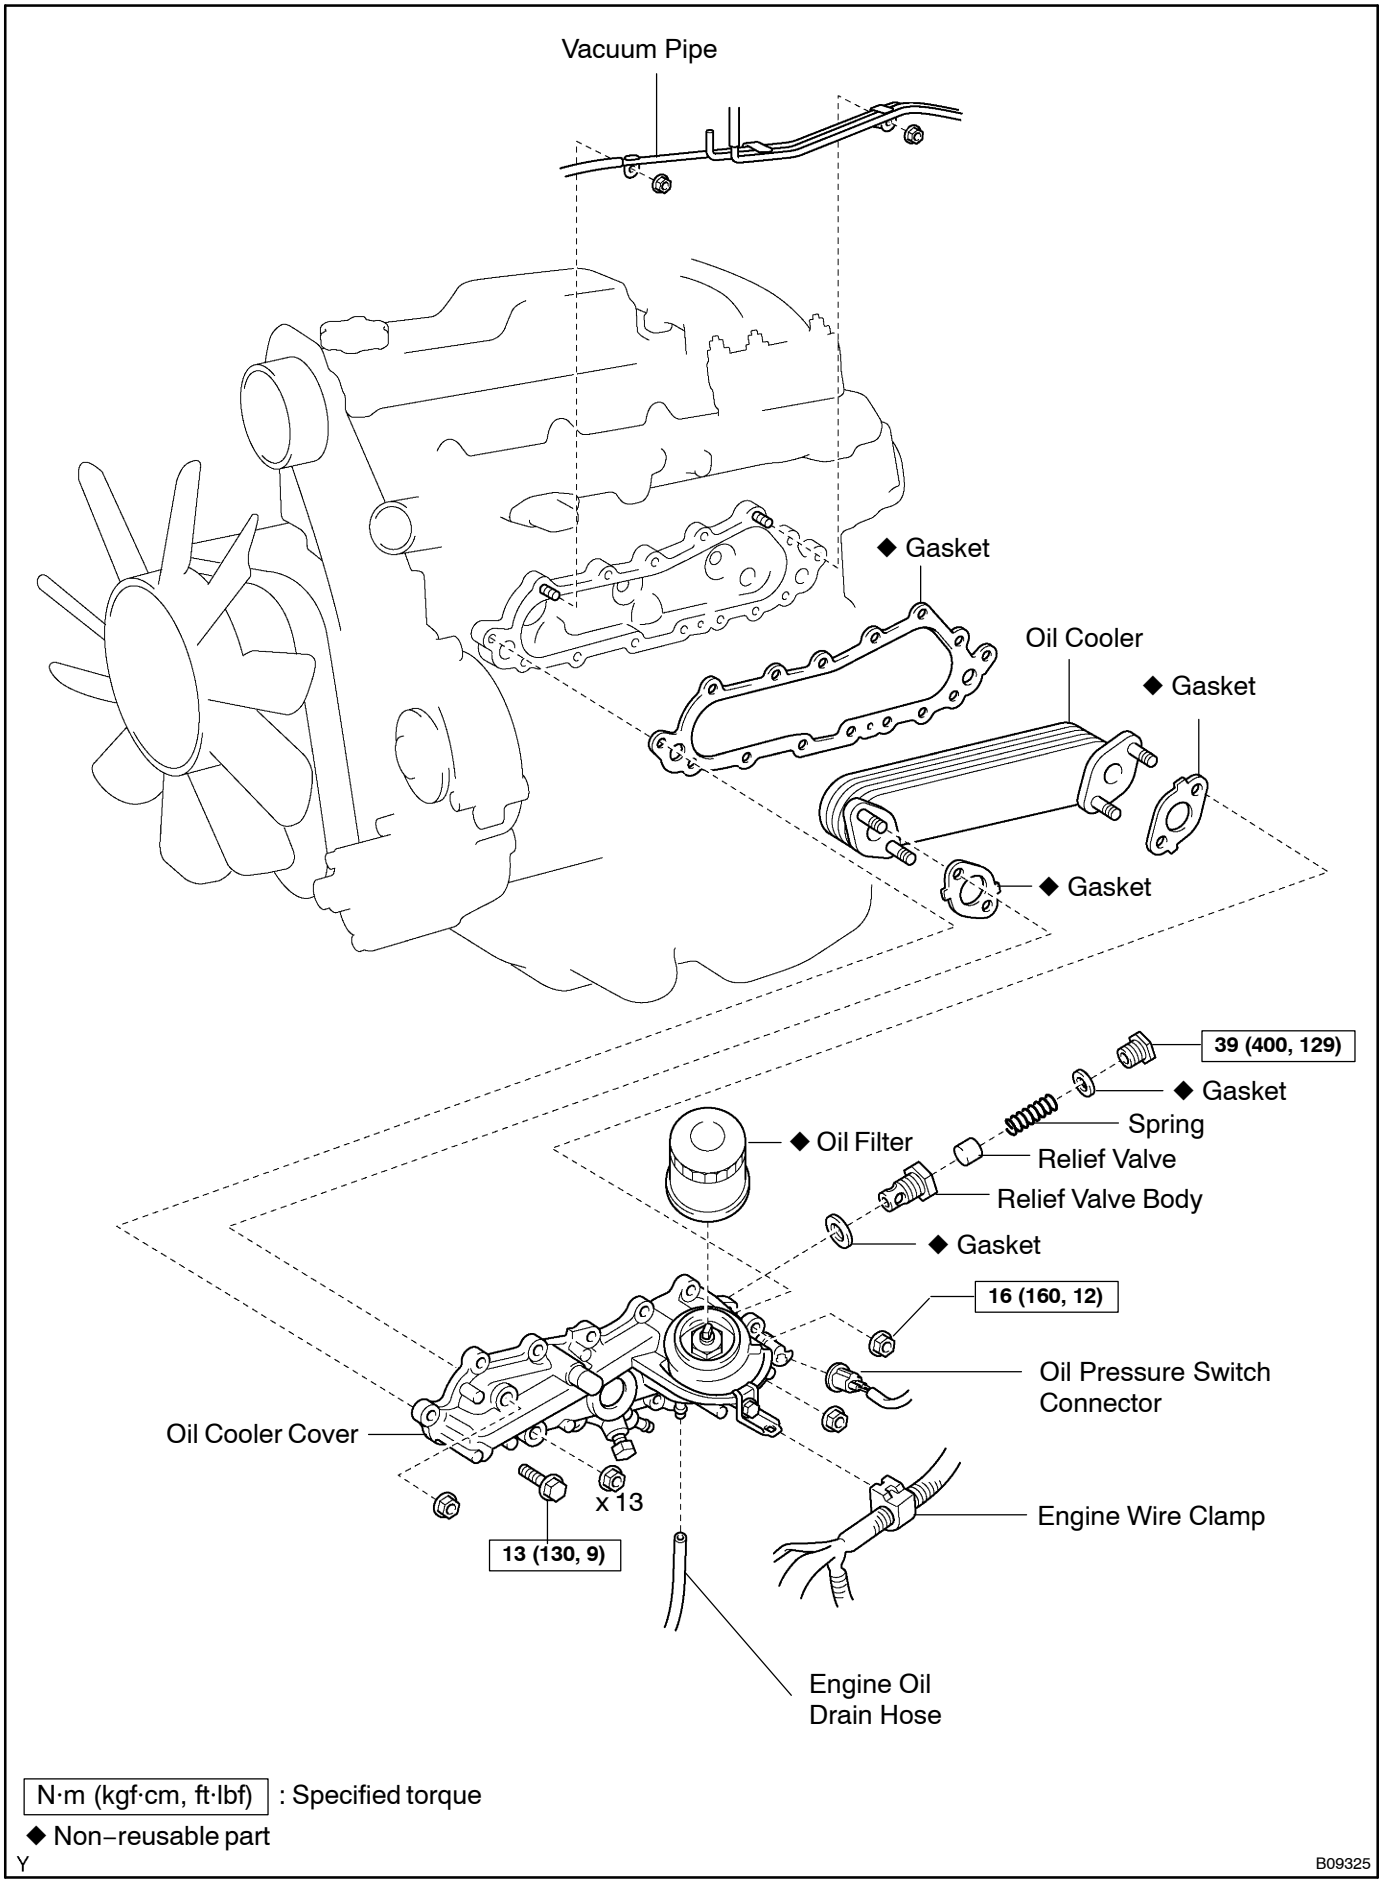


Vacuum Pipe
◆ Gasket
Oil Cooler
◆ Gasket
◆ Gasket
39 (400, 129)
◆ Gasket
Spring
◆ Oil Filter
Relief Valve
Relief Valve Body
◆ Gasket
16 (160, 12)
Oil Pressure Switch Connector
Oil Cooler Cover
x 13
Engine Wire Clamp
13 (130, 9)
Engine Oil Drain Hose
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Y
B09325