
LU0I7–01

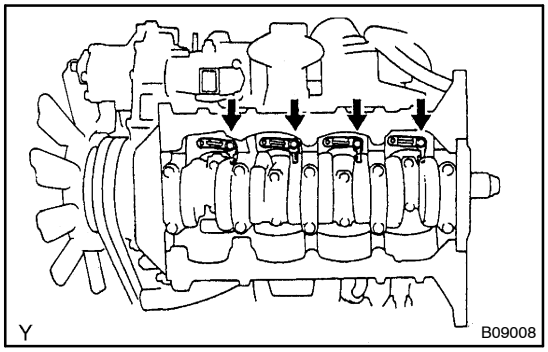


# REMOVAL

1. **DRAIN ENGINE OIL**
2. **REMOVE OIL PAN (See page LU–7)**
3. **REMOVE CHECK VALVE AND OIL NOZZLES**

Remove the 4 check valves and oil nozzles.