
COMBINATION METER

CIRCUIT

BE1UM–02

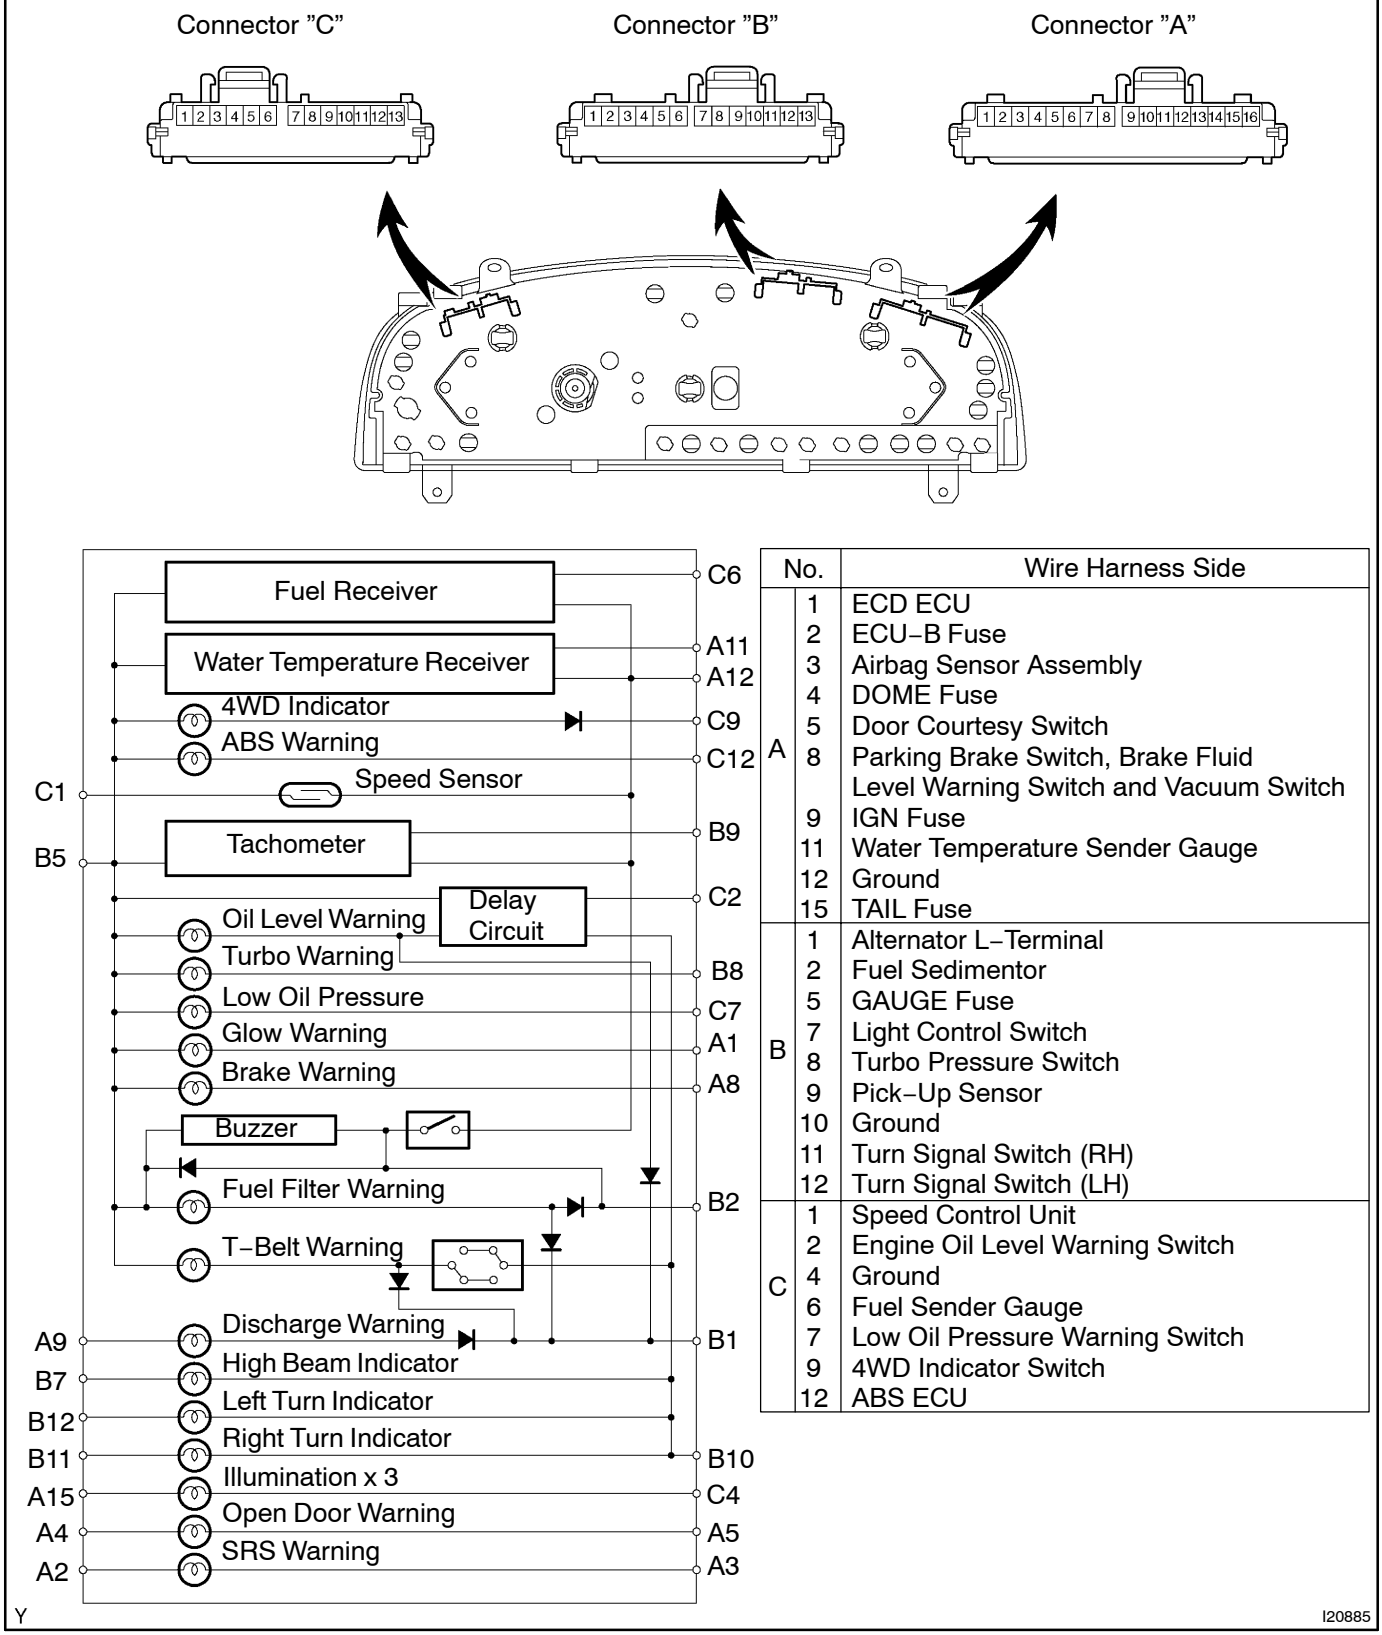

No.		Wire Harness Side
A	1	ECD ECU
	2	ECU–B Fuse
	3	Airbag Sensor Assembly
	4	DOME Fuse
	5	Door Courtesy Switch
	8	Parking Brake Switch, Brake Fluid Level Warning Switch and Vacuum Switch
	9	IGN Fuse
	11	Water Temperature Sender Gauge
	12	Ground
	15	TAIL Fuse
B	1	Alternator L–Terminal
	2	Fuel Sedimentor
	5	GAUGE Fuse
	7	Light Control Switch
	8	Turbo Pressure Switch
	9	Pick–Up Sensor
	10	Ground
	11	Turn Signal Switch (RH)
	12	Turn Signal Switch (LH)
C	1	Speed Control Unit
	2	Engine Oil Level Warning Switch
	4	Ground
	6	Fuel Sender Gauge
	7	Low Oil Pressure Warning Switch
	9	4WD Indicator Switch
	12	ABS ECU

I20885