

BR0V4–02

REMOVAL

REMOVE VACUUM PUMP

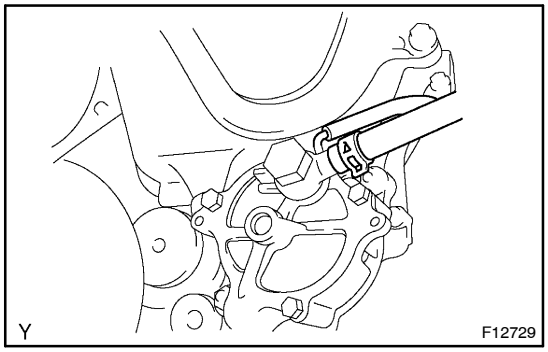

(a) Using pliers, disconnect the 2 hoses from the vacuum pump.

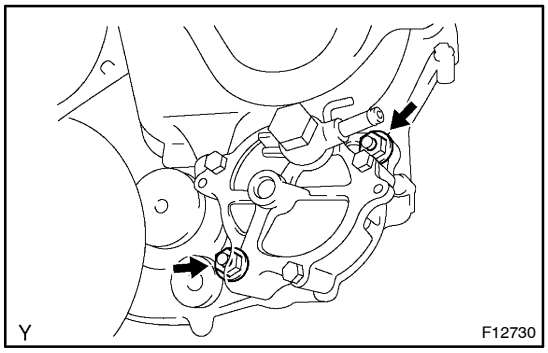

(b) Remove the 2 nuts and pump from the engine.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

(c) Remove the 2 O–rings.