
CL0BV–01

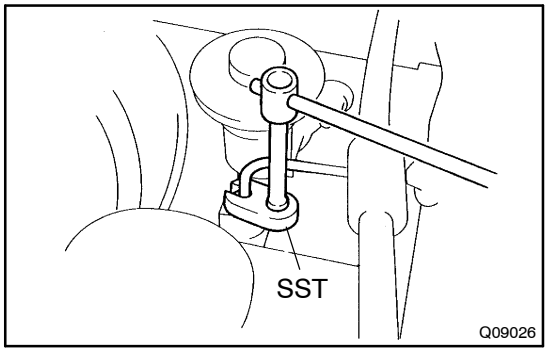

REMOVAL

1. DRAW OUT FLUID WITH SYRINGE

2. DISCONNECT CLUTCH LINE

Using SST, disconnect the line. Use a container to catch the fluid.

SST 09023–00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

3. REMOVE CLIP AND CLEVIS PIN

4. REMOVE MOUNTING NUTS AND PULL OUT MASTER CYLINDER

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)