
CL0C1–01

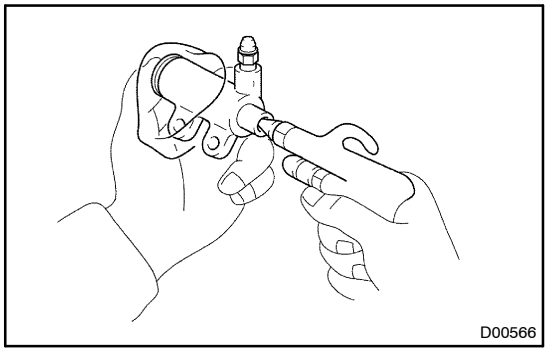

DISASSEMBLY

1. PULL OUT BOOT WITH PUSH ROD

2. REMOVE PISTON

Using compressed air, remove the piston with the spring from the cylinder.