
# MANUAL TRANSMISSION ASSEMBLY


## COMPONENTS

MT0DN–01

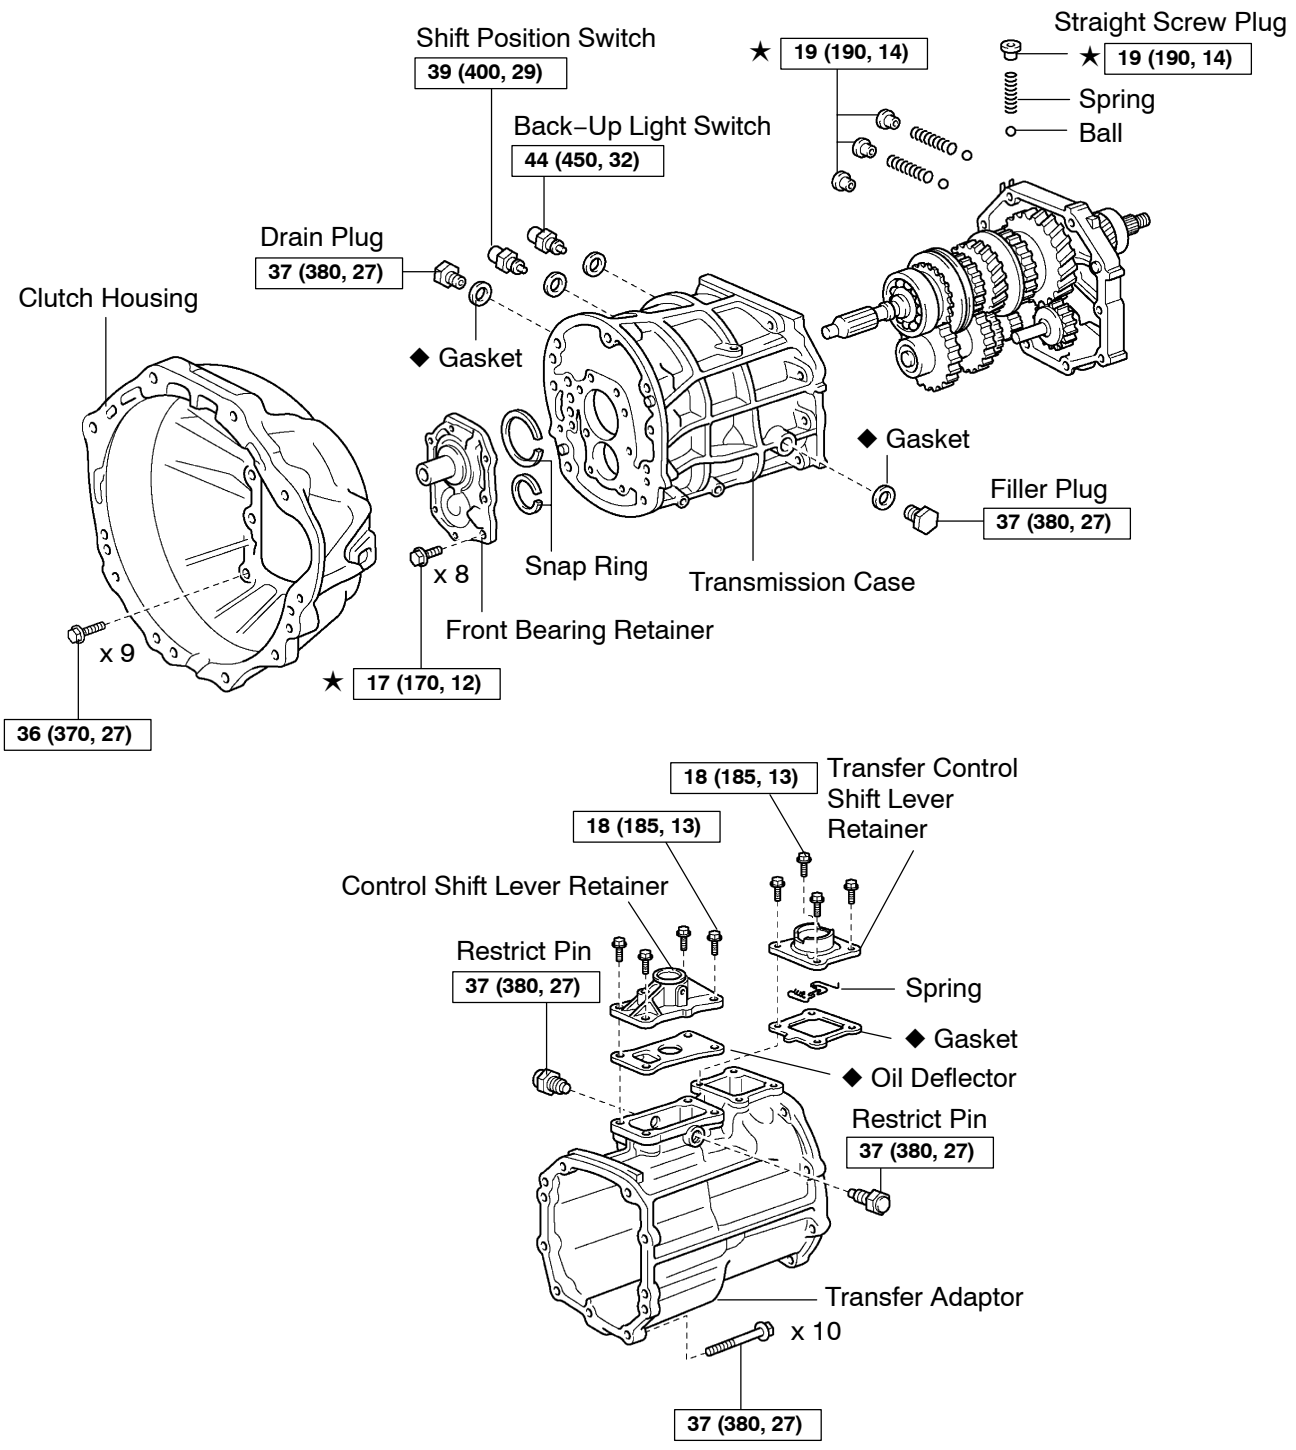


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
★ Precoated part

D10275

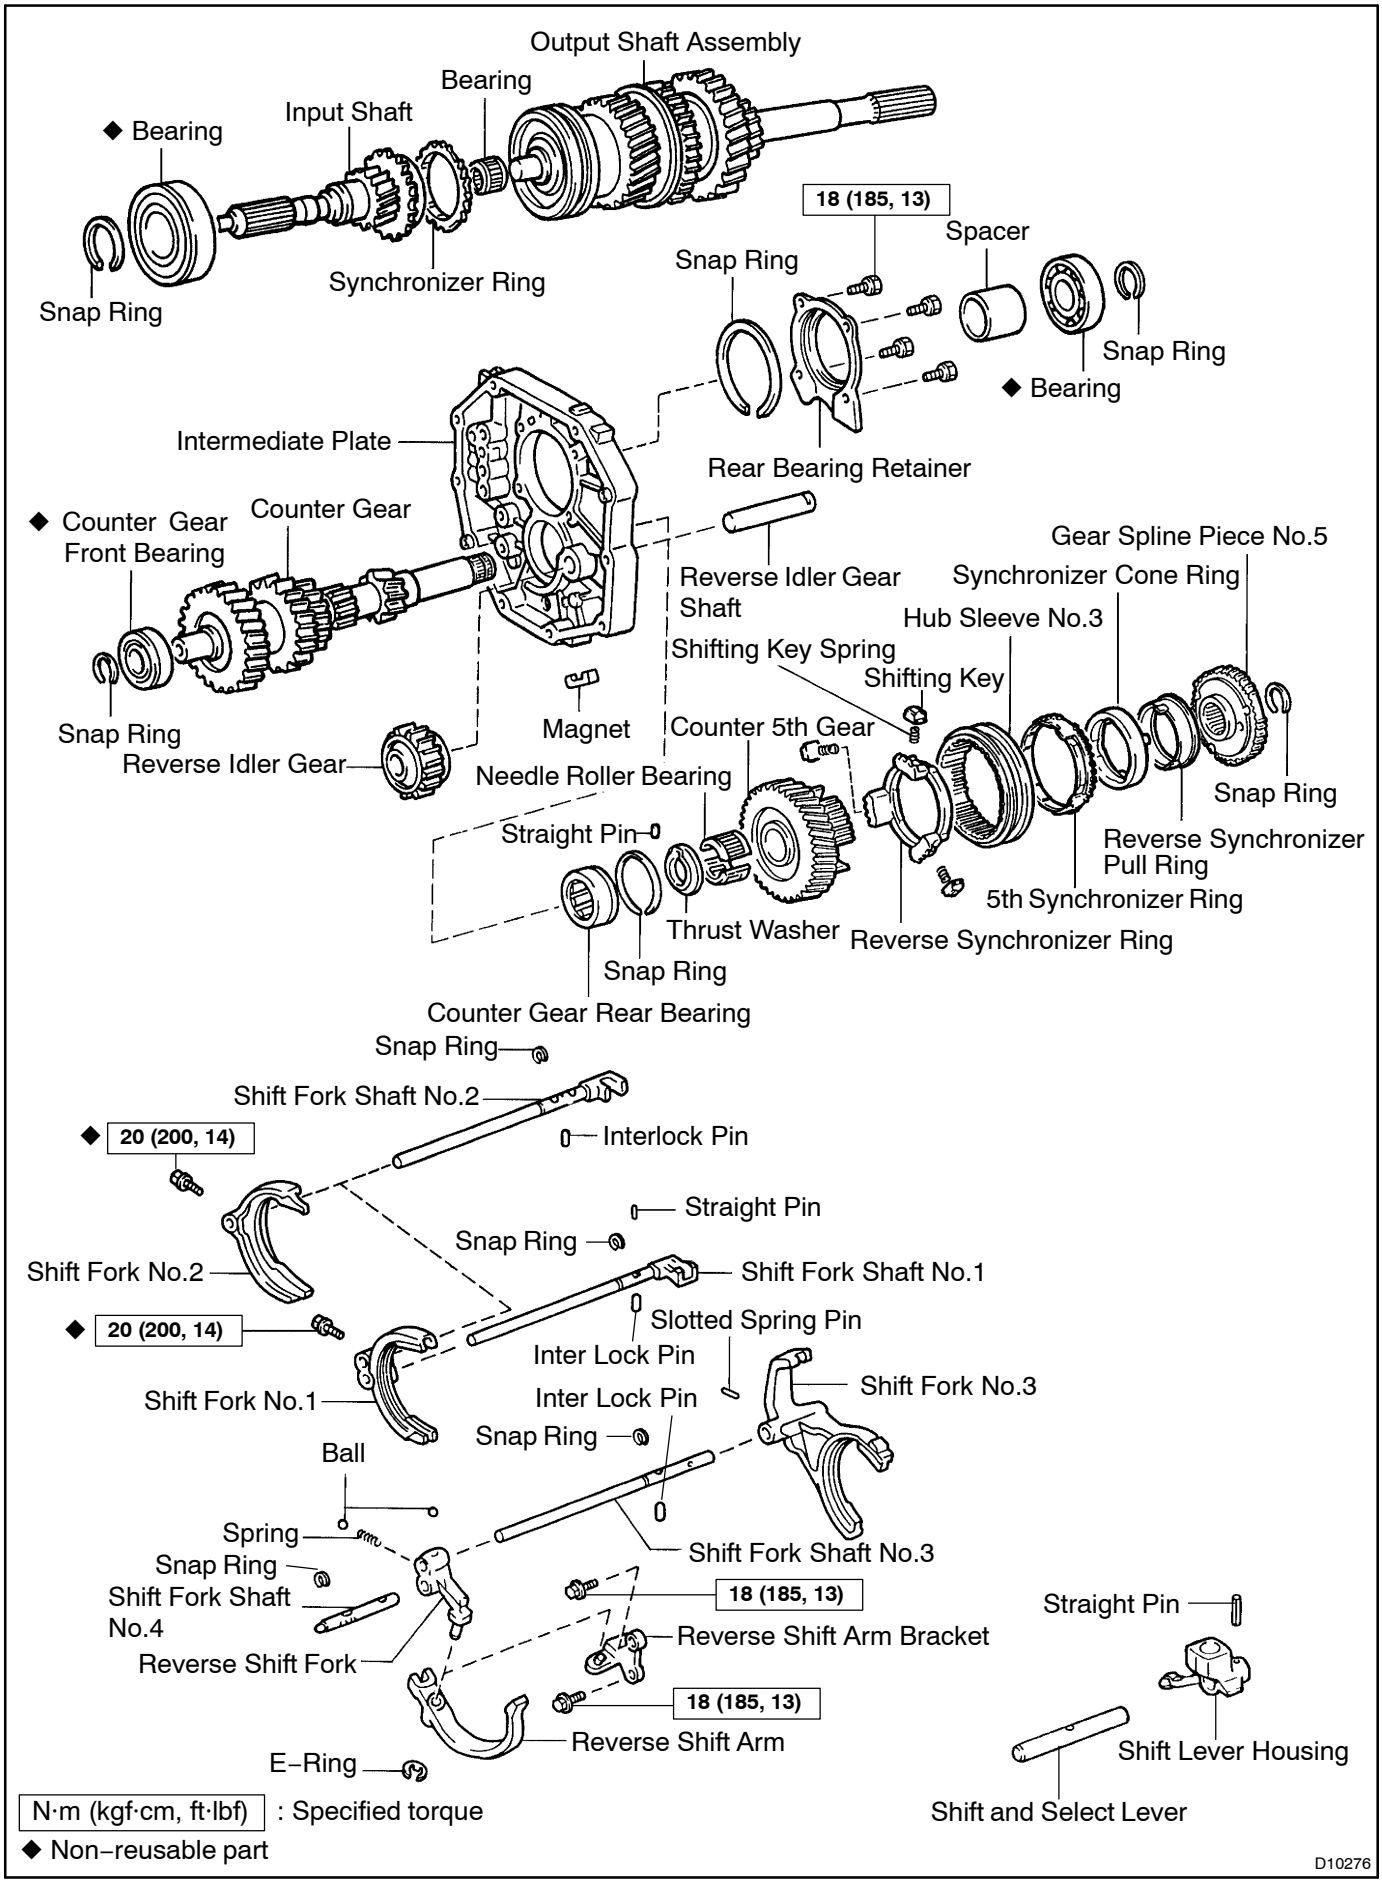
Output Shaft Assembly
Bearing
Input Shaft
◆ Bearing
Snap Ring
Synchronizer Ring
18 (185, 13)
Spacer
Snap Ring
Snap Ring
◆ Bearing
Intermediate Plate
Rear Bearing Retainer
◆ Counter Gear Front Bearing
Counter Gear
Reverse Idler Gear Shaft
Gear Spline Piece No.5
Synchronizer Cone Ring
Hub Sleeve No.3
Shifting Key Spring
Shifting Key
Snap Ring
Reverse Idler Gear
Magnet
Counter 5th Gear
Needle Roller Bearing
Snap Ring
Reverse Synchronizer Pull Ring
Straight Pin
5th Synchronizer Ring
Thrust Washer
Reverse Synchronizer Ring
Snap Ring
Counter Gear Rear Bearing
Snap Ring
Shift Fork Shaft No.2
◆ 20 (200, 14)
Interlock Pin
Straight Pin
Snap Ring
Shift Fork No.2
Shift Fork Shaft No.1
◆ 20 (200, 14)
Slotted Spring Pin
Inter Lock Pin
Shift Fork No.3
Shift Fork No.1
Inter Lock Pin
Snap Ring
Ball
Spring
Shift Fork Shaft No.3
Snap Ring
Shift Fork Shaft No.4
18 (185, 13)
Straight Pin
Reverse Shift Fork
Reverse Shift Arm Bracket
18 (185, 13)
Reverse Shift Arm
Shift Lever Housing
E–Ring
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
Shift and Select Lever
D10276