
MT0DY–01


DISASSEMBLY

REMOVE HUB SLEEVE NO. 3, SHIFTING KEY AND SPRING FROM SYNCHRONIZER RING

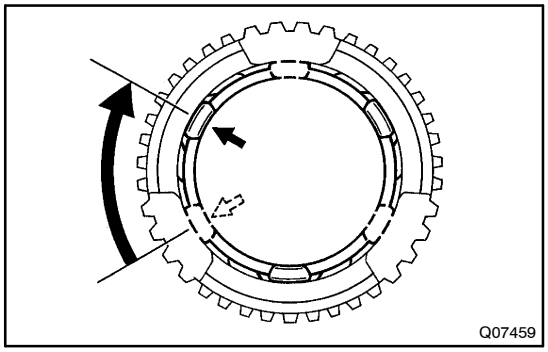


(a) Remove the synchronizer ring assembly from the hub sleeve No. 3.

(b) Turn the reverse synchronizer pull ring.

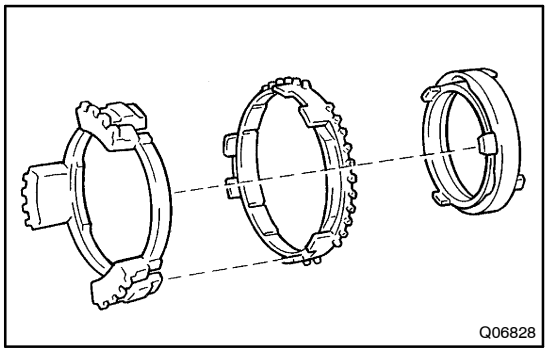

(c) Remove the reverse synchronizer ring and 5th synchronizer ring from the synchronizer pull ring and cone ring.

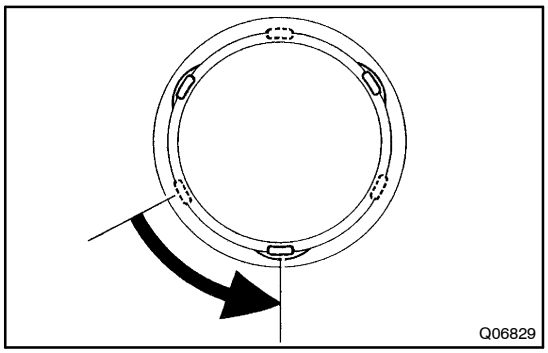

(d) Turn the reverse synchronizer pull ring, separate the pull ring and cone ring.

(e) Push the shifting key and spring, and remove the 3 shifting keys and springs to the reverse synchronizer ring.