PRE–HEATING SYSTEM

ST0ML–01

INSPECTION

1. INSPECT LIGHTING TIME OF GLOW INDICATOR LIGHT


Turn the ignition switch ON, measure the lighting time.

Light lighting time (T1): Refer to the chart graph

2. INSPECT AFTER GLOW TIME

Turn the ignition switch ON, measure the time battery voltage is applied to terminal SREL of the preheating timer.

After glow time (T2): Refer to the chart graph

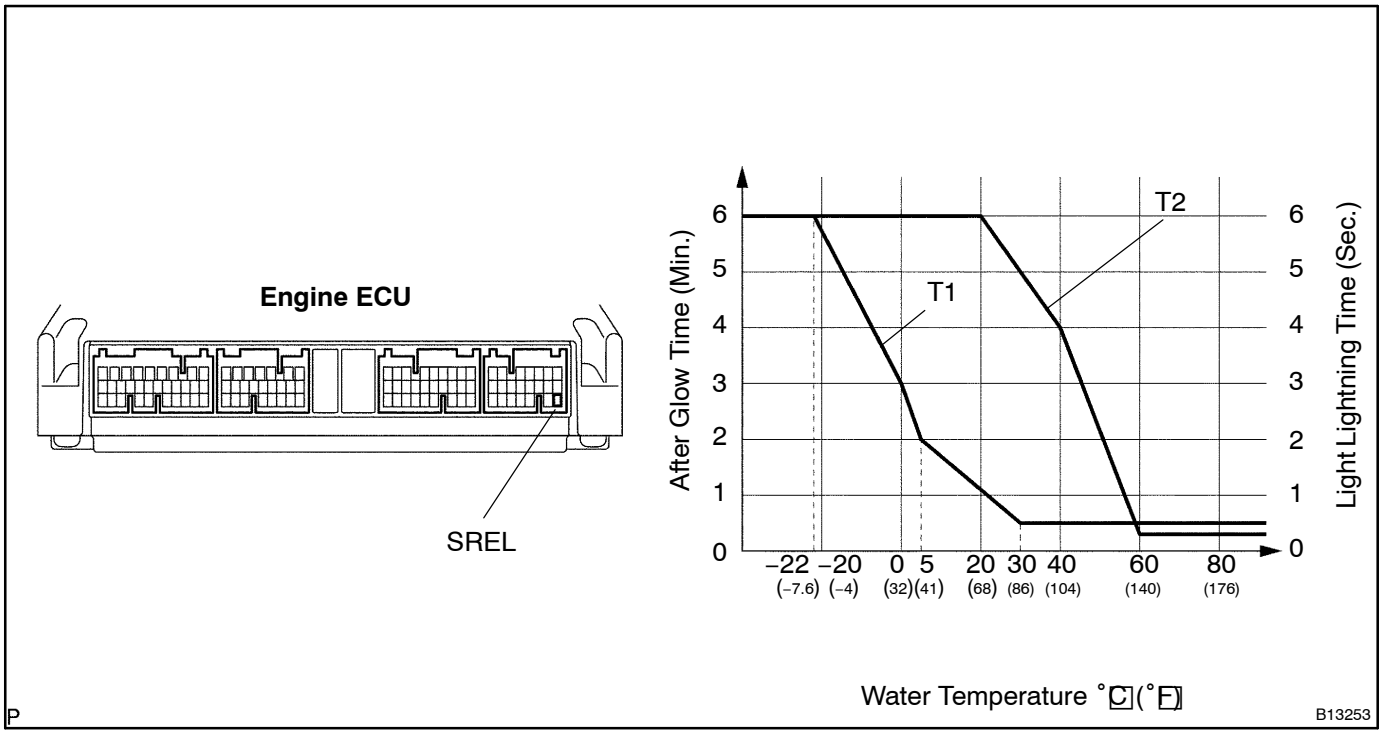

3. INSPECT ENGINE ECU (See page DI–18)