
ED04I–01

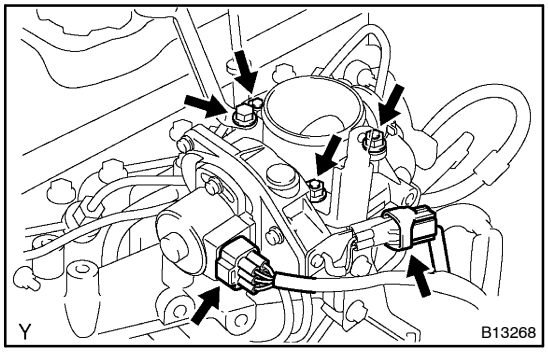

REMOVAL

REMOVE THROTTLE BODY ASSEMBLY

(a) Disconnect the check connector from the throttle body assembly.
(b) Remove the bolt and intake air connector bracket.
(c) Disconnect the 2 connectors.
(d) Remove the 3 nuts and wire harness clamp.
(e) Remove the throttle body assembly and gasket.