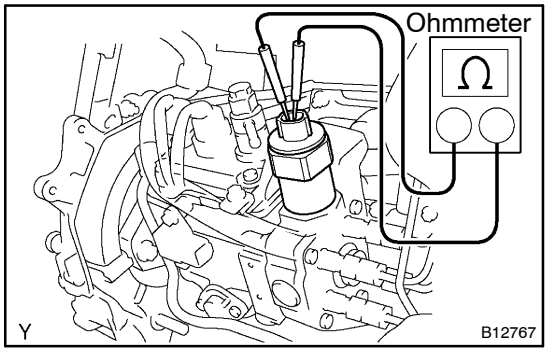


SPILL CONTROL VALVE

ED02U–03

INSPECTION

INSPECT SPILL CONTROL VALVE

(a) Disconnect spill valve connector.

(b) Using an ohmmeter, measure the resistance between the terminals.

Resistance: 1 – 2 Ω at 20˚C (68˚F)

If the resistance is not specified, replace the injection pump assembly (See page FU–11).

(c) Reconnect the spill valve connector.