
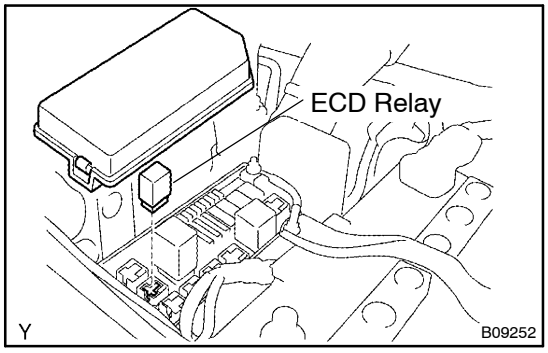


ECD MAIN RELAY

ED04L–01

INSPECTION

1. REMOVE ECD RELAY

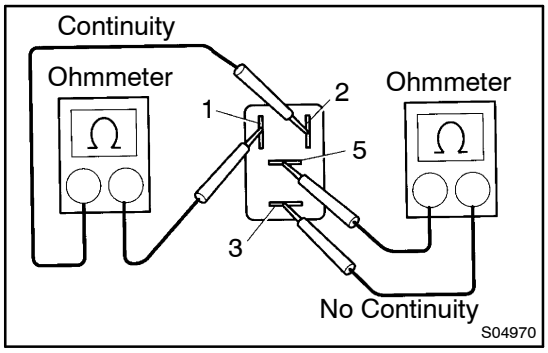

2. INSPECT ECD RELAY


(a) Inspect the ECD relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the ECD relay.

(2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the ECD relay.

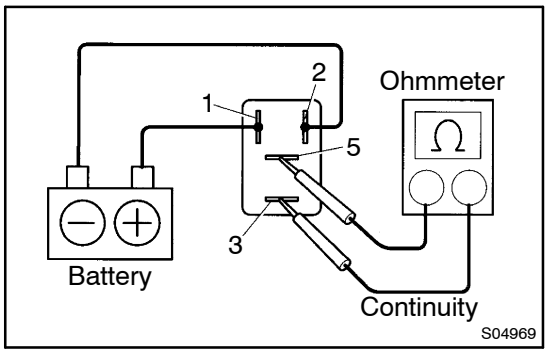


(b) Inspect the ECD relay operation.

(1) Apply battery positive voltage across terminals 1 and 2.

(2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the ECD relay.

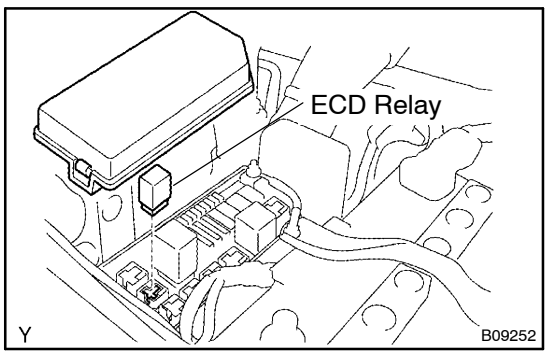

3. REINSTALL ECD RELAY