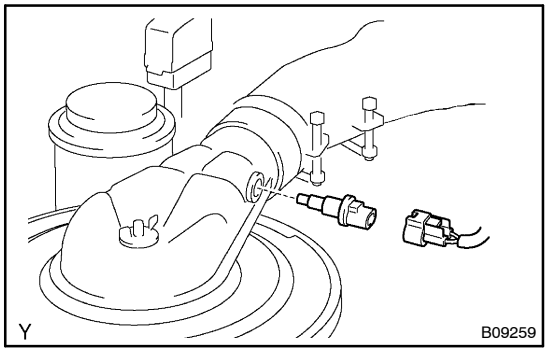


INTAKE AIR TEMPERATURE SENSOR


INSPECTION

ED031–02

1. REMOVE INTAKE AIR TEMPERATURE SENSOR

(a) Disconnect the intake air temperature sensor connector.

(b) Remove the intake air temperature sensor.

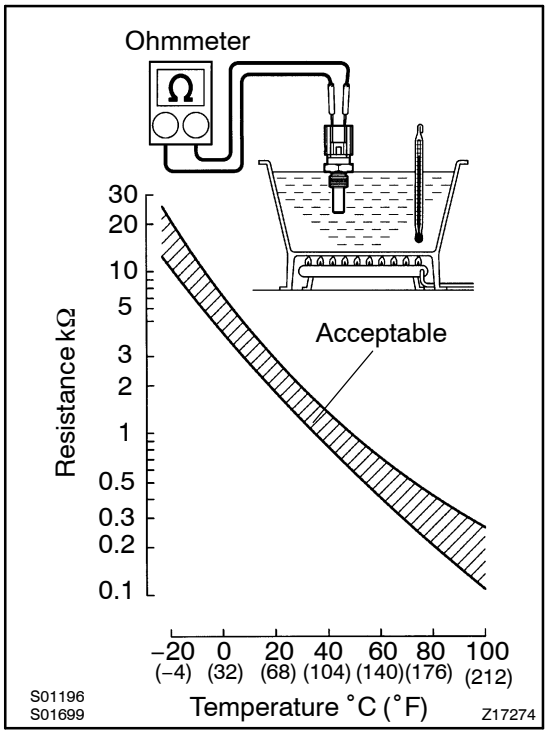

2. INSPECT INTAKE AIR TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart graph

If the resistance is not as specified, replace the intake air temperature sensor.

3. REINSTALL INTAKE AIR TEMPERATURE SENSOR

(a) Install the intake air temperature sensor.

(b) Connect the intake air temperature sensor connector.